

**Instruction
Manual**

**COBRA
SRX8**




Serpent
the racing experience

GP
1/8 4WD - Buggy

INTRODUCTION

Thank you very much for selecting this Serpent rc car and thus become a member of the ever growing worldwide Serpent racing family. Serpent started in 1980 and has been growing its product-line and fan-base ever since.

The Serpent Cobra SRX8 is a state of the art 1/8 scale 4wd buggy which will give you the true Serpent racing experience. The assembly manual will guide you through all the steps to complete the car, so you can hit the track with a good base-set-up soonest. The Serpent design department succeeded to create a superbly performing car combined with eas of assembly and maintenance. The high quality standards of all parts and hardware will make racing your Serpent car a very rewarding activity !

Through our team, website and social media we will keep you up-to-date on all developments of the Serpent cars. We hope to meet you on the track and through our various media! Enjoy the drive !

Team Serpent
Multiple World Champions

INSTRUCTIONS

Serpent's long tradition of excellence extends to the instruction manuals, and this instruction manual is no exception. The easy-to-follow layout is richly illustrated with 3D-rendered full-color images to make your building experience quick and easy. Following the instructions will result in a well-built, high-performance race-car that will soon be able to unleash its full potential at the racetrack. The kit includes bags, with bagnumbers, which refer to the same step in the manual. Open only the indicated bag(s) per step and finish that part of the assembly. Remaining parts will be needed lateron in the assembly process.

PLASTIC PARTS

The Serpent moulded parts are very durable and hard. When assembling longer screws in new composite parts, make sure to use new hex bits in your (power) tools. Pre-threading also helps to avoid screw damage.

SETUP

In certain assembly steps you need to make basic adjustments, which will give you a good initial setup for your Serpent Cobra SRX8. Fine-tuning the initial setup is an essential part of building a high-performance racecar like your Serpent Cobra SRX8.

EXPLODED VIEWS AND PARTS LIST

The exploded views and parts lists for the Serpent Cobra SRX8 are presented in the Reference Guide section in the back of this manual. The exploded views show all the parts of a particular assembly step along with the Serpent part number and hotlink to the Serpent website. Partnumbers in orange indicates that this part is an optional. Optionals part names and numbers are showed below.

CUSTOMER SERVICE

Serpent has made a strong effort to make this manual as complete and clear as possible. Additional info may be published in our website: www.serpent.com or you may ask your dealer or the Serpent distributor for advice, or email Serpent direct: info@serpent.com. The Serpent Facebook, Twitter and Youtube pages give additional means of support and communications.

SAFETY

Read and take note of the 'Read this First section' before proceeding to assemble the car-kit. This car-kit is intended for persons aged 16 or older.

READ THIS FIRST!

- This is a highly technical hobby product, intended to be used in a safe racing environment. This car is capable of speeds in excess of 80 km/h or 50mph. Please follow these guidelines when building and operating this model.
- Parental guidance is required when the builder/user of this car is under 16.
- Follow the building instructions. If in doubt, contact your dealer or importer.
- Be sure to use the proper tools when assembling the car. Always exercise caution when using electric tools, knives and other sharp objects.
- Be careful when using liquids like lubrication oil, fuel or glue. Do not swallow.
- Follow the manufacturer's instruction in case you experience irritation after using the product.
- Be careful when operating the car. Stay away from any rotating parts such as wheels, gears and transmission. Stay away from motor, engine and exhaust pipe system or speedo during and immediately after use, as these parts may be very hot. We advise to use protective hand gloves.
- Only operate this car in a safe environment, like a special racing track or a closed parking lot. Avoid using this car on public roads, crowded places or near infants.
- Before operating this car, always check the mechanical status of the car. Also check that the transmitter and receiver frequencies correspond and are not used by any other racer at the same time. Check that the batteries of the transmitter and receiver- are fully charged.
- After use, always check all the mechanics of the car. We advise to clean the car immediately after use, and inspect the parts for wear or fractures. Replace when necessary. Do not use water, methanol, thinner or other solvents to clean the car.
- Empty the fuel tank (depending on model) if needed and disconnect the receiver battery.
- Store the car in a dry and heated place to avoid corrosion of metal parts.
- Avoid using this car in wet conditions as the water will cause corrosion on the metal parts and bearings and these parts will cease to function properly. If driven in the wet, ensure that all the electric equipment is waterproofed and after use, that all moving parts are dried immediately.

CONTENTS

• CENTER DIFF ASSEMBLY	4
• FR/RR DIFF ASSEMBLY	6
• CENTRAL ASSEMBLY	8
• REAR ASSEMBLY	11
• FRONT ASSEMBLY	18
• STEERING ASSEMBLY	24
• RADIO ASSEMBLY	28
• SHOCK ASSEMBLY	32
• FINAL ASSEMBLY	35
• CLUTCH ASSEMBLY	36
• EXPLODED VIEWS	42
• TEAM SERPENT NETWORK	53



LINES DESCRIPTION

Each step contains a variety of numbers, lines, and symbols. The numbers represent the order in which the parts should be assembled. The lines are described below.



Step number; the order in which you should assemble the indicated parts



Length after assembly



Assembly path of one item into another



Group of items (within lines) should be assembled first



Direction the item should be moved



Glue one item to another



Press/Insert one item into another



Connect one item to another



Gap between two items

ICONS DESCRIPTION

Each step contains a variety of symbols described below.



Carefull, read and check very well.



Apply a small amount of cyano glue. Use wear protection for eyes and hands.



Detail view to explain assembly or order of parts better.



Default set-up: This symbol indicates the default setup.



Grease: apply a small amount of grease to the parts shown.



Left and right parts should be assembled in the same way.



Thread lock: apply a small amount on the parts shown. Before to apply the threadlock, make sure to degrease the parts very well, as otherwise the threadlock will not work.



Silicone oil: use the indicated silicone oil for the shocks and differentials.



Parts or items not included in the kit.



Optional part, not standard in the kit.


CENTER DIFF ASSEMBLY




STEP 1

CENTER DIFF BAG


1.1

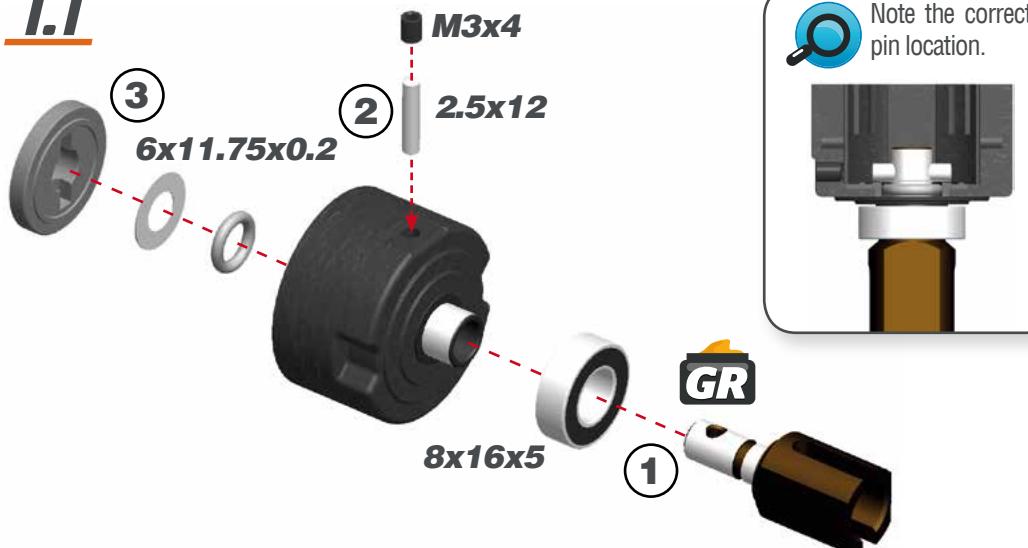

1.2

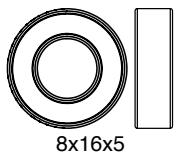

2.5x12

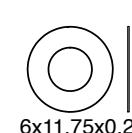

STEP 2

2.1



VOLUME COMPENSATORS


When the differential gets hotter, the foam inserts will absorb the pressure of the expansion of the oil.

1- The supplied foam tube must be cut to size as indicated here below.

2- Penetrate them fully with same differential oil .

3- Insert them in the compensator holes.

14.7 - 14.9 mm

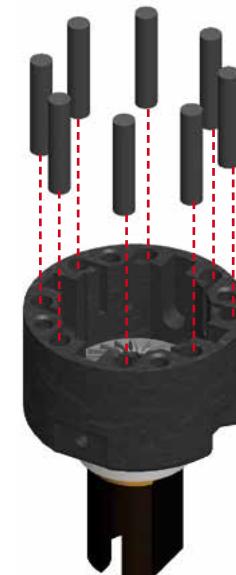


2.2

Add just enough oil to cover the large gear before assembling the small satellite gears and cross pins.

Use the silicone oil supplied in the kit. For the correct cst value please check the default setupsheet.




STEP 3

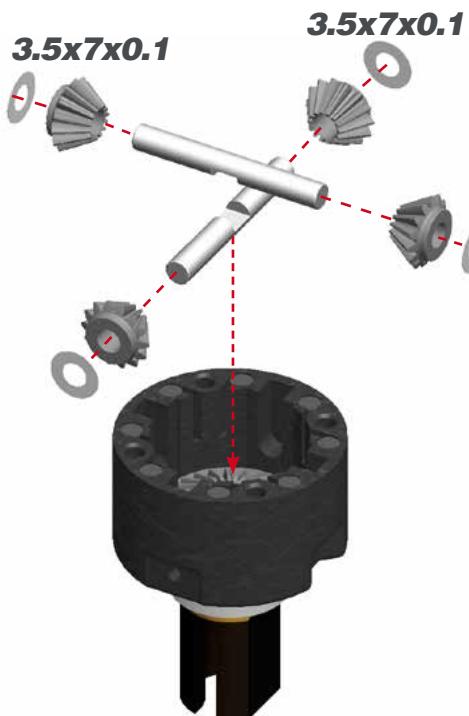

STEP 4



Fill the differential with silicone oil 1 mm above the crosspin, do NOT overfill. Use the silicone oil supplied in the kit. For the correct cst value please check the default setupsheet.

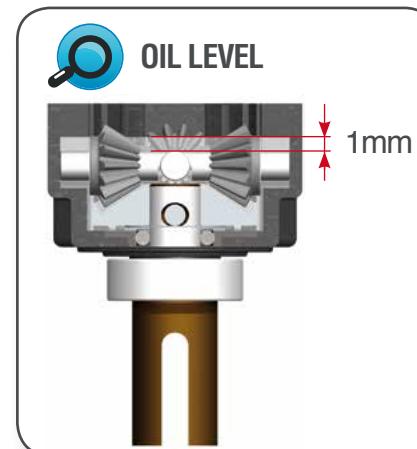

AMOUNT OF OIL IN THE DIFFS

Use a digital scale to measure the exact amount of oil in the diff.


Differential weight with volume compensators = 40.8 grams

Differential weight without volume compensators = 41.0 grams



STEP 5


M3x14

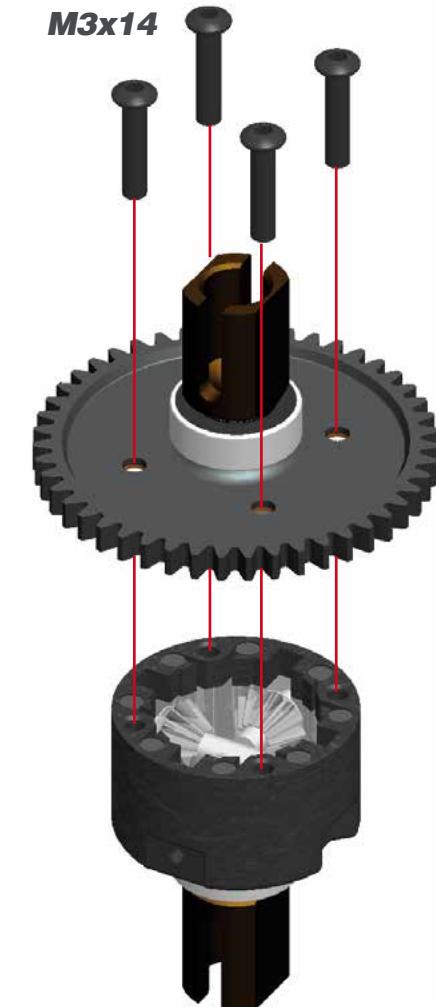




STEP 6

FR/RR DIFF BAG

6.1

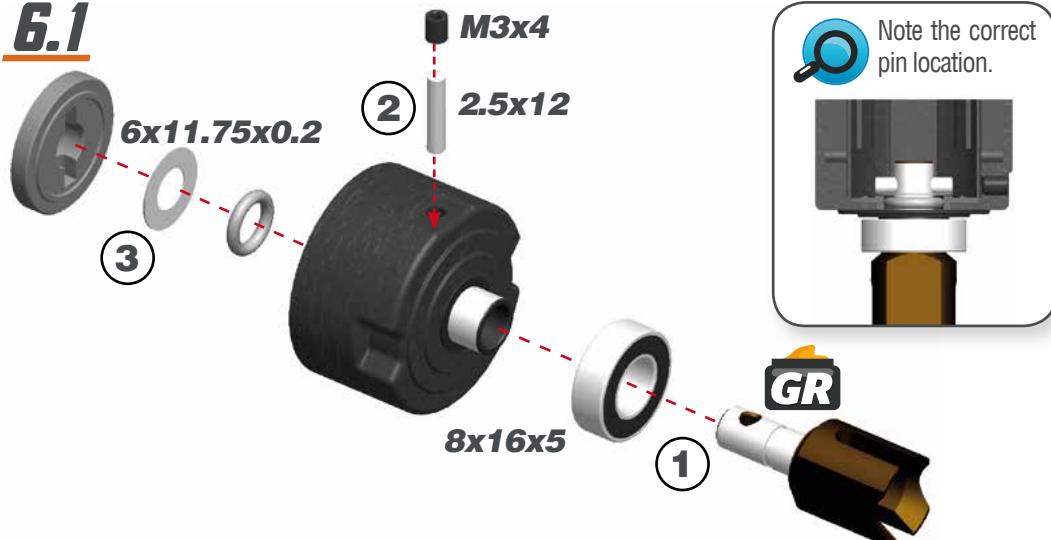

6.2

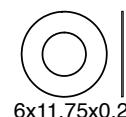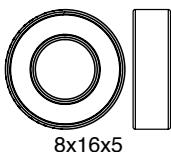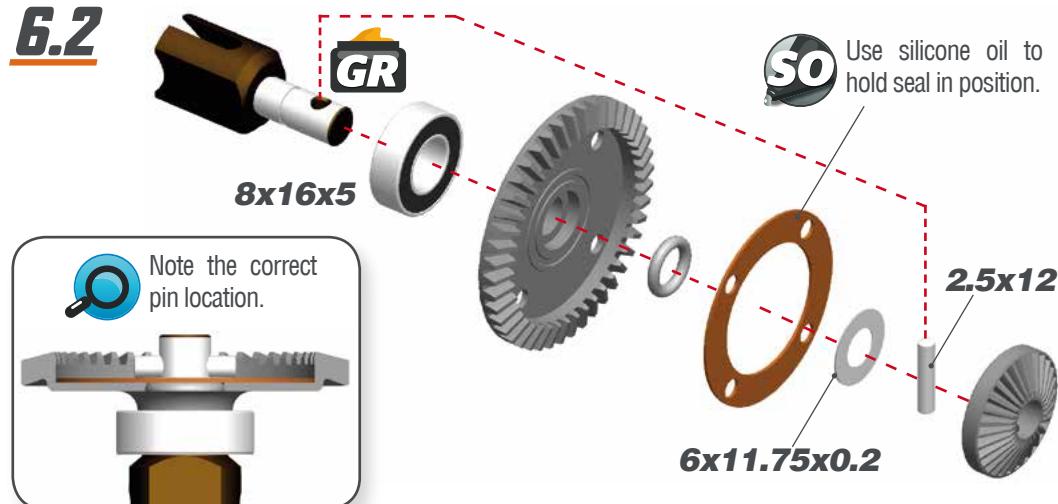

STEP 7

7.1



VOLUME COMPENSATORS


When the differential gets hotter, the foam inserts will absorb the pressure of the expansion of the oil.

1- The supplied foam tube must be cut to size as indicated here below.

2- Penetrate them fully with same differential oil .

3- Insert them in the compensator holes.

14.7 - 14.9 mm

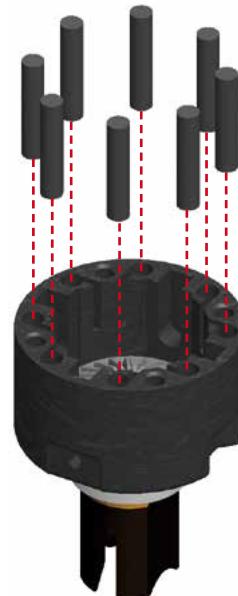


7.2

Add just enough oil to cover the large gear before assembling the small satellite gears and cross pins.

Use the silicone oil supplied in the kit. For the correct cst value please check the default setupsheet.



STEP 8

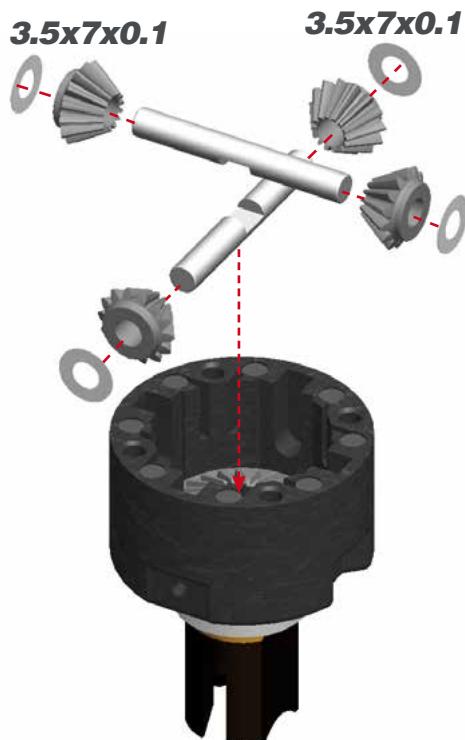


3.5x7x0.1

STEP 9



Fill the differential with silicone oil 1 mm above the crosspin, do NOT overfill. Use the silicone oil supplied in the kit. For the correct cst value please check the default setupsheet.

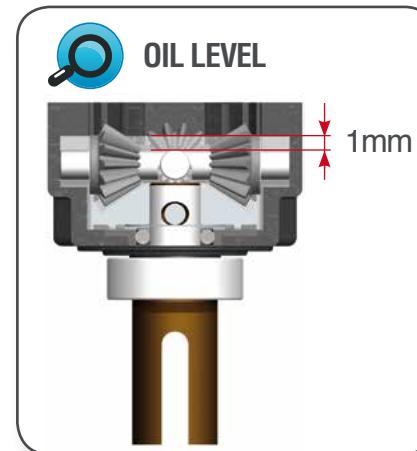

AMOUNT OF OIL IN THE DIFFS


Use a digital scale to measure the exact amount of oil in the diff.

Differential weight with volume compensators = 40.15 grams

Differential weight without volume compensators = 40.35 grams





STEP 10

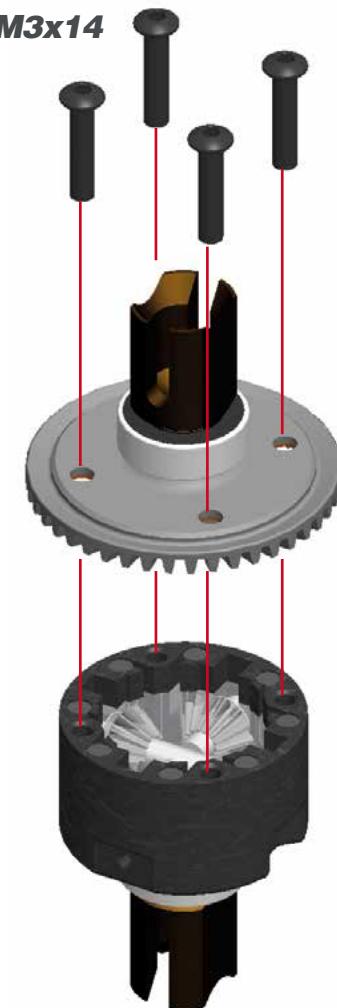M3x14

M3x14

STEP 11

BRC 1

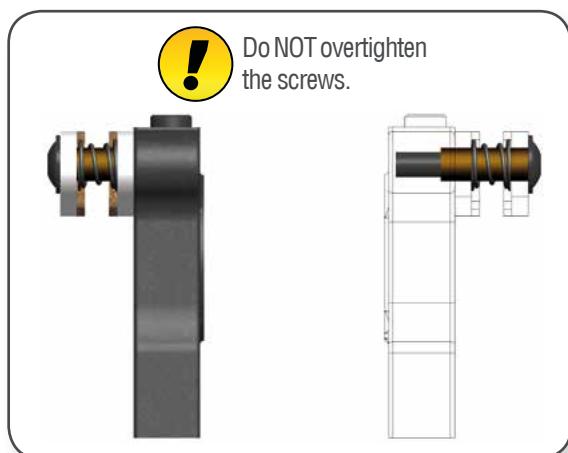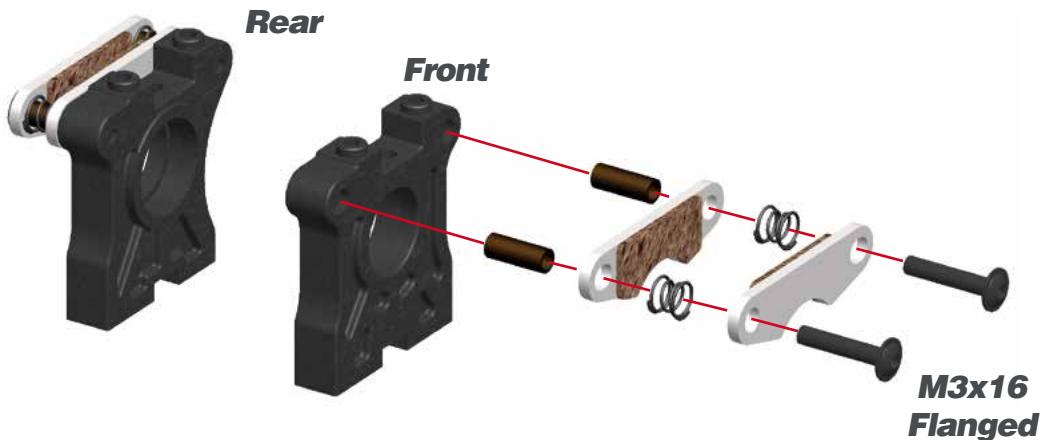



M3x16 Flanged

STEP 12


12.1



Diff mounts are NOT symmetrical.
Please check below picture to ensure front and rear bracket assembly are assembled properly.

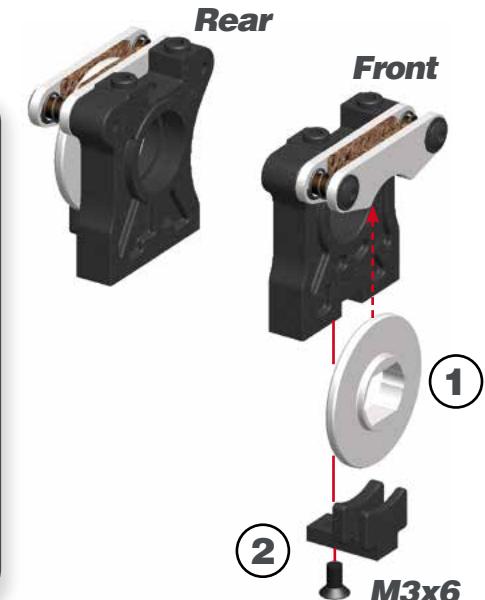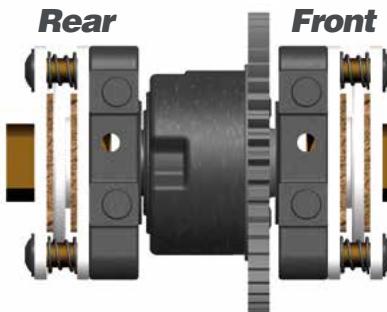





12.2

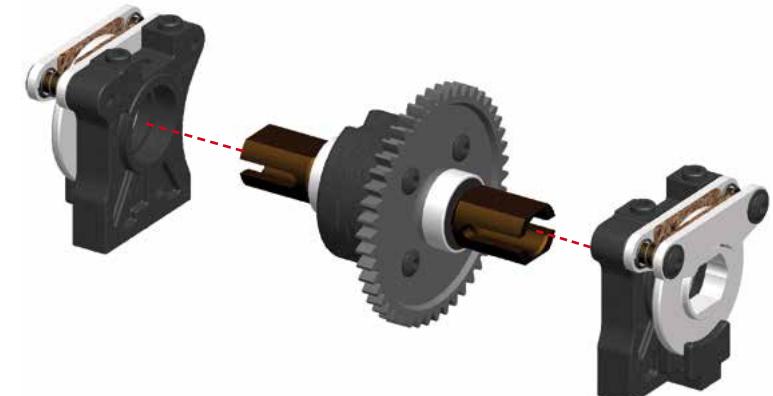


M3x6

STEP 13


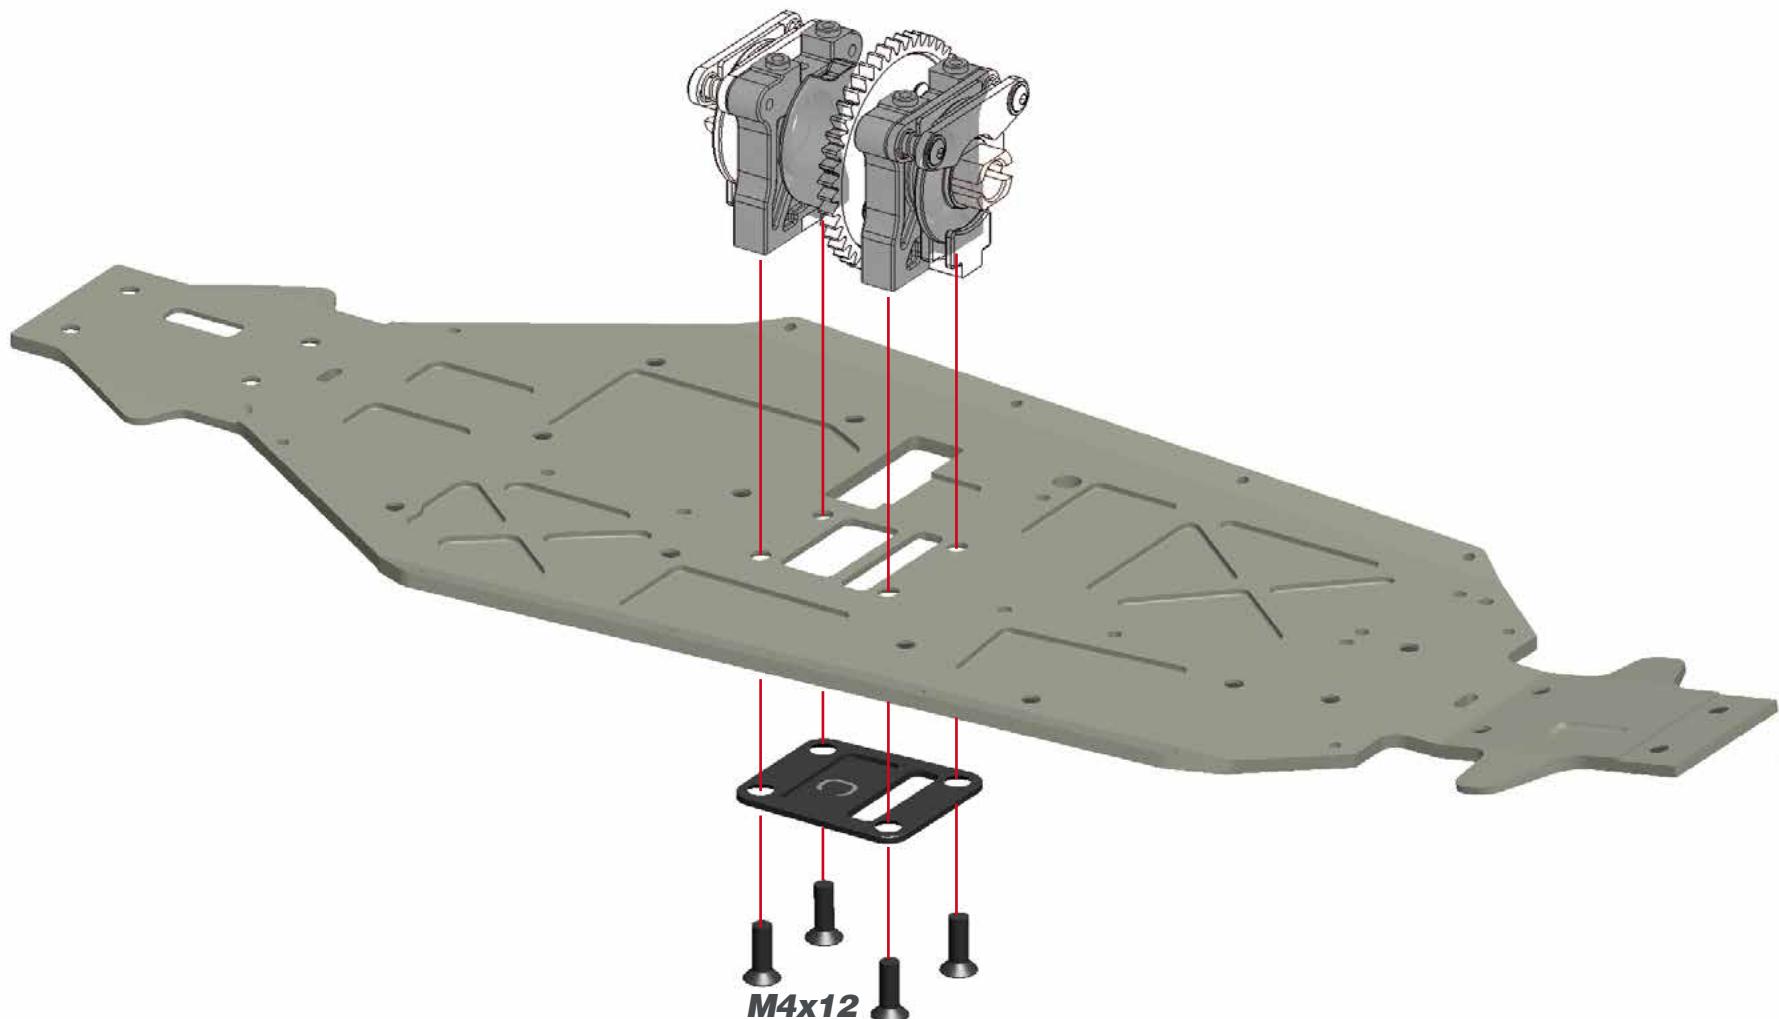


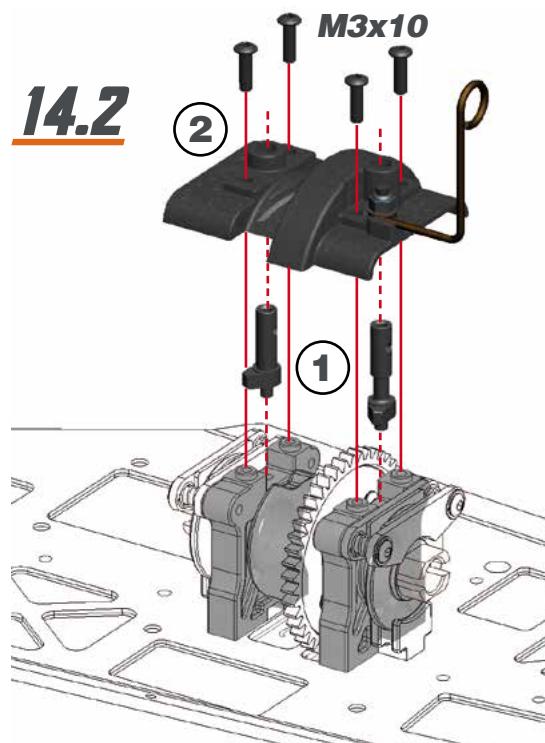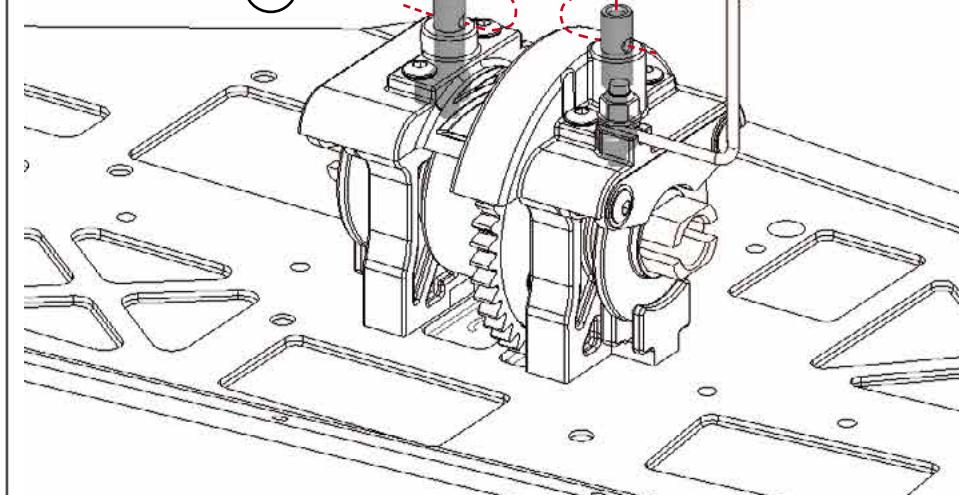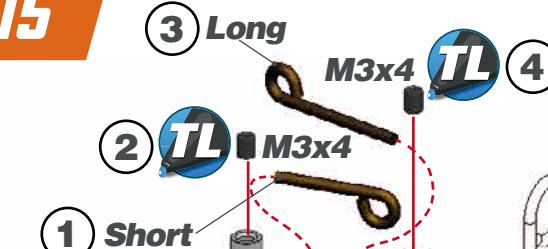STEP 14**14.1****14.2****STEP 15****BRAKE CAMS**

The long cam is assembled in the front bracket, the short one in the rear bracket.

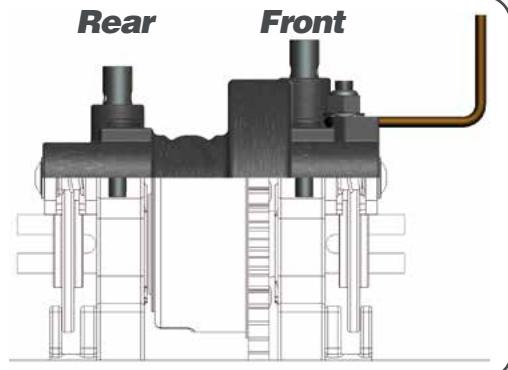Rear**Front**

Note the correct brake wires position.
Rear **Front**

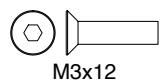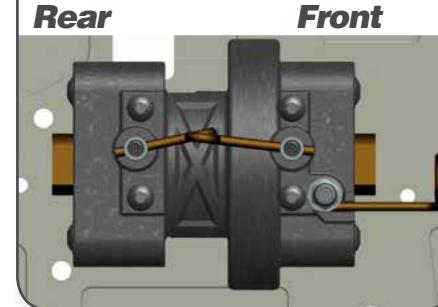**M3x12****3.2x7x0.5****Nylock Nut M3****M3x10****M3x4**


REAR ASSEMBLY

COBRA
SRX8



STEP 16 BAG 2






16.1

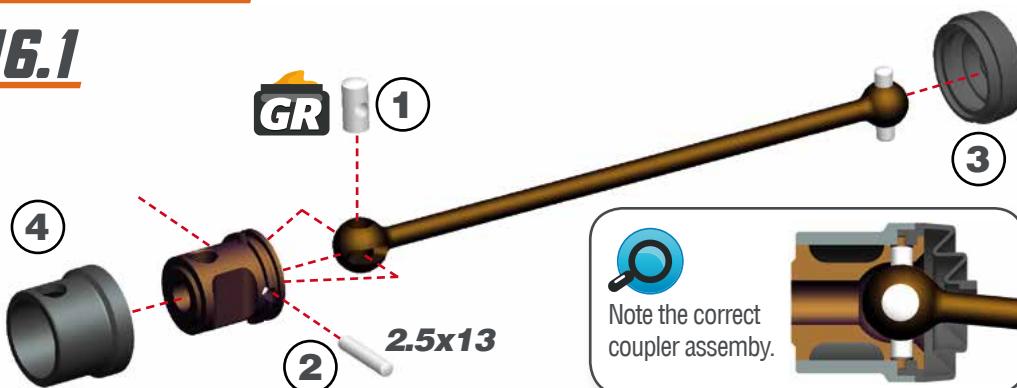



16.2



! After building the differential with new gears, new differential case and bearings, the diff may feel a little tight. The connected parts need at least an hour run-time to create a perfect match. Attention: When you assemble the diff with too much initial play, the gears will not run-in properly and may wear quickly. After 1 or 2 hours of running the car, re-check the gear-mesh between the ring gear and the pinion. All parts should have run-in properly now. You may add or remove 8x11x0.1 shims as needed.

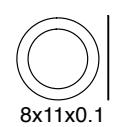
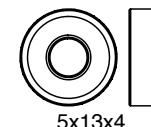
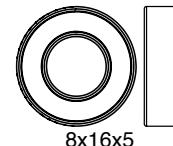
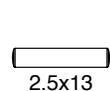
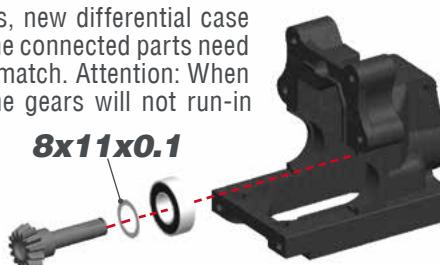



STEP 17

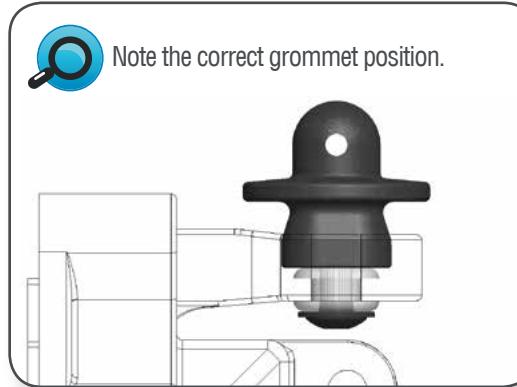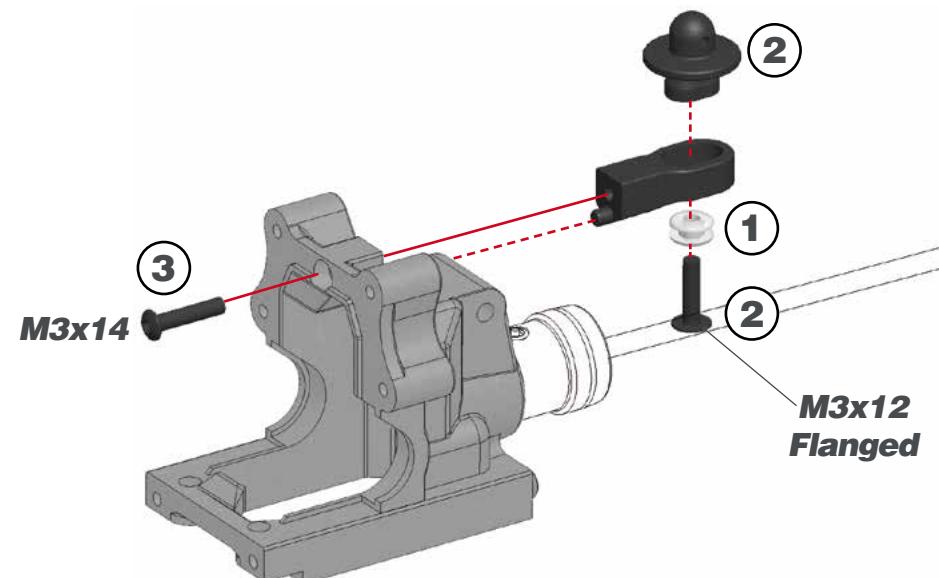





STEP 18**18.1**

! After 1 or 2 hours of running the car, re-check the gear-mesh between the ring gear and the pinion. All parts should have run-in properly. You may add or remove 13x16x0.1 shims as needed.

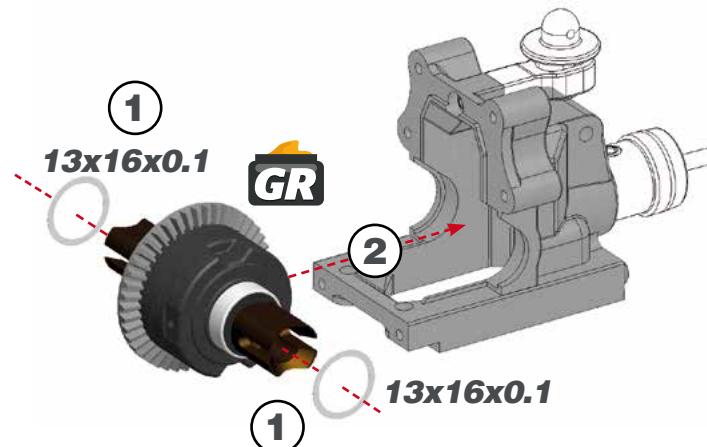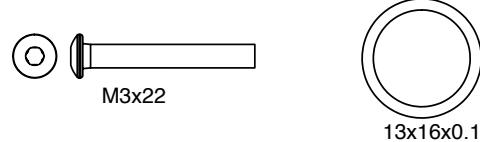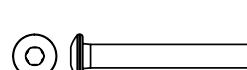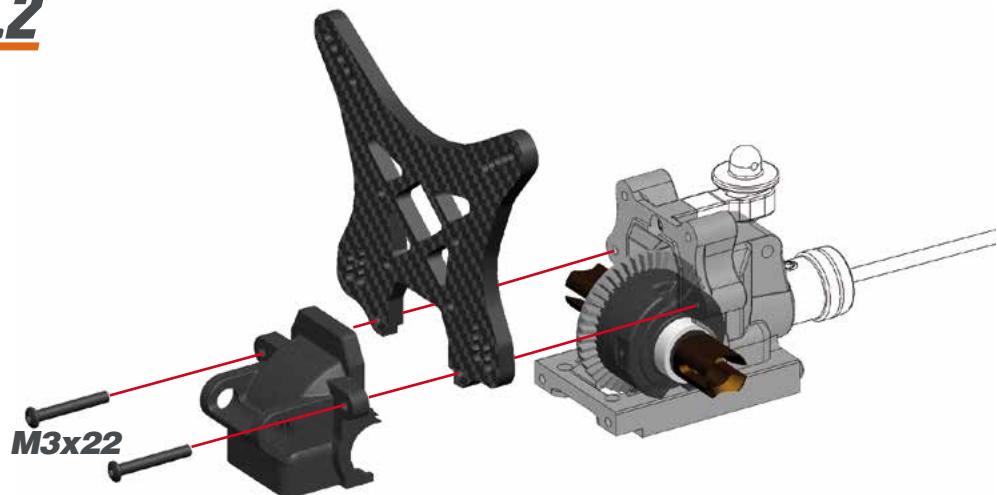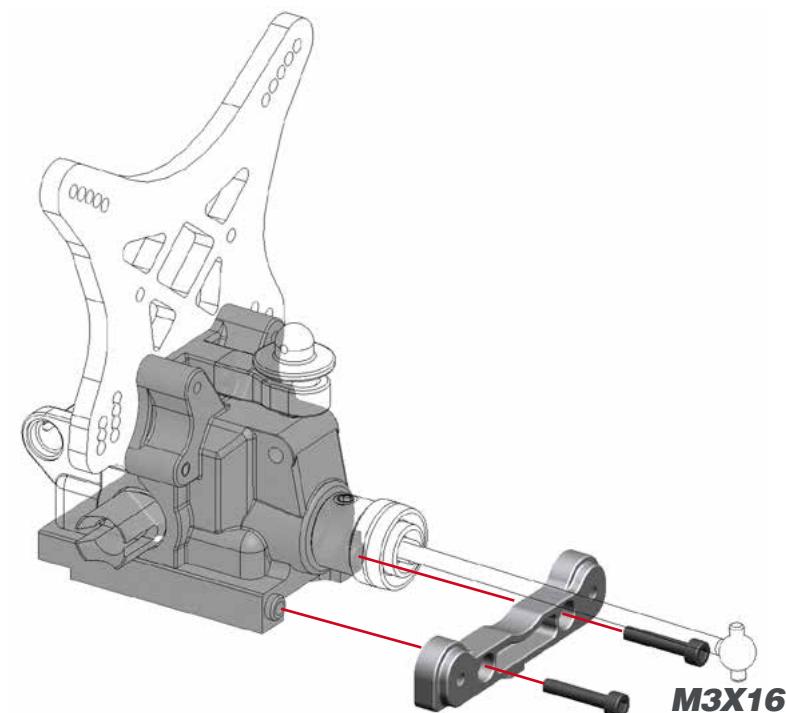
**18.2****STEP 19**

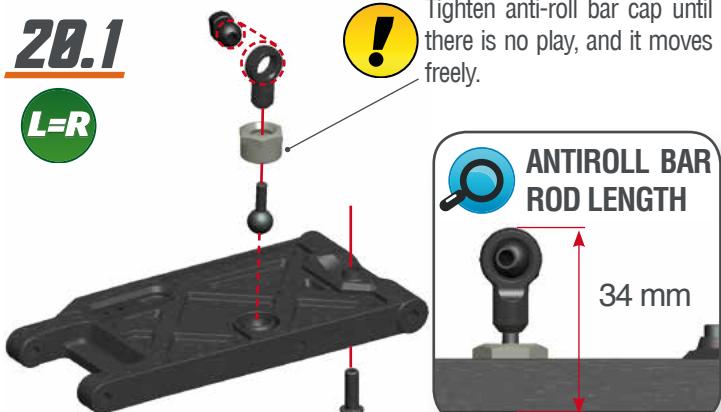STEP 20 **BAG 3****20.1****L=R**




Tighten anti-roll bar cap until there is no play, and it moves freely.

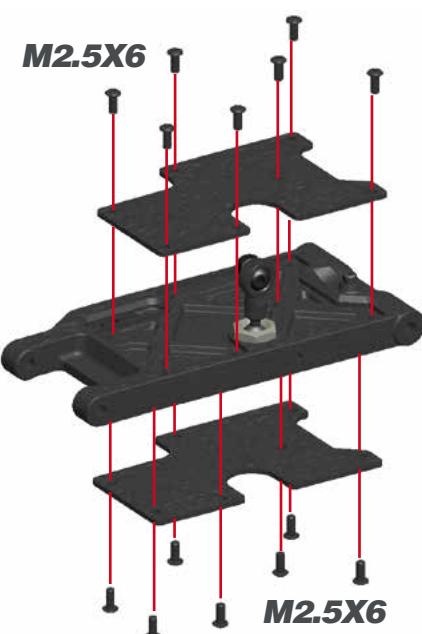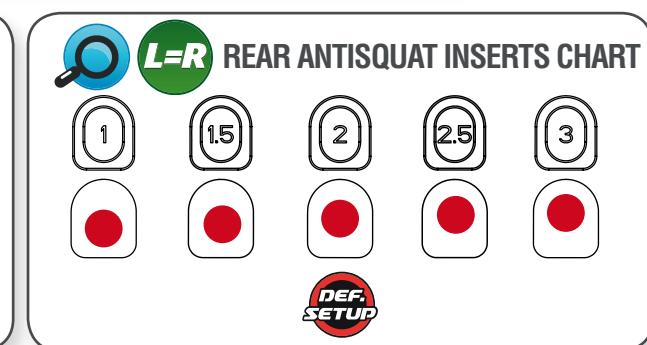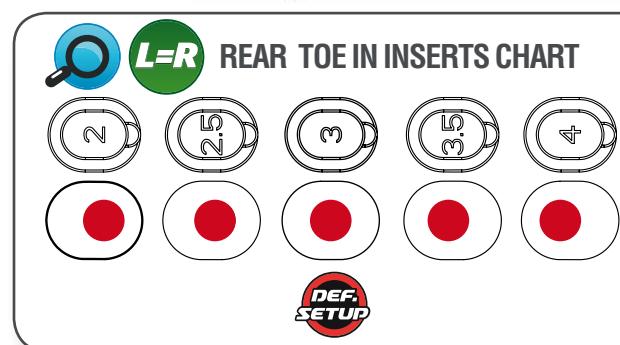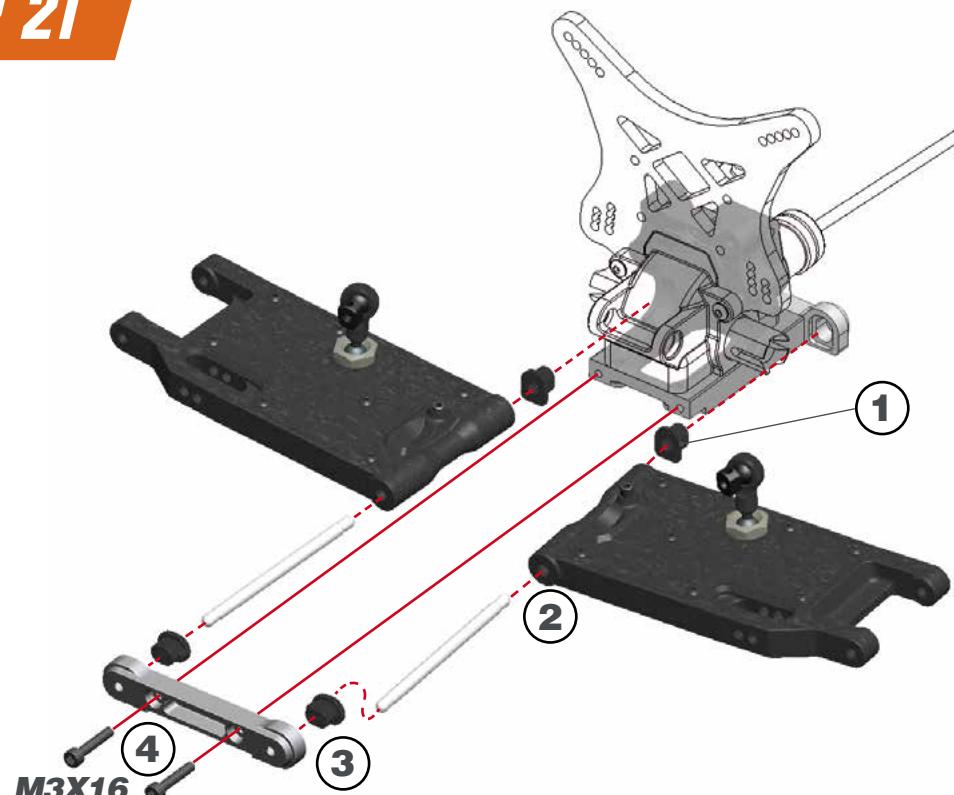
20.2**STEP 21**

M2.5x6







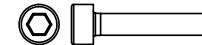


M3x16

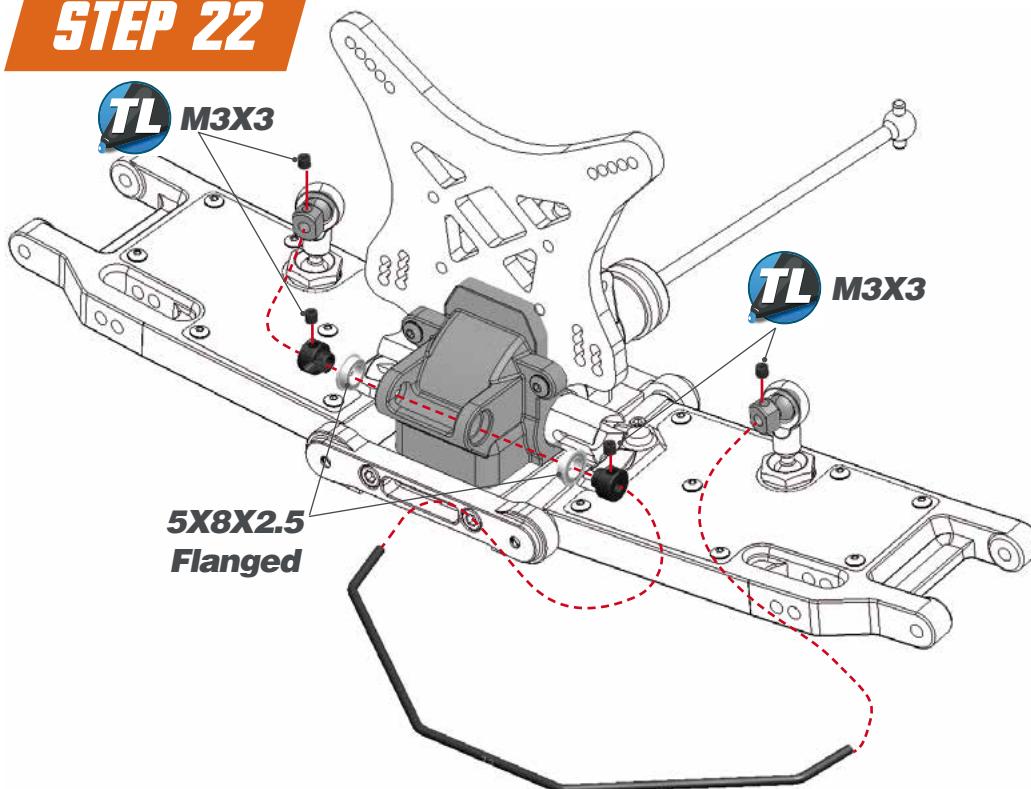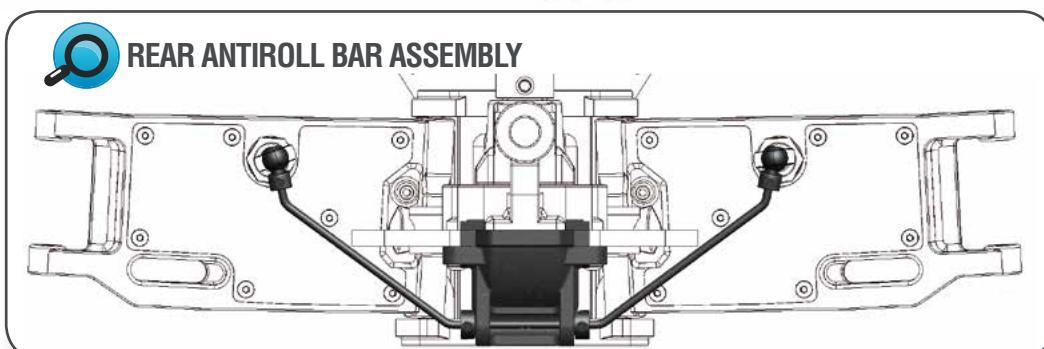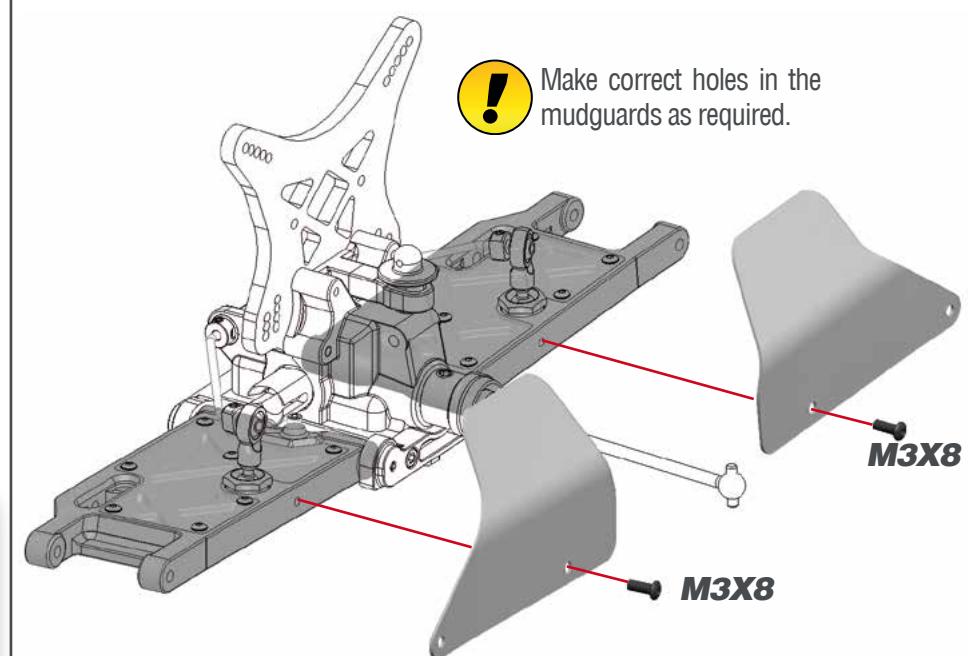STEP 22**STEP 23**

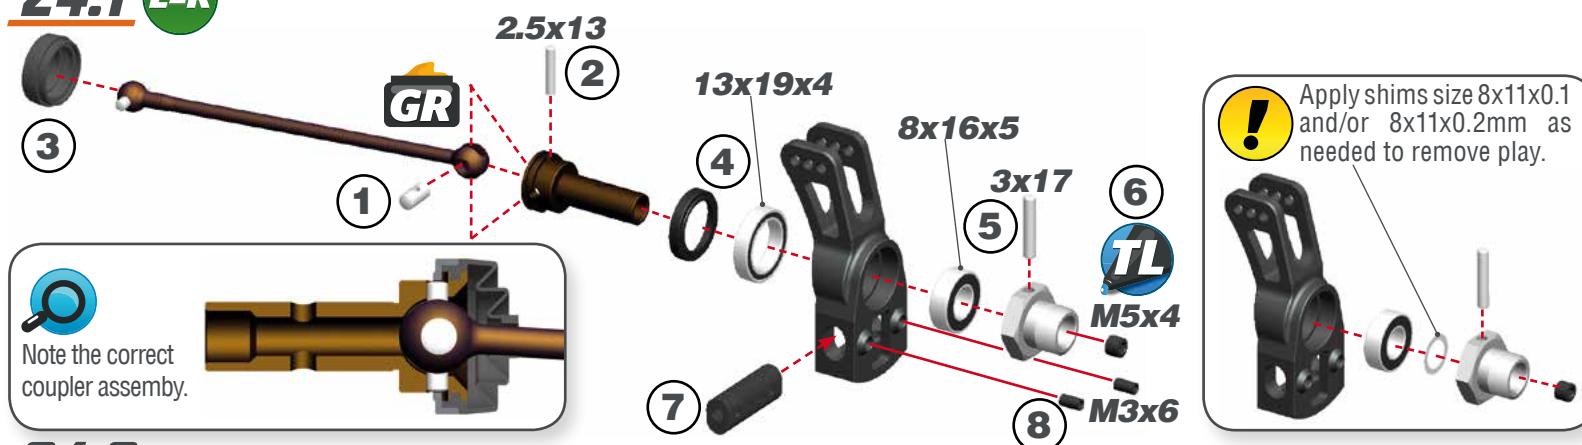STEP 24 **BAG 4****24.1 L=R****REAR UPRIGHT ROLL CENTER INSERTS CHART**

LOW		
MID LOW		
MID HIGH		
HIGH		

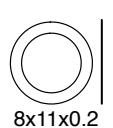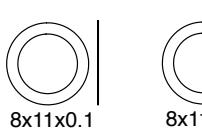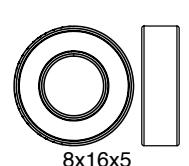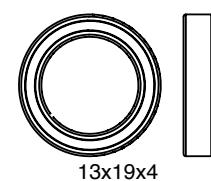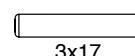
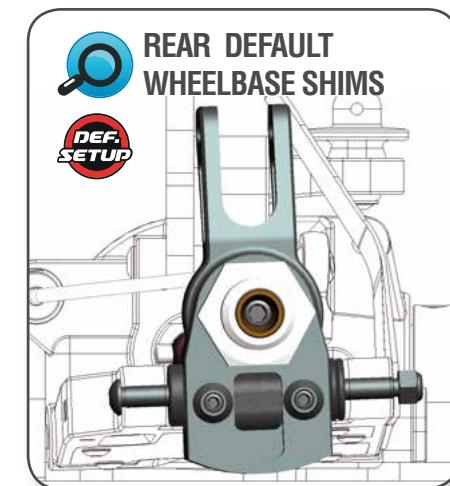
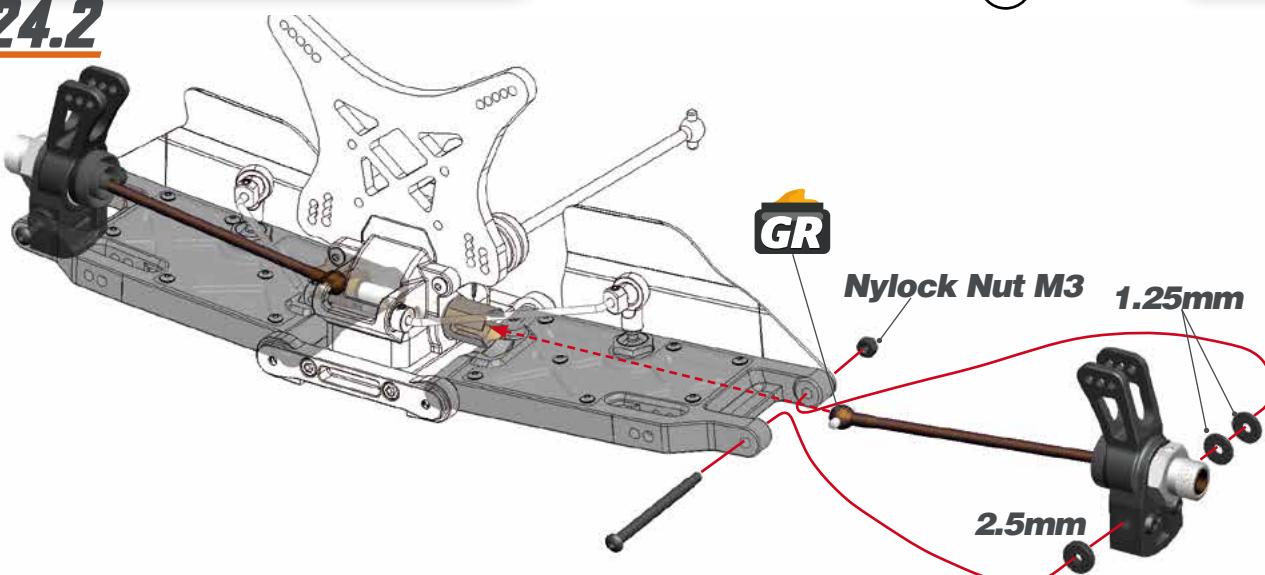
24.2

STEP 25 BRG 5


25.1



25.2

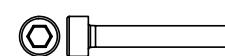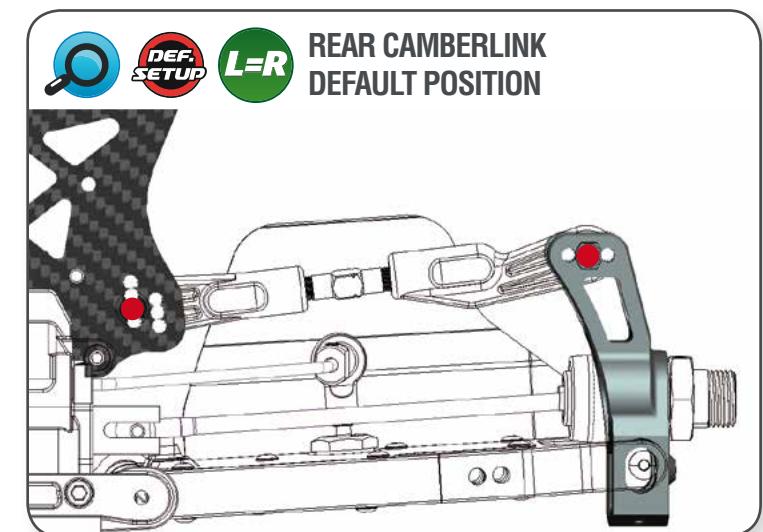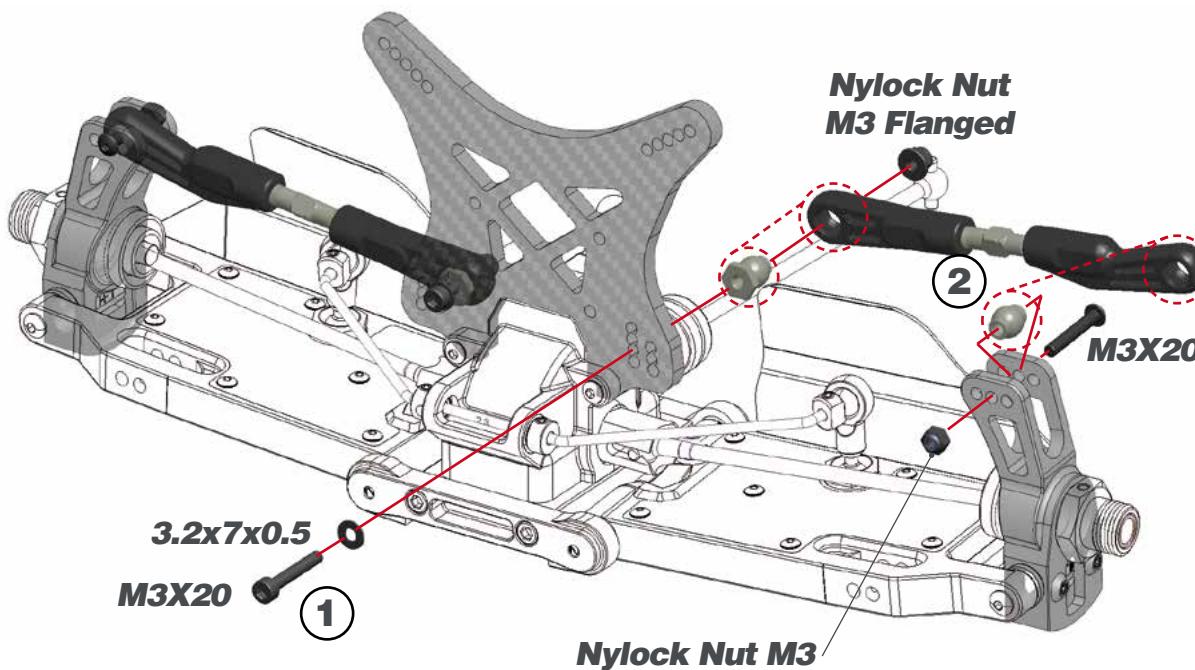


M3x20

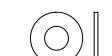

3.5x7x0.5






Nylock Nut M3
Flanged

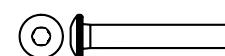

M3x20




Nylock Nut M3

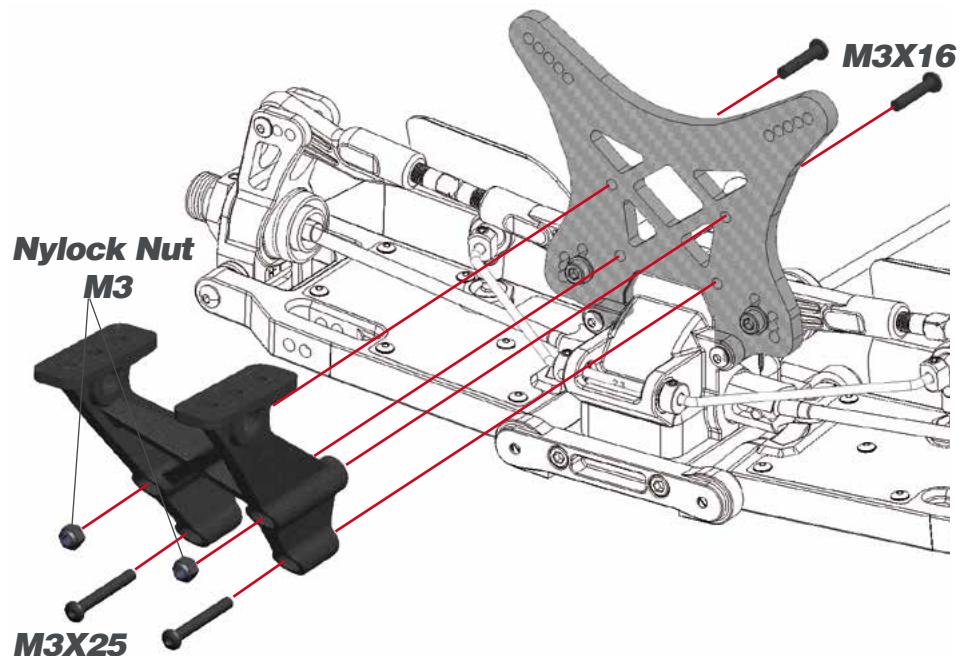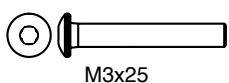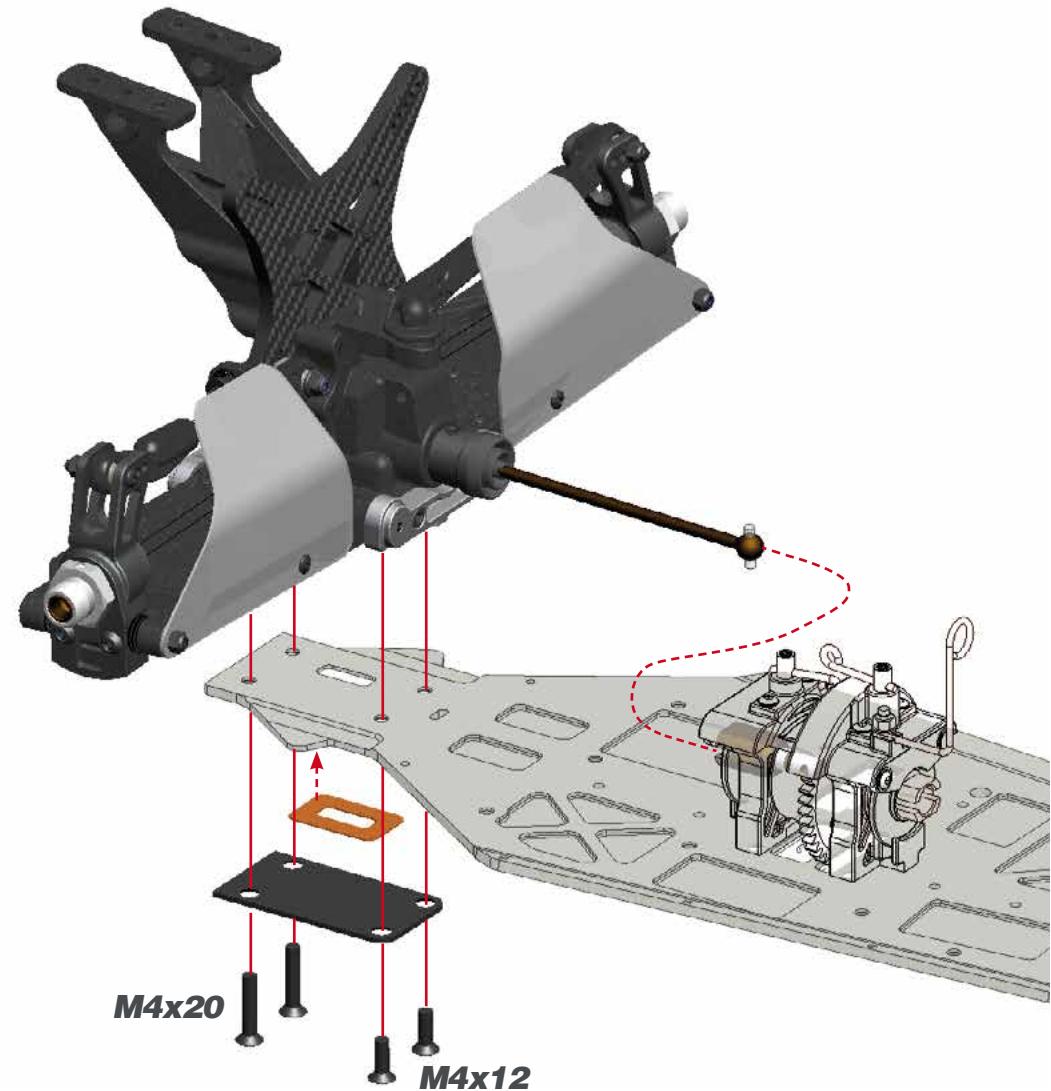STEP 26**STEP 27**

M3x25



Nylock Nut M3

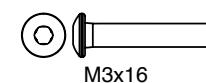

M3x16



M4x20




M4x12

FRONT ASSEMBLY

COBRA
SRX8 

STEP 28 / BAG 6





28.1

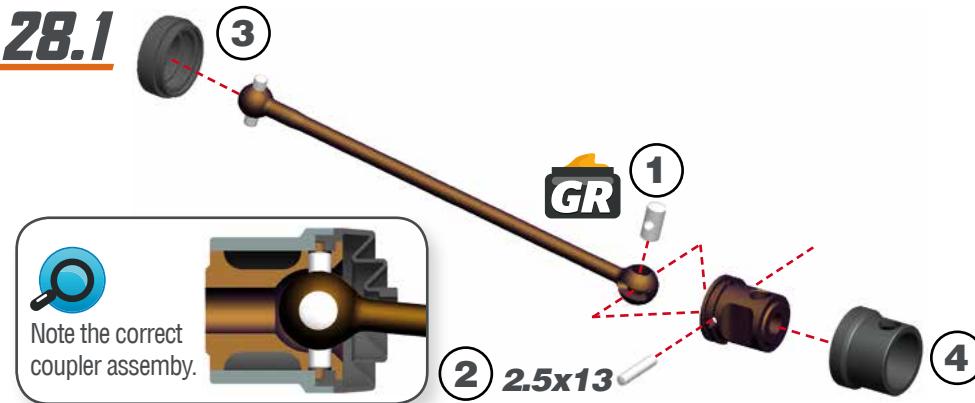

28.2




After building the differential with new gears, new differential case and bearings, the diff may feel a little tight. The connected parts need at least an hour run-time to create a perfect match. Attention: When you assemble the diff with too much initial play, the gears will not run-in properly and may wear quickly. After 1 or 2 hours of running the car, re-check the gear-mesh between the ring gear and the pinion. All parts should have run-in properly now. You may add or remove 8x11x0.1 shims as needed.

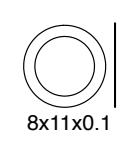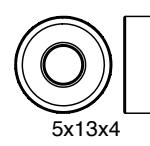
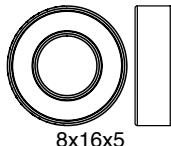
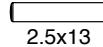


STEP 29


29.1

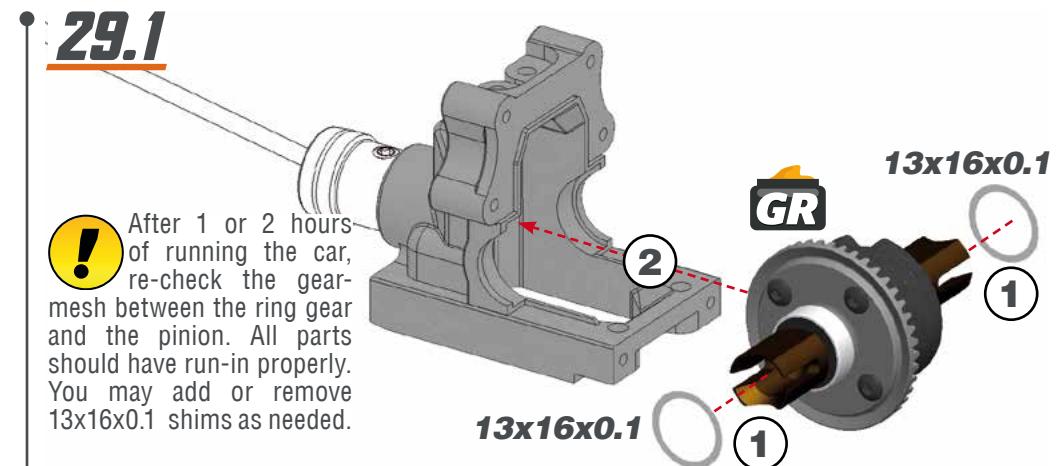

29.2

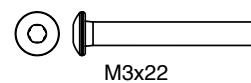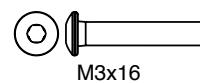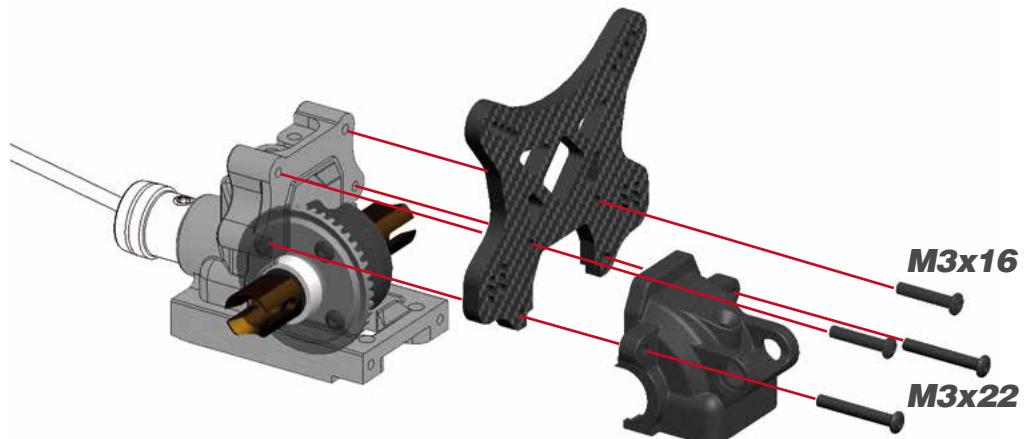

STEP 30

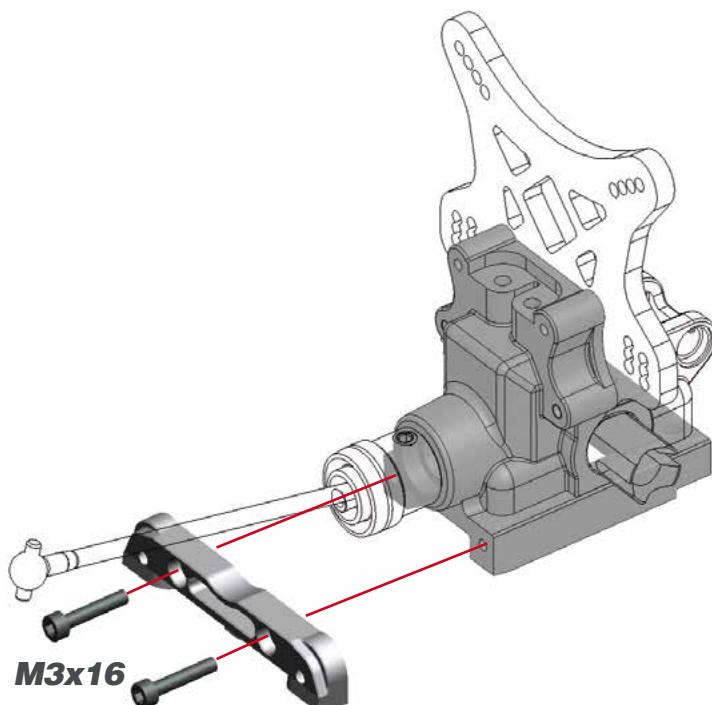

STEP 31 BAG 7

31.1

L=R











Tighten anti-roll bar cap until there is no play, and it moves freely.











31.2

L=R

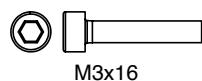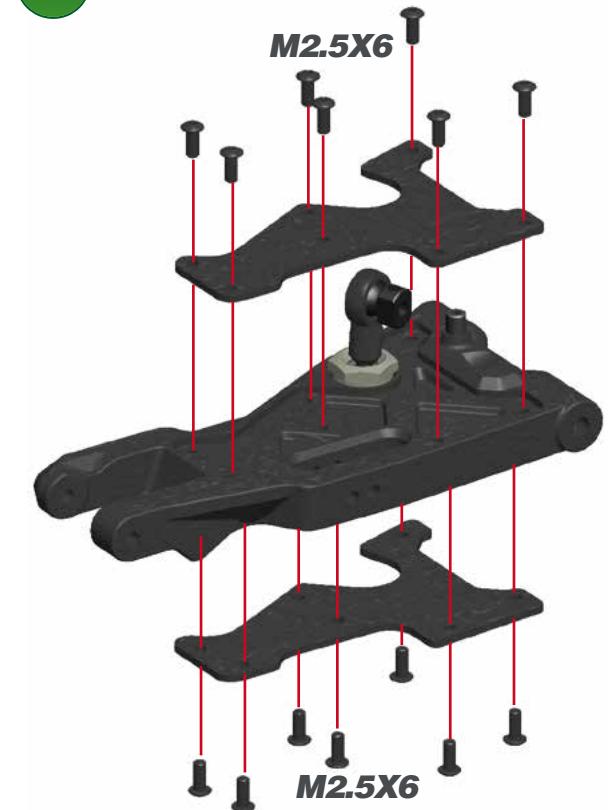

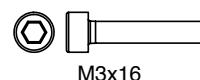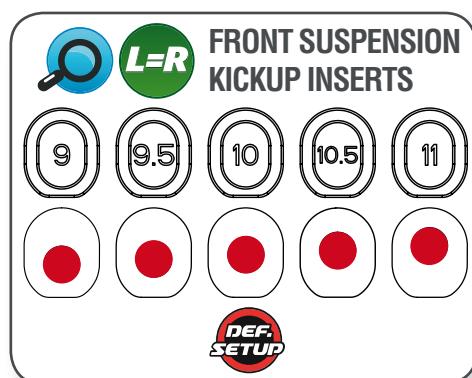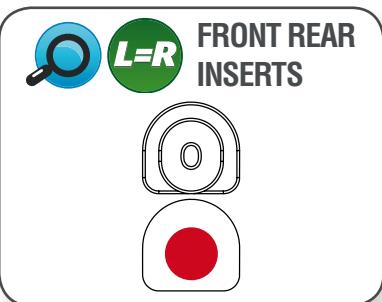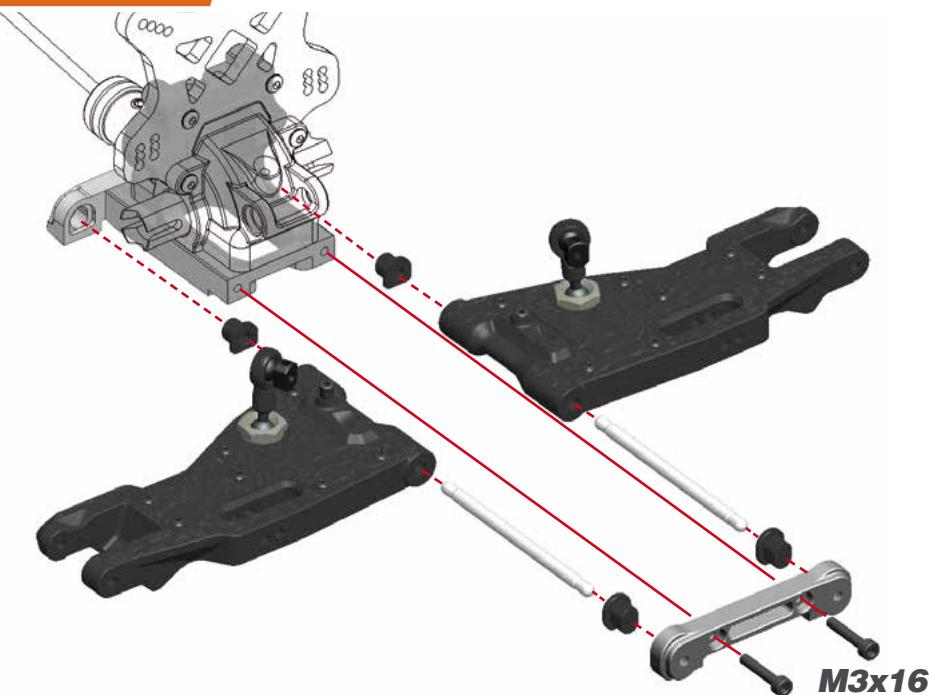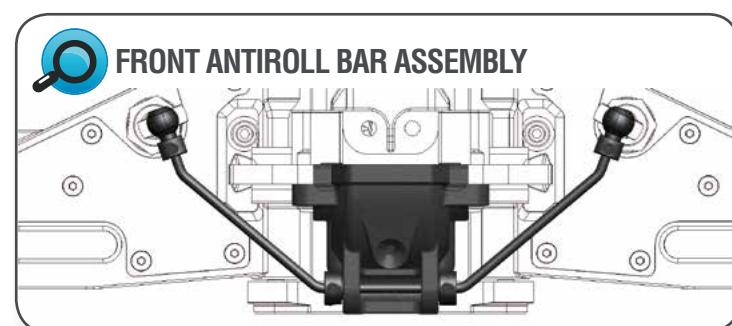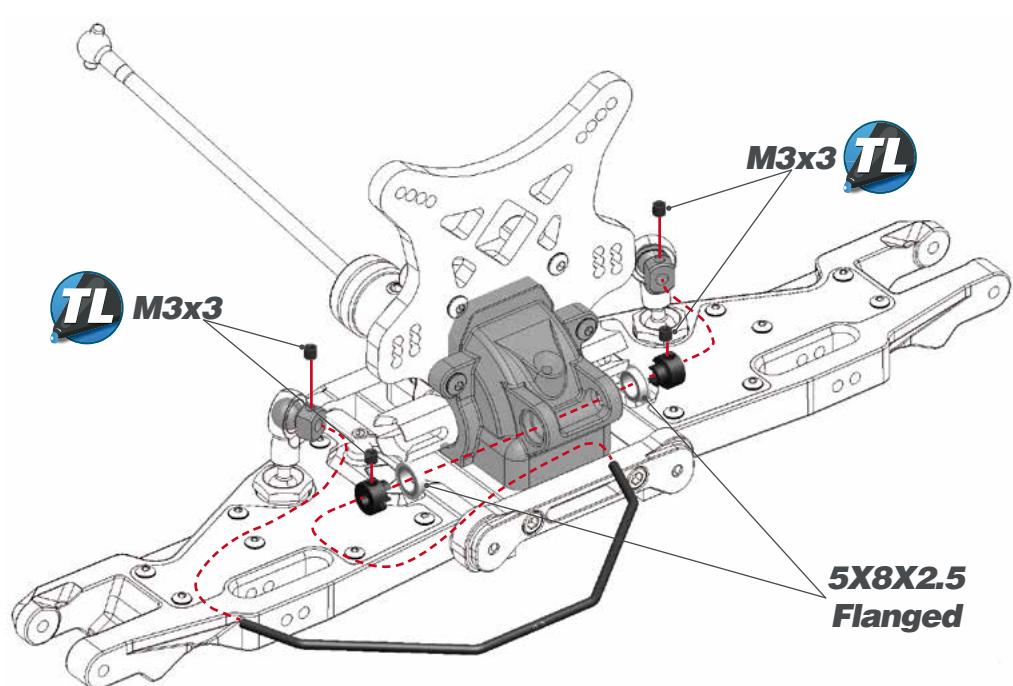STEP 32**STEP 33**

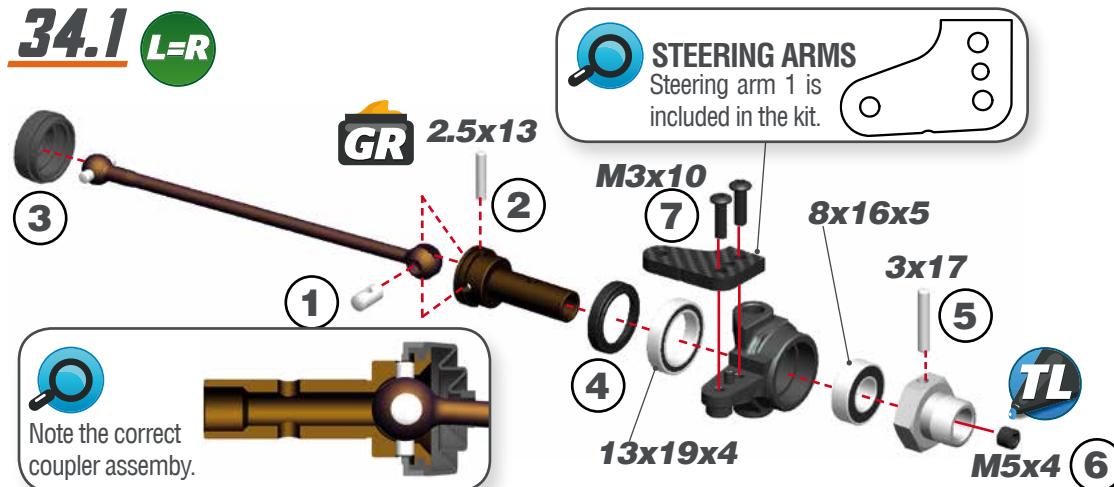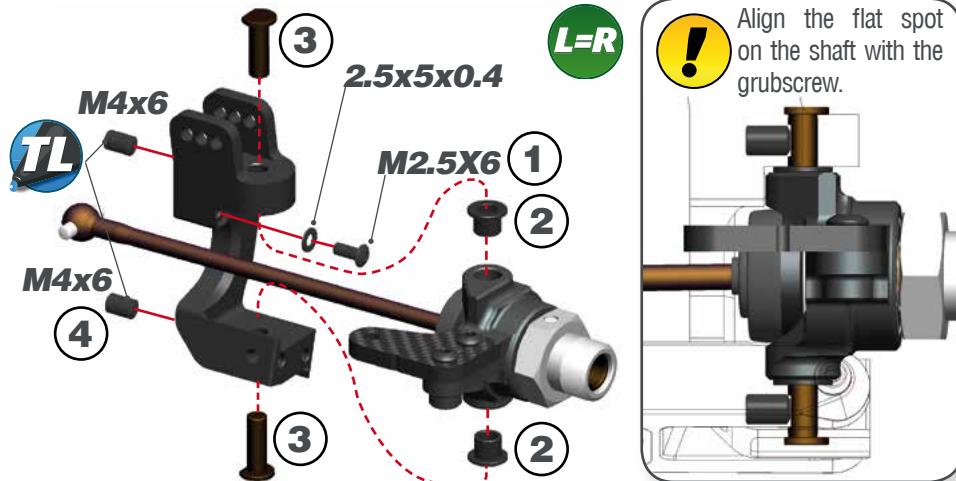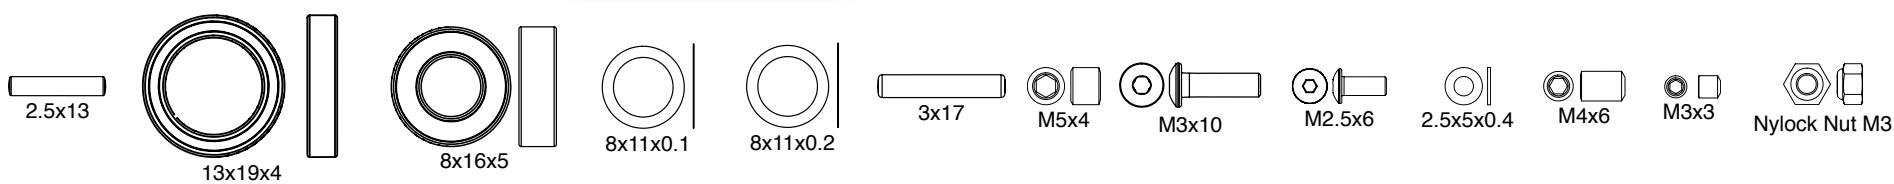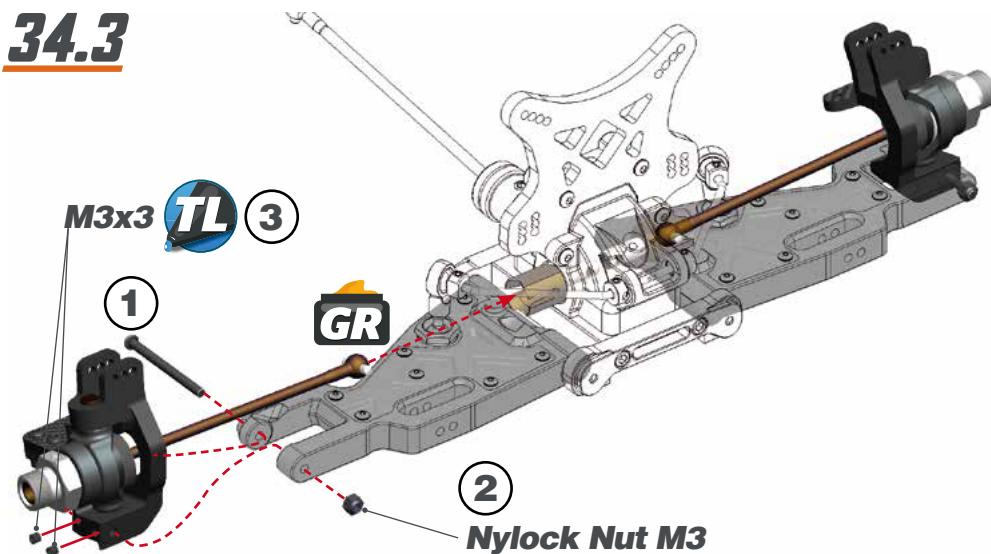
STEP 34 **BAG 8****34.1 L=R****34.2****34.3**

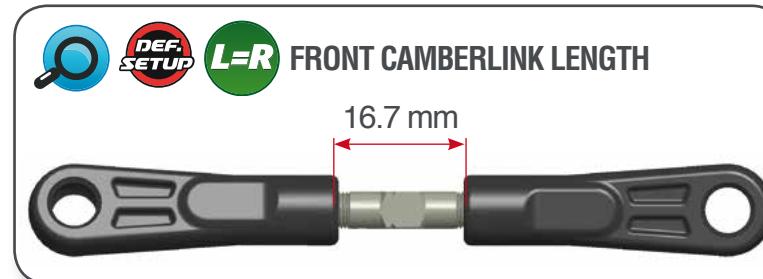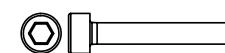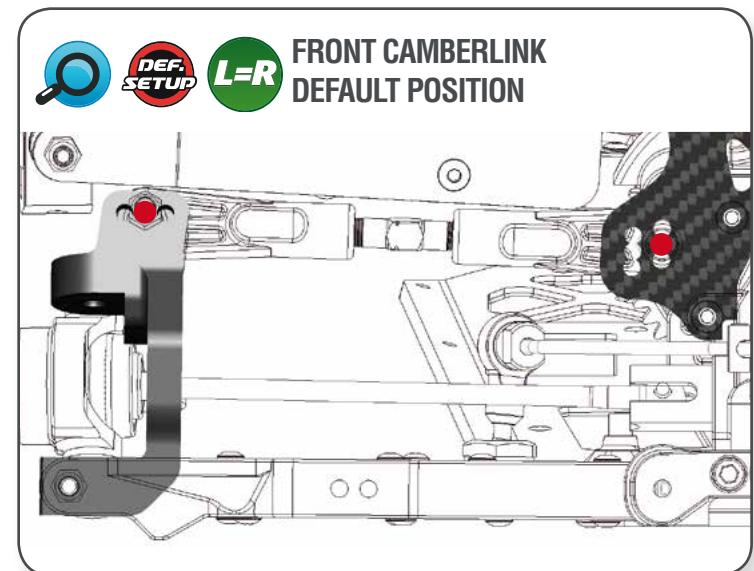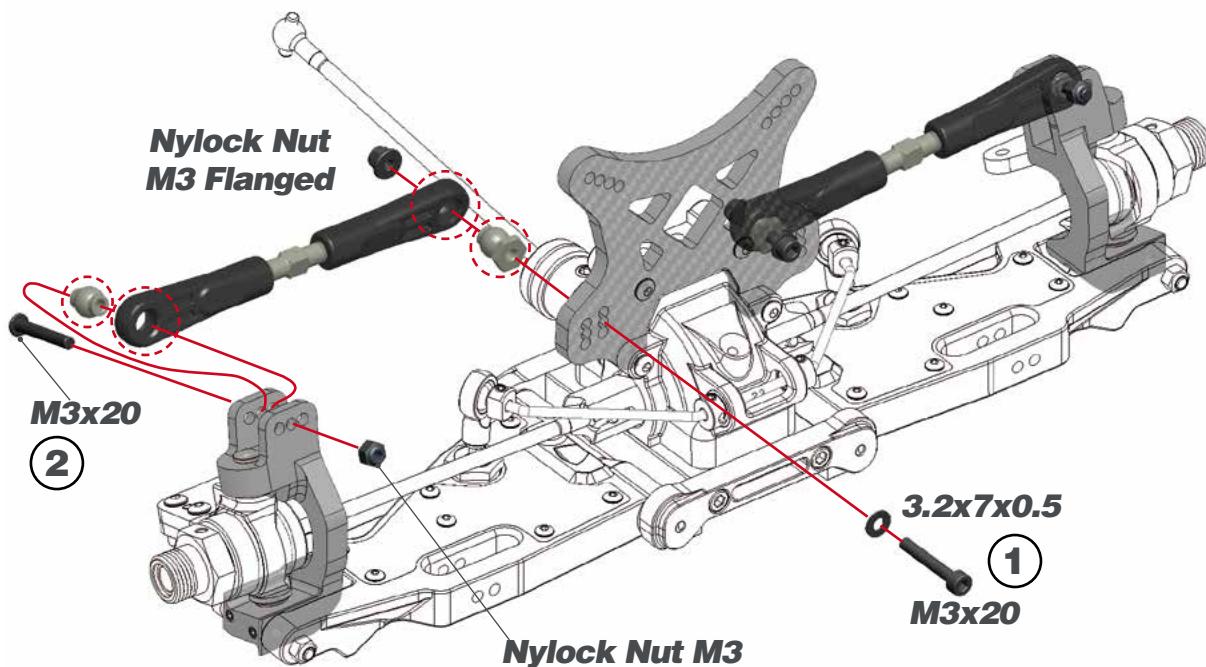STEP 35 **BAG 9****35.1****35.2**

M3x20



3.5x7x0.5


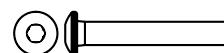
Nylock Nut M3
Flanged

M3x20



Nylock Nut M3

STEP 36

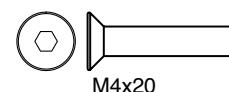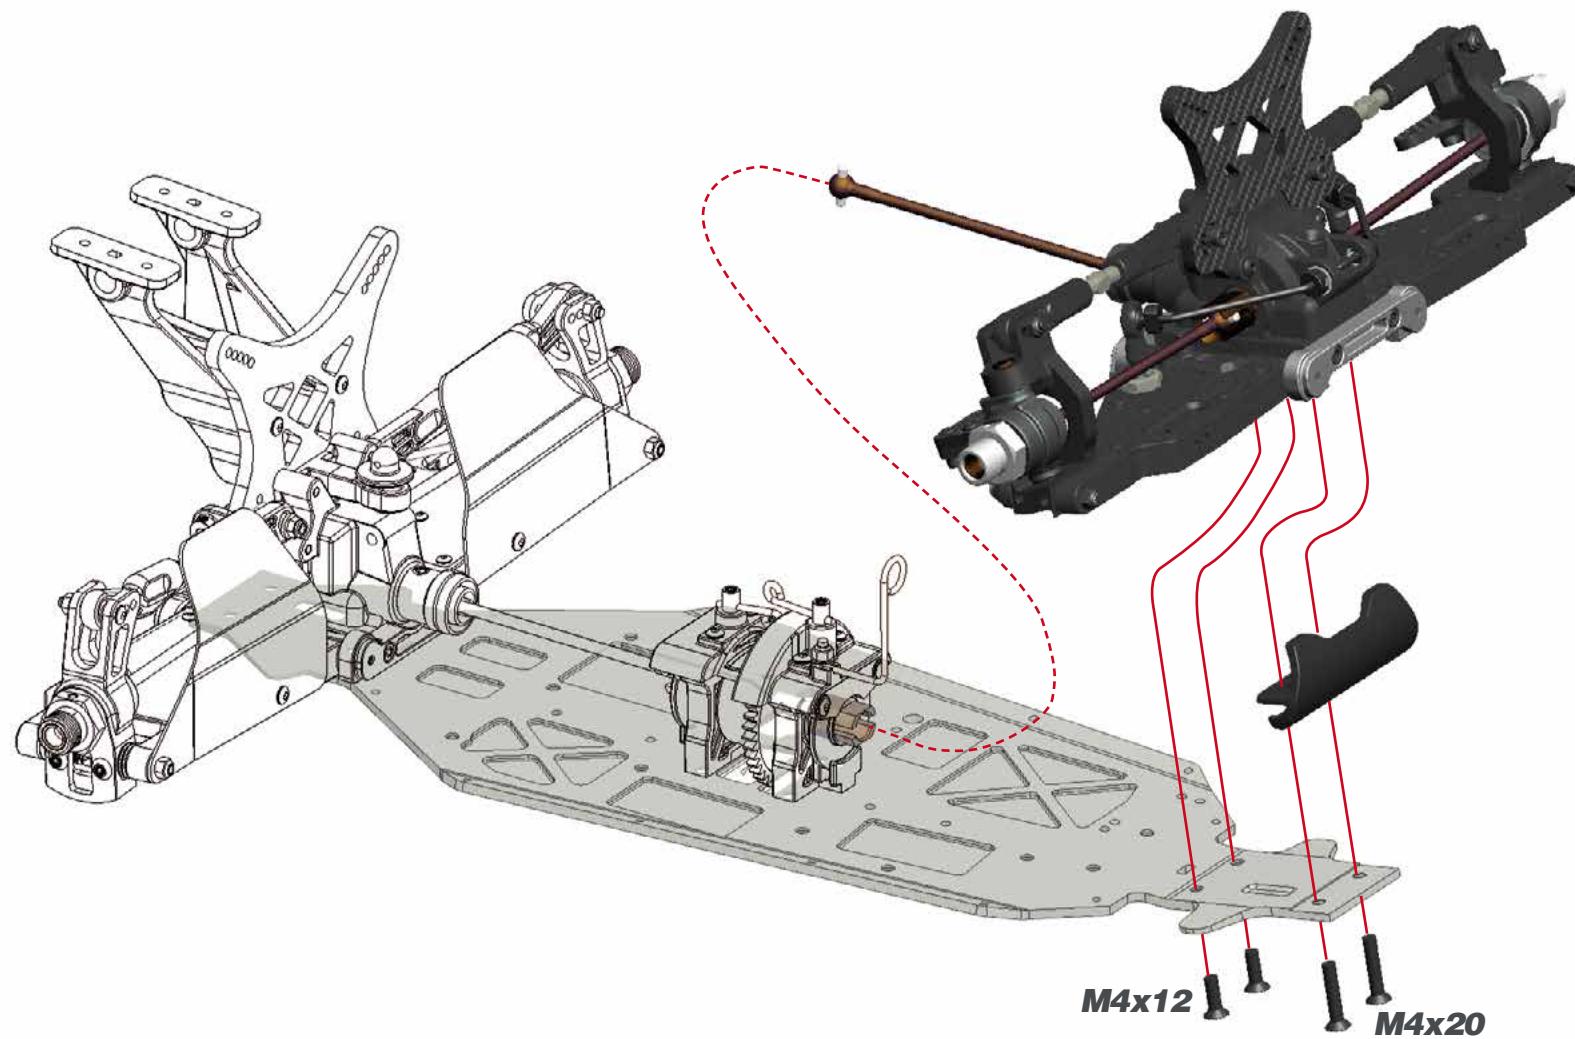


STEERING ASSEMBLY

COBRA
SRX8



STEP 37

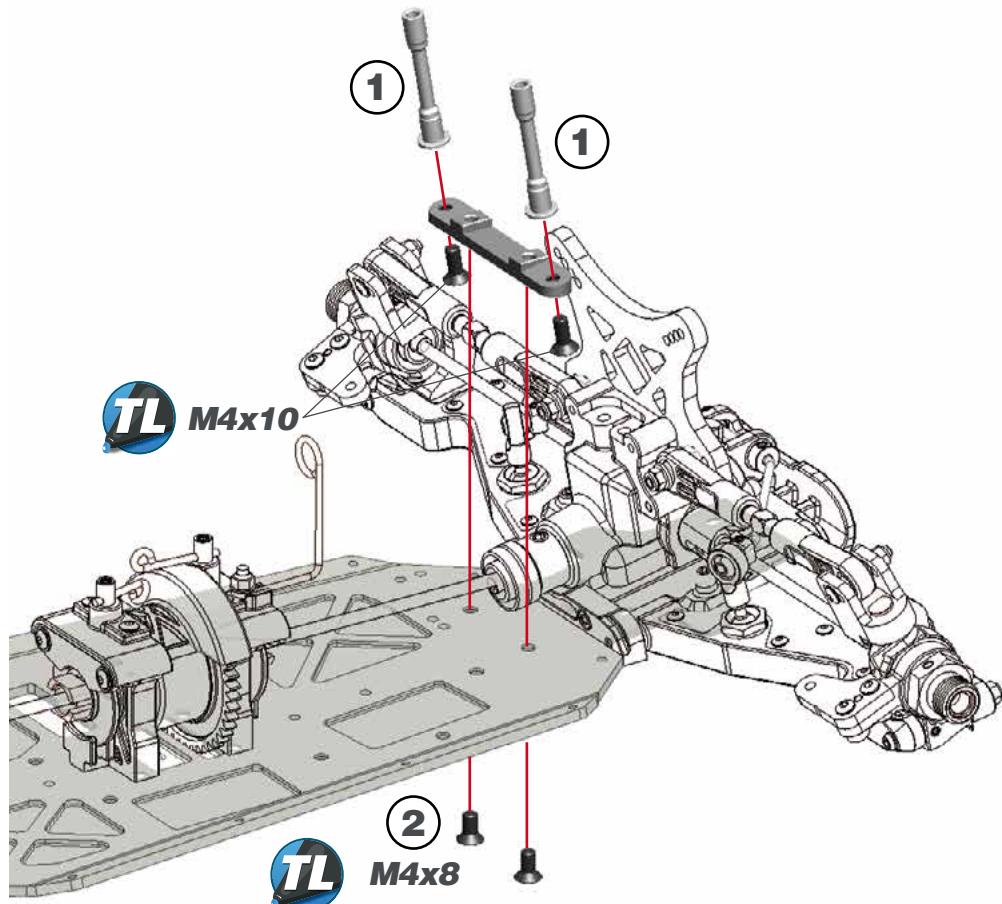


STEP 38 BAG 10


38.1



38.2

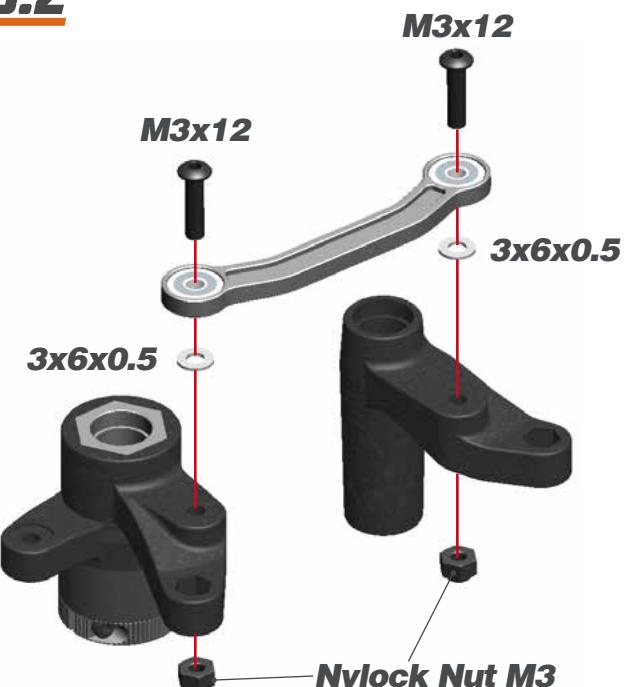


The servo saver spring should be preloaded 3mm. Also notice the correct orientation of the collar.

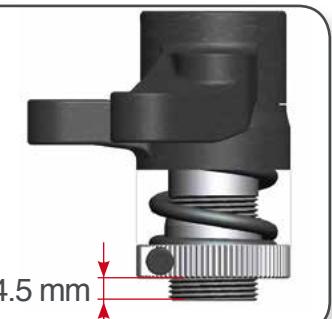


M4x10



M4x8

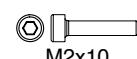

M2x10

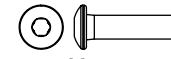


M3x12




3x6x0.5



Nylock Nut M3

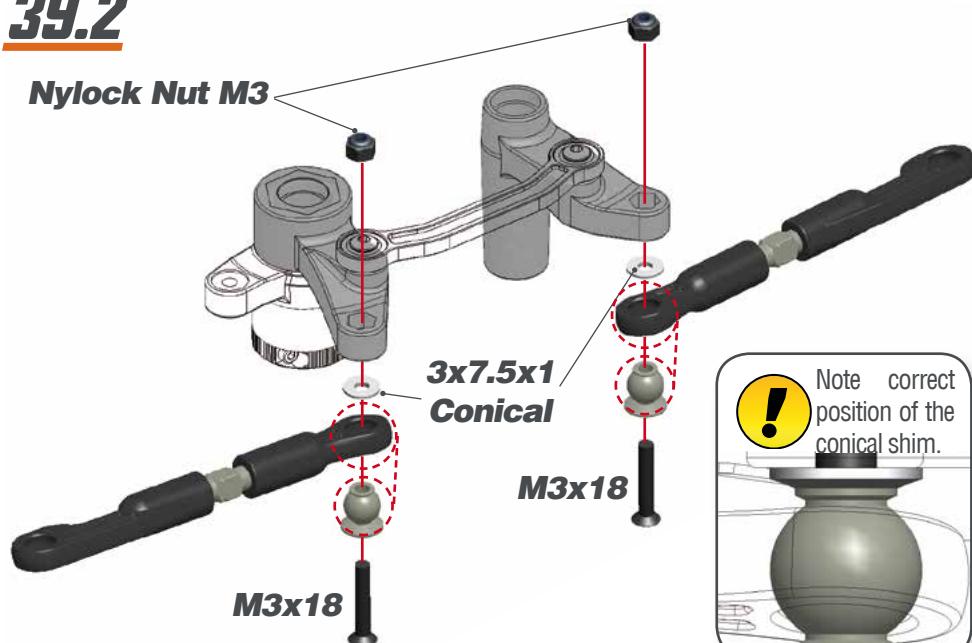STEP 39**39.1****STEERING TRACKROD LENGTH****39.2****Nylock Nut M3****STEP 40**

•

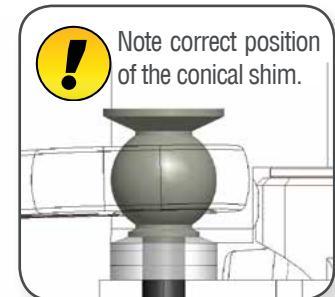**3x7.5x1 Conical****3x7.5x1****Nylock Nut
M3 Flanged****6x10x3****3x7.5x1****M3x20****2****3x7.5x1
Conical****Nylock Nut
M3 Flanged**

•




M3x18



3x7.5x1 Conical



Nylock Nut M3

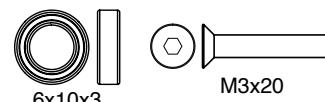

6x10x3

M3x20





3x7.5x1 Conical



3x7.5x1


Nylock Nut M3
Flanged

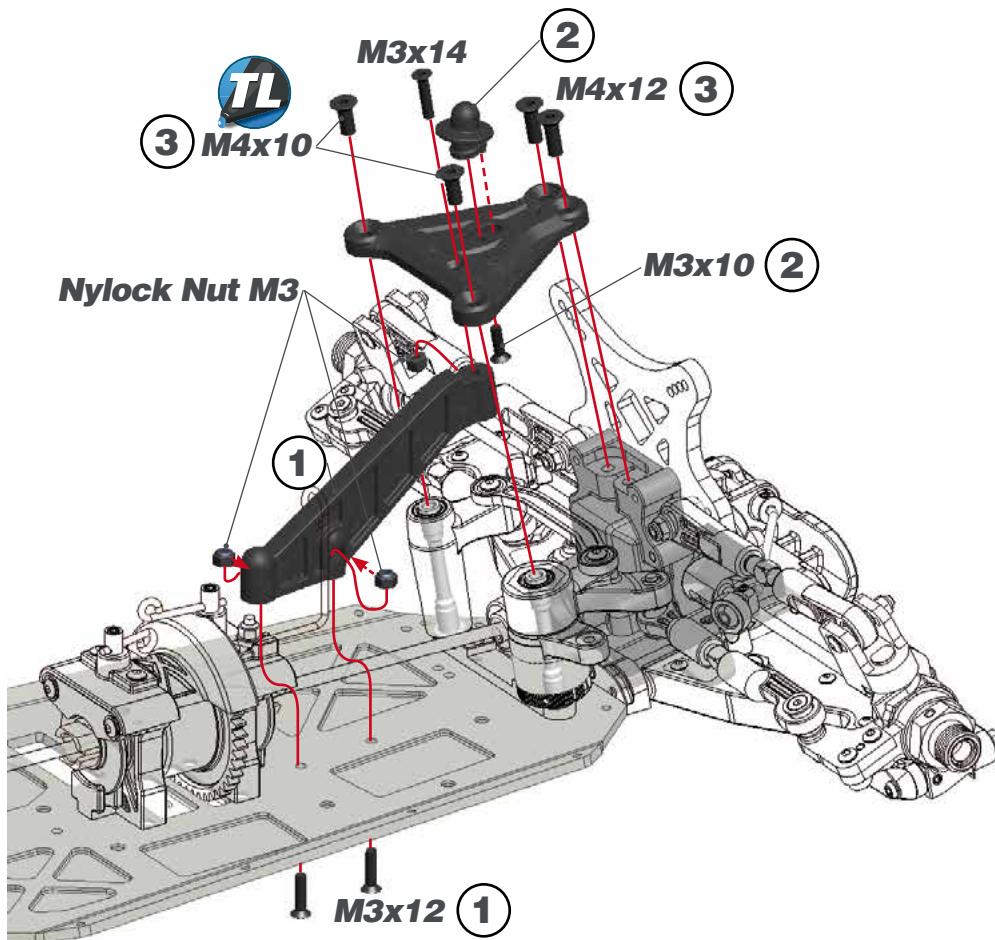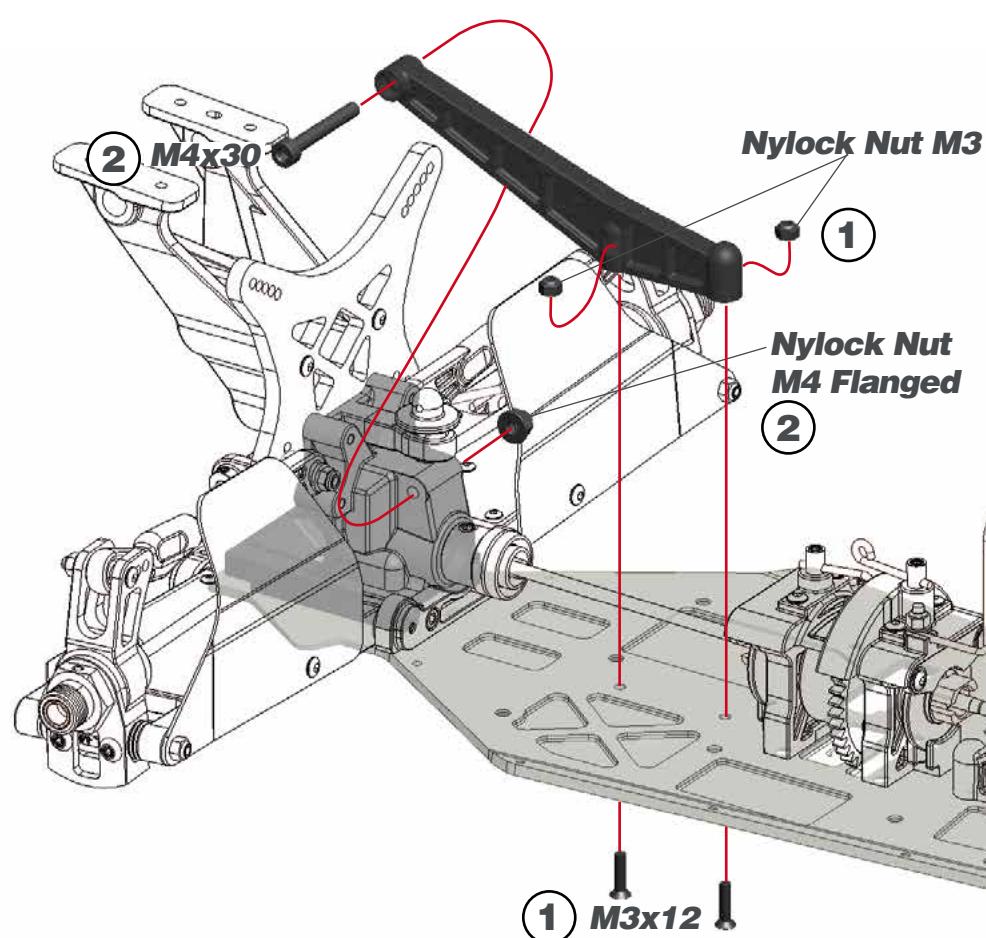STEP 41 **BAG 11****STEP 42**

M3x12



Nylock Nut M3

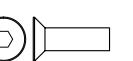

M3x10



M4x10



M4x12




M3x14



M3x12



Nylock Nut M3

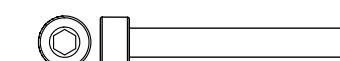

M4x30




Nylock Nut M3 Flanged

STEP 43



Put thread lock in all the M3x6 screws that fix the side guards to the chassis.

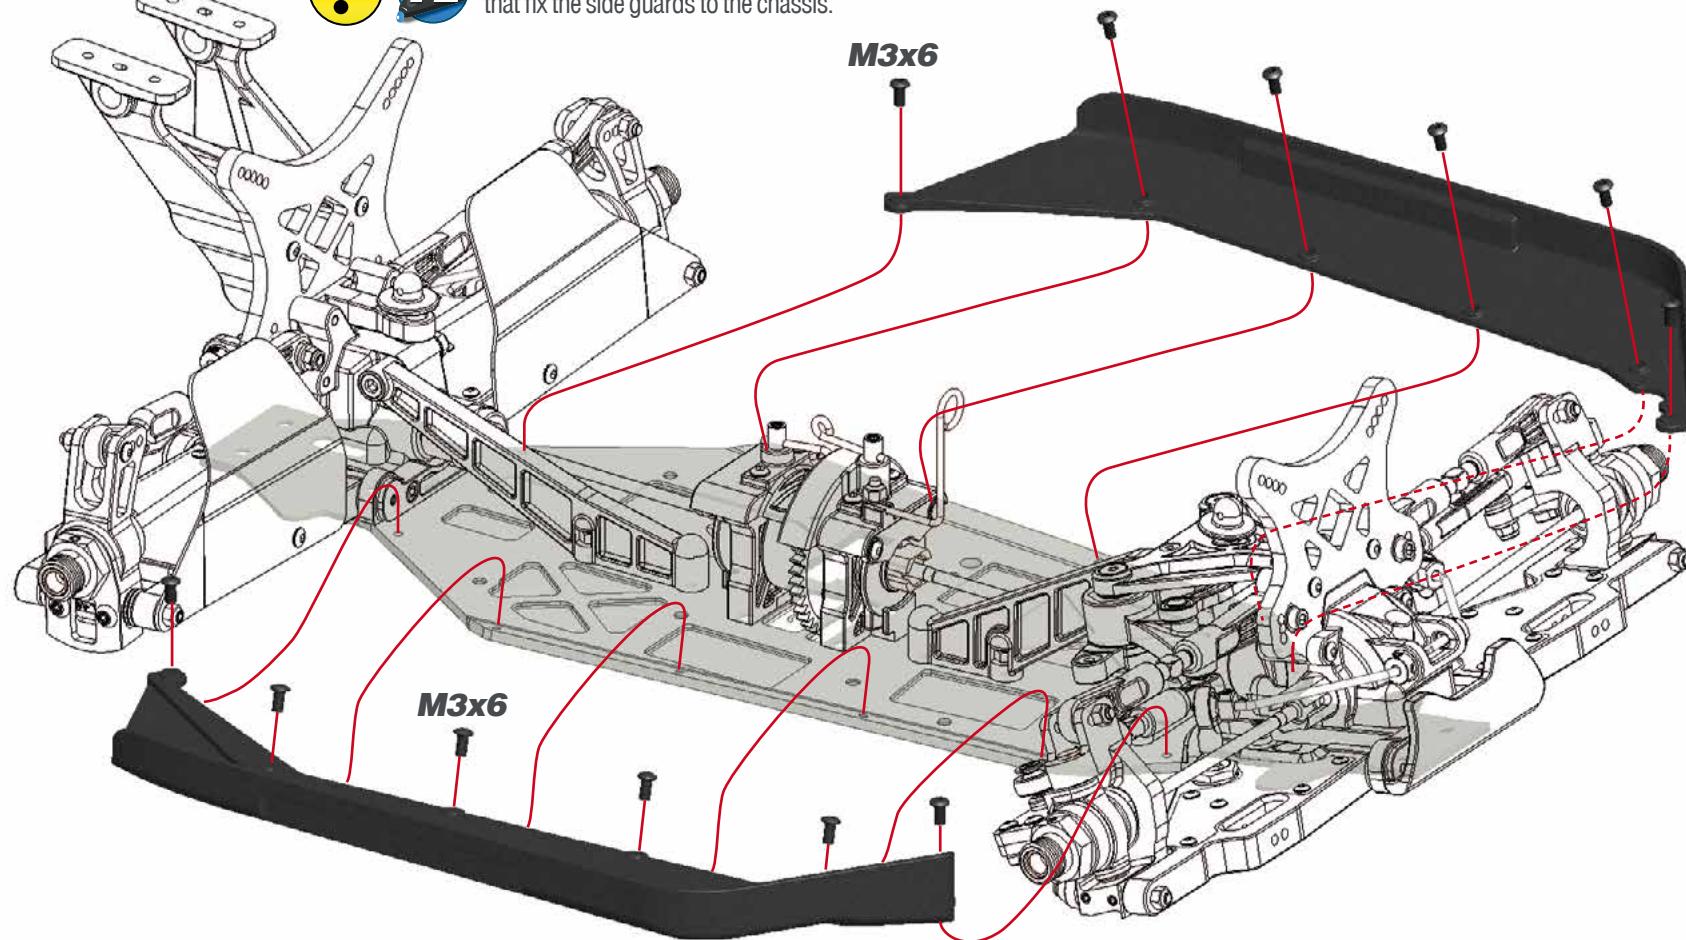

M3x6

STEP 44 BRG 12

44.1



STEERING LINK LENGTH

Between different servo brands there could be slight differences.

19.3 - 19.6 mm

Nylock Nut M3

M3x8

3x7.5x1 Conical

①



Check how many teeth your servo spline has (23, 24 or 25) and use the right lever.


②



Note correct position of the conical shim.




STEP 45

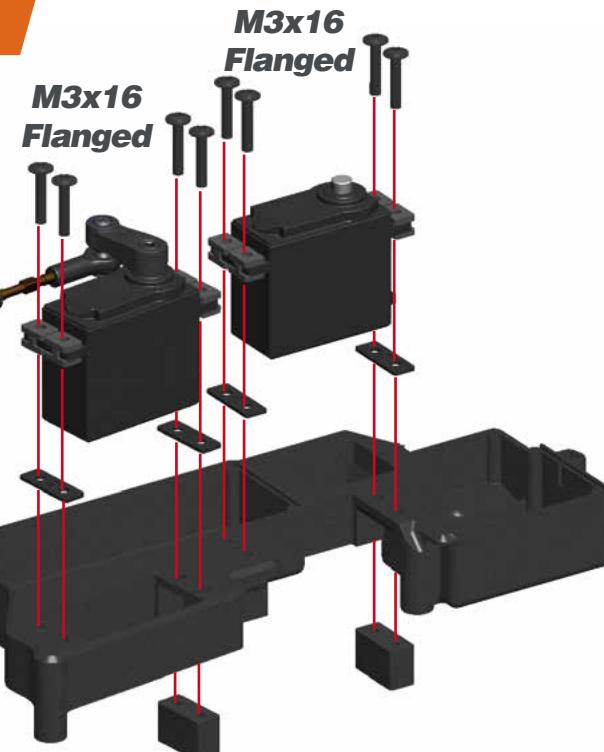

SERVO SPACERS


Use enough servo spacers so both servos are flush with the bottom of the radiotray posts. This will prevent the servo to touch the chassis under torsion – flex.

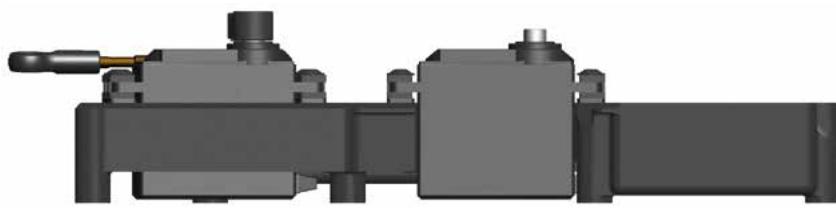

3x7.5x1 Conical





Nylock Nut M3

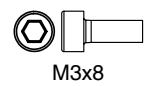

M3x8





M3x16 Flanged

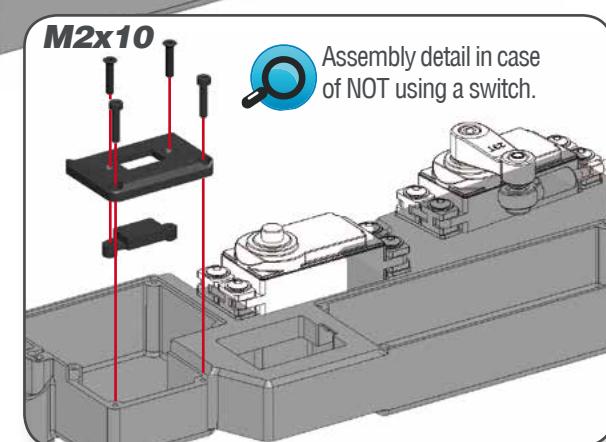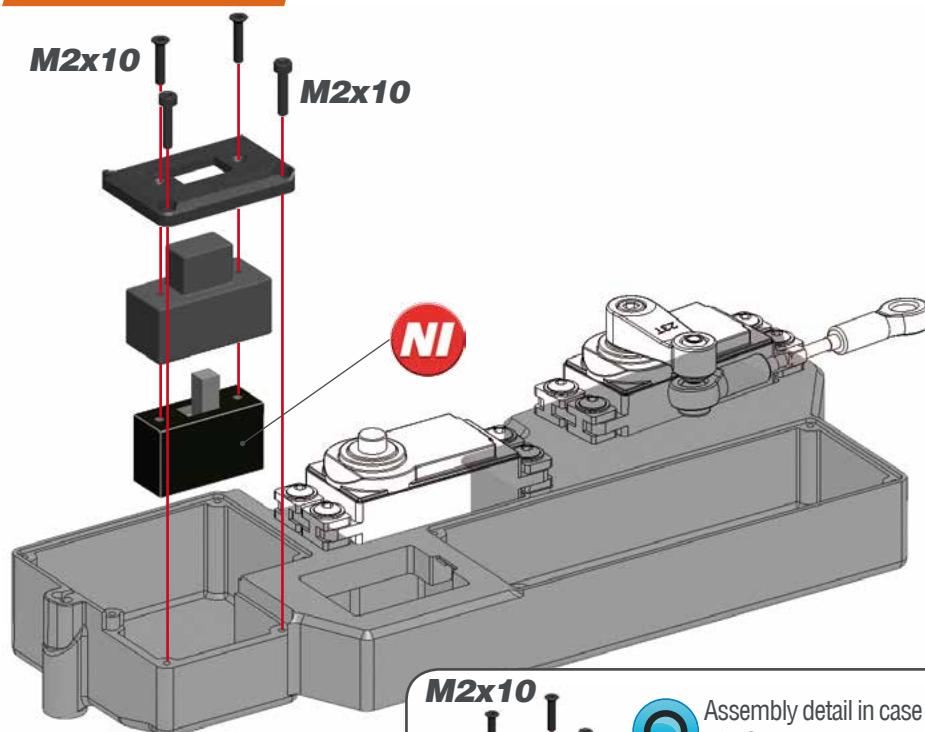STEP 46




M2x10



M2x10

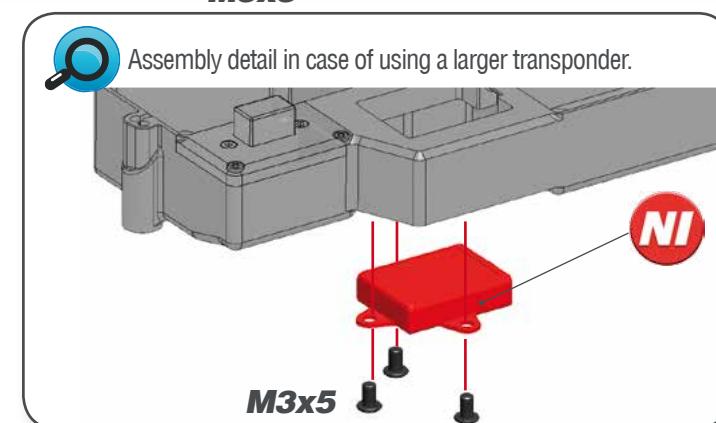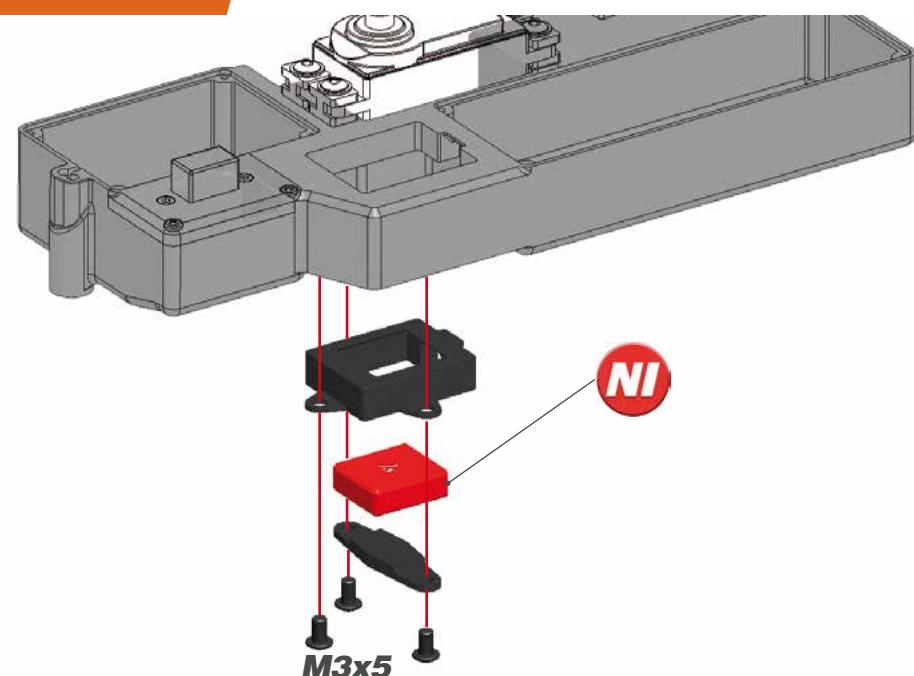STEP 47


M3x5

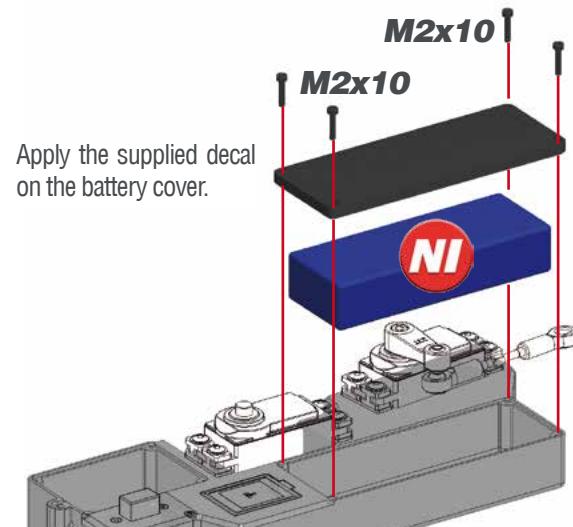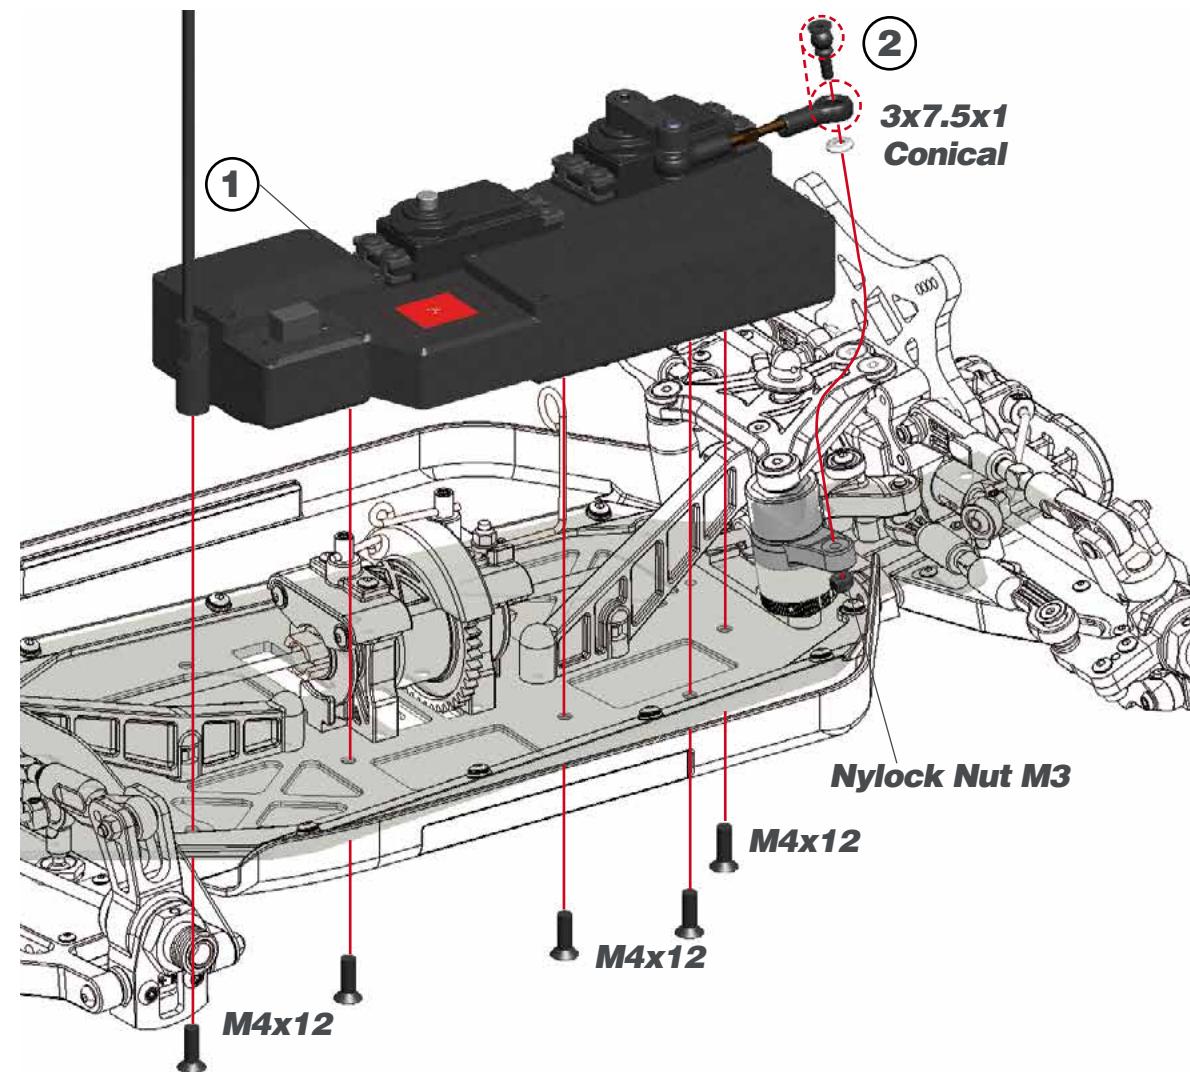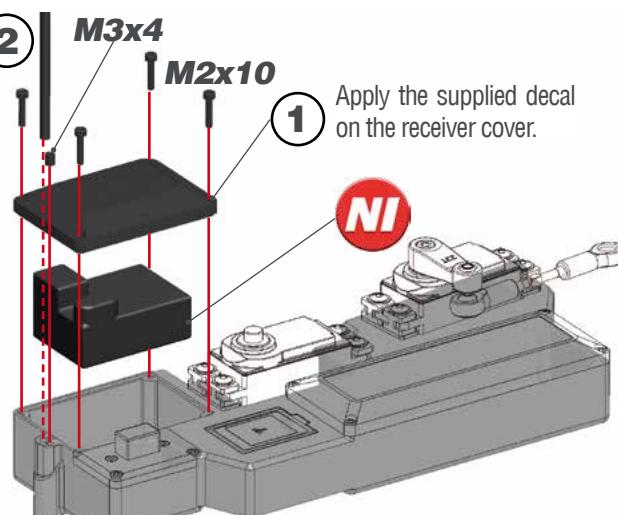STEP 48**48.1****STEP 49****48.2**

M2x10



M3x4

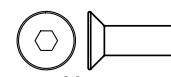

M4x12




3x7.5x1 Conical






Nylock Nut M3

STEP 50**THROTTLE / BRAKE SPOKE LENGTHS**

Cut the spoke at the non threaded side

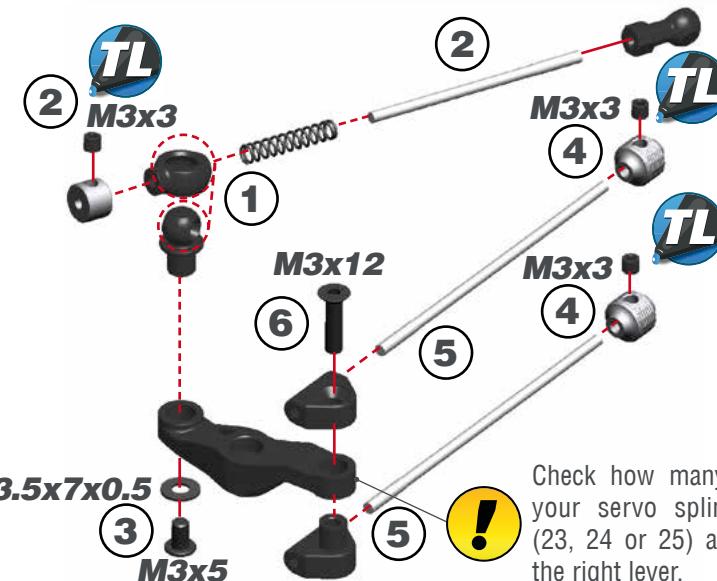THROTTLE**BRAKE****THROTTLE / BRAKE ASSEMBLY****STEP 51**

Note the correct orientation of the brake balls.

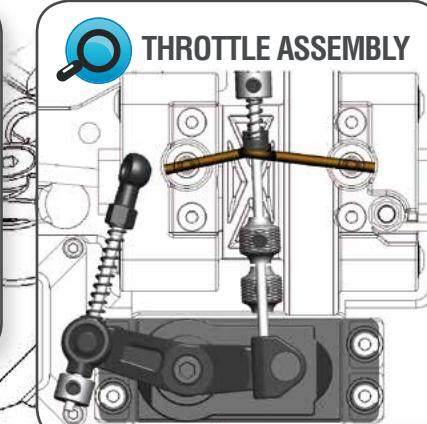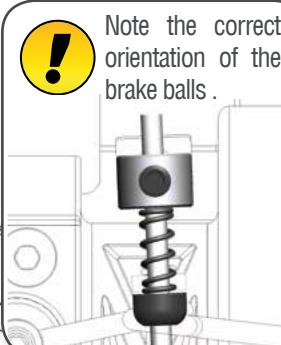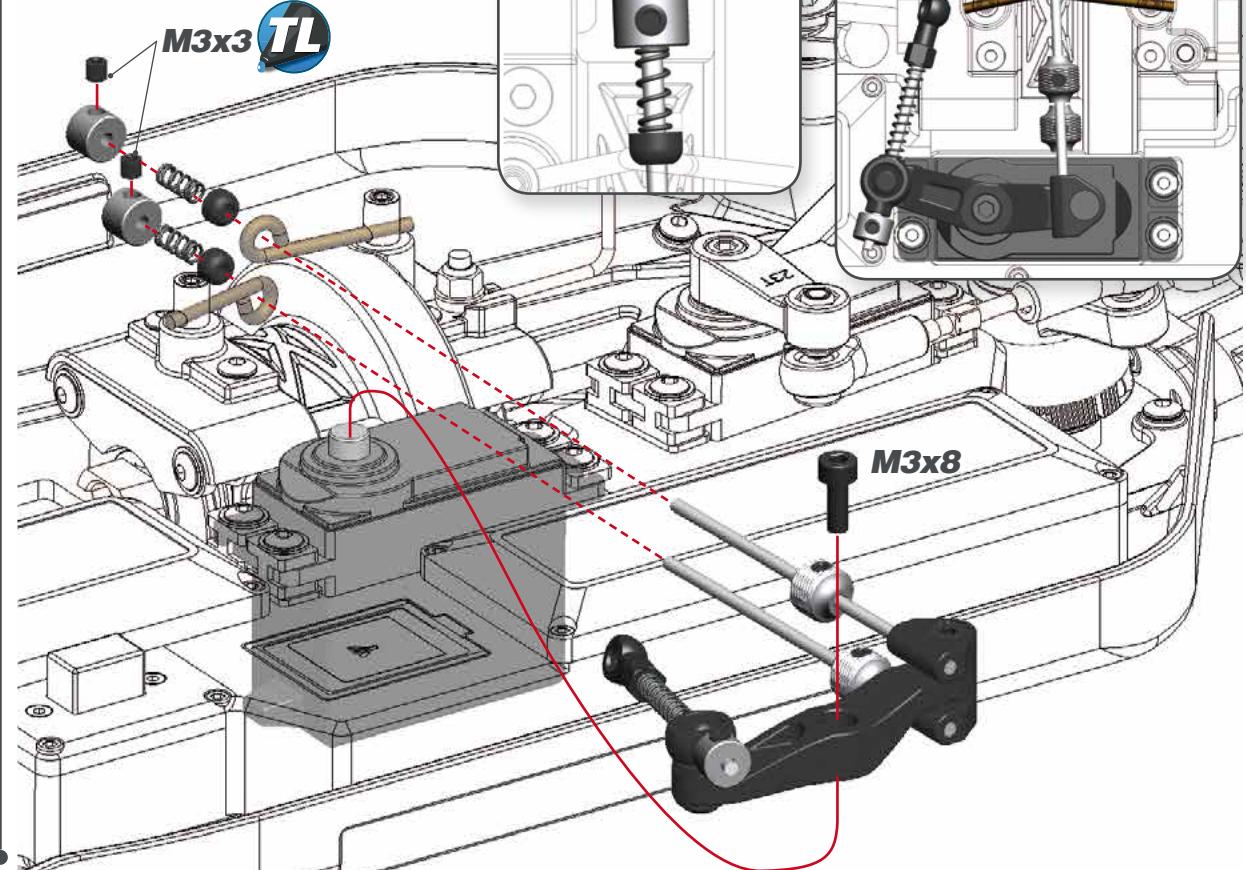**THROTTLE ASSEMBLY**


M3x3



3.5x7x0.5



M3x5

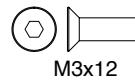

M3x12




M3x8



M3x3


STEP 52 BAG 13 FR SHOCKS / BAG 14 RR SHOCKS / STEP 53

52.1

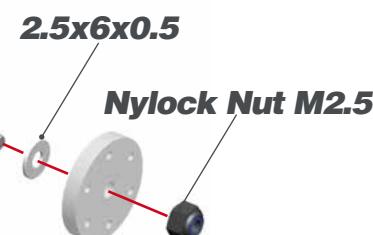

52.2


Use some silicone oil during the assembly.

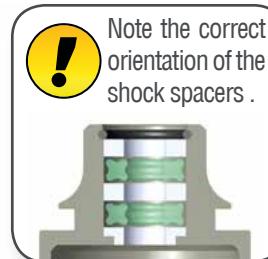

52.3



Use some silicone oil during the assembly.

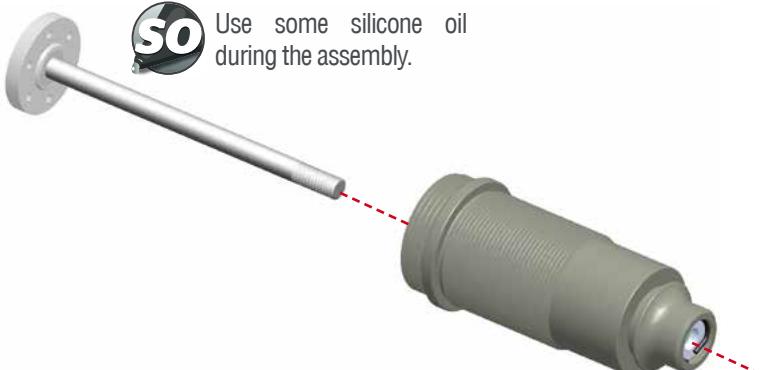


2.5x6x0.5



Nylock Nut M2.5

53.1

Insert the o-ring inside the spring collar.

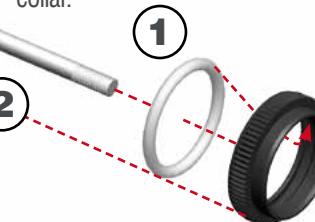

Note the correct position of the o-ring .



53.2



STEP 54**54.1**

Push the membrane into the shock cap.

**54.2**

1- Fill up with silicone oil fully using the silicone oil supplied in the kit. For the correct cst value please check the default setup sheet.



2- Extend the shockrod fully

3- Move the shockrod slowly up and down to let ALL air bubbles escape.

4- Close top only 3/4.


**54.3**

1-Bleed: push the shockrod all the way in slowly, to allow excessive oil to escape.


2- Close completely the shock cap.




SHOCKS LENGTH: Measure the shock length fully extended.

FRONT **REAR**

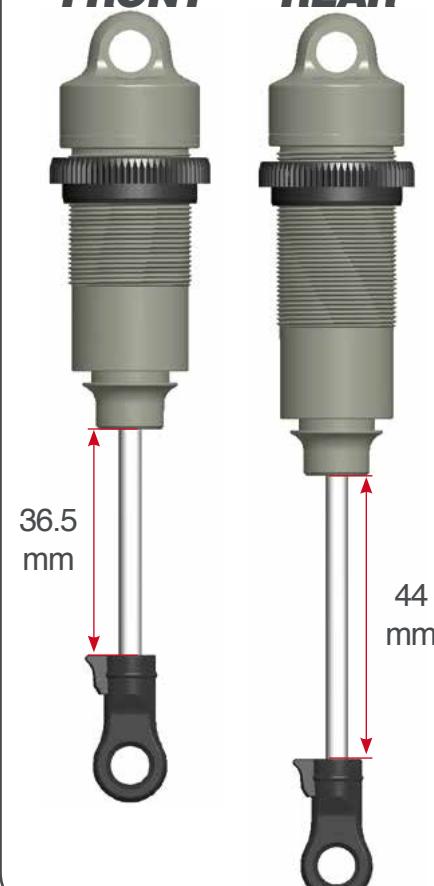**STEP 55**

Assemble the spring and spring-cup (align correctly) to complete the shock.



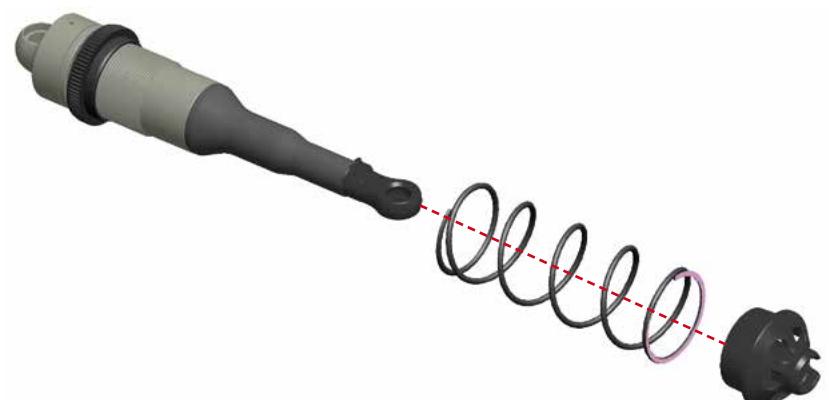


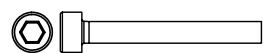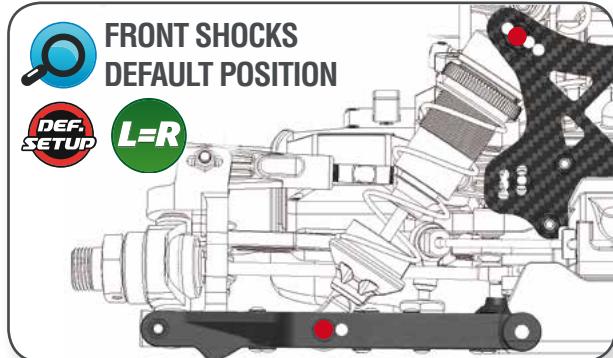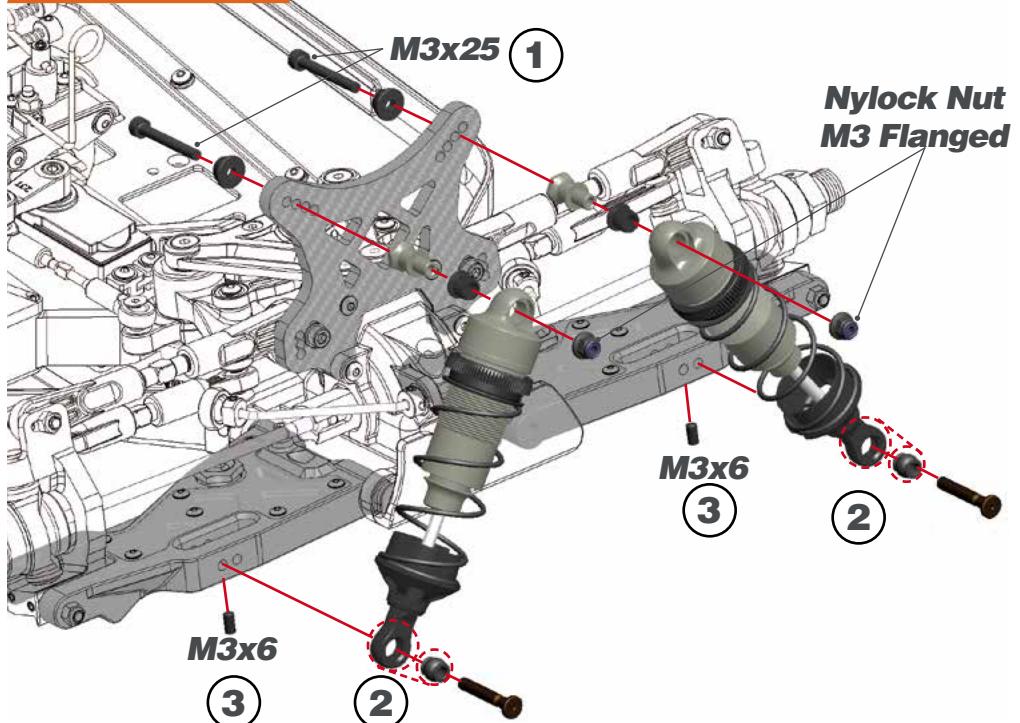STEP 56

M3x25

Nylock Nut M3
Flanged

M3x6

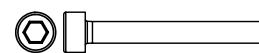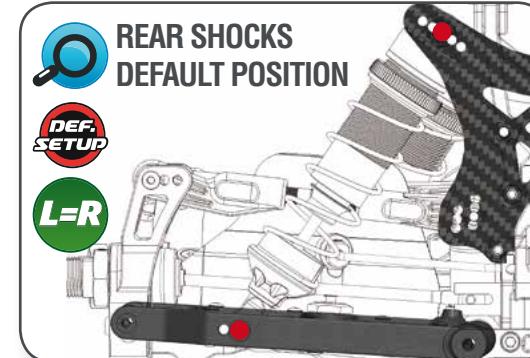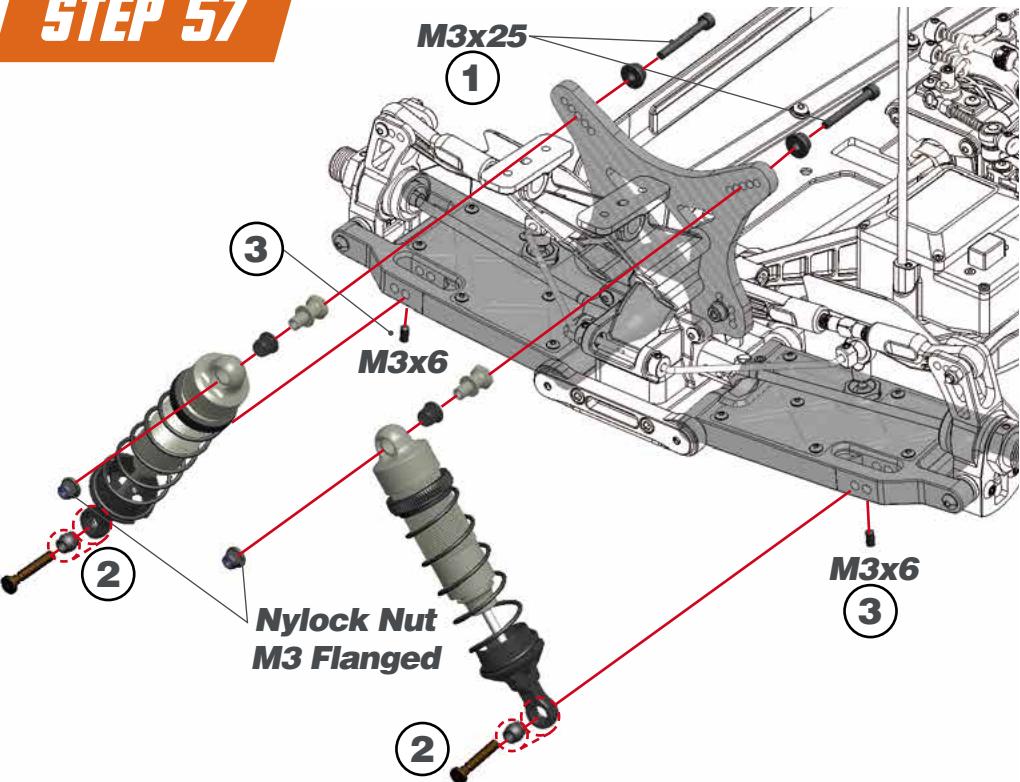STEP 57


M3x25

Nylock Nut M3
Flanged


M3x6

STEP 58 BAG 15


58.1

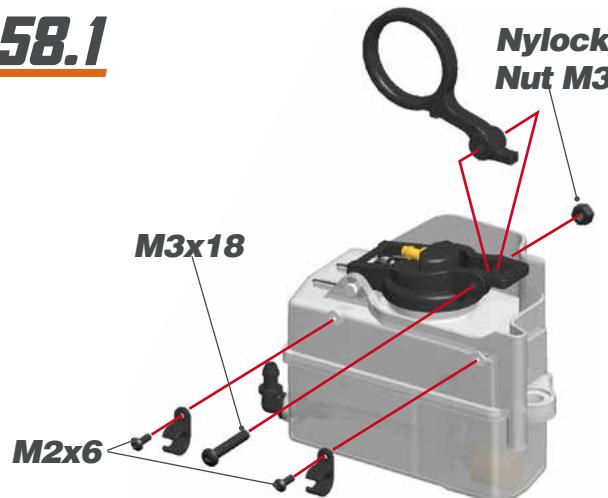

58.2

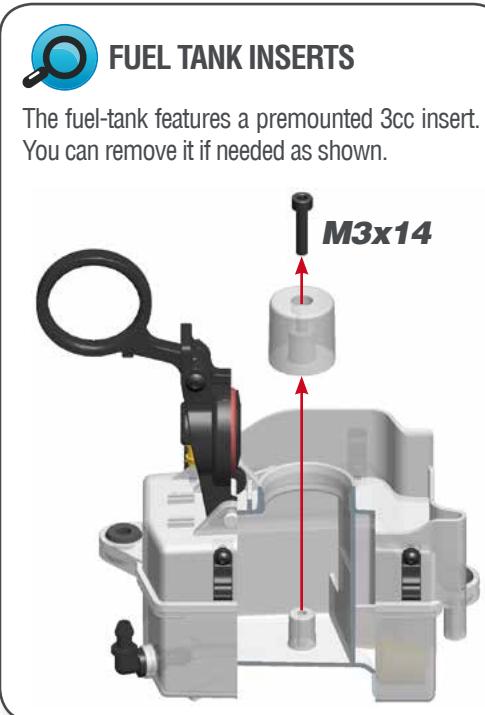

58.3

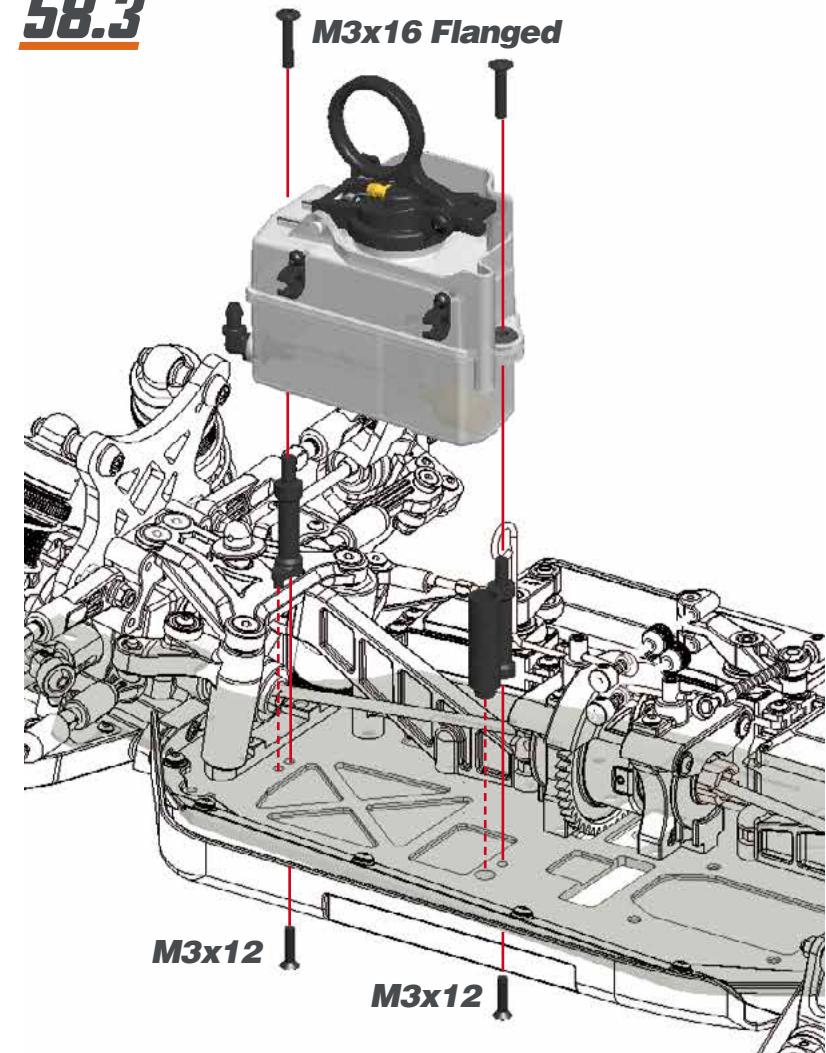

M2x6



M3x18



Nylock Nut M3



M3x14



M3x12



M3x16 Flanged

CLUTCH AND ENGINE ASSEMBLY

COBRA
SRX8




STEP 59 BAG 16


59.1




Push the long leg of the spring in the inner hole of the clutch shoe.

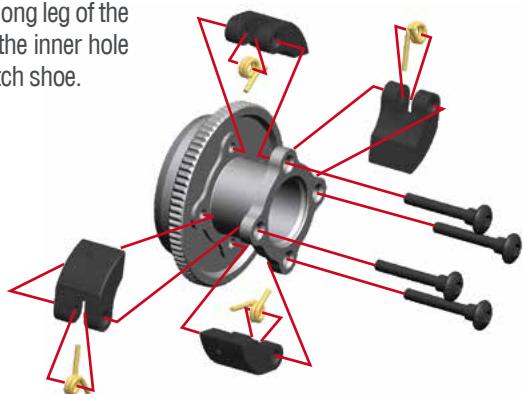

59.2

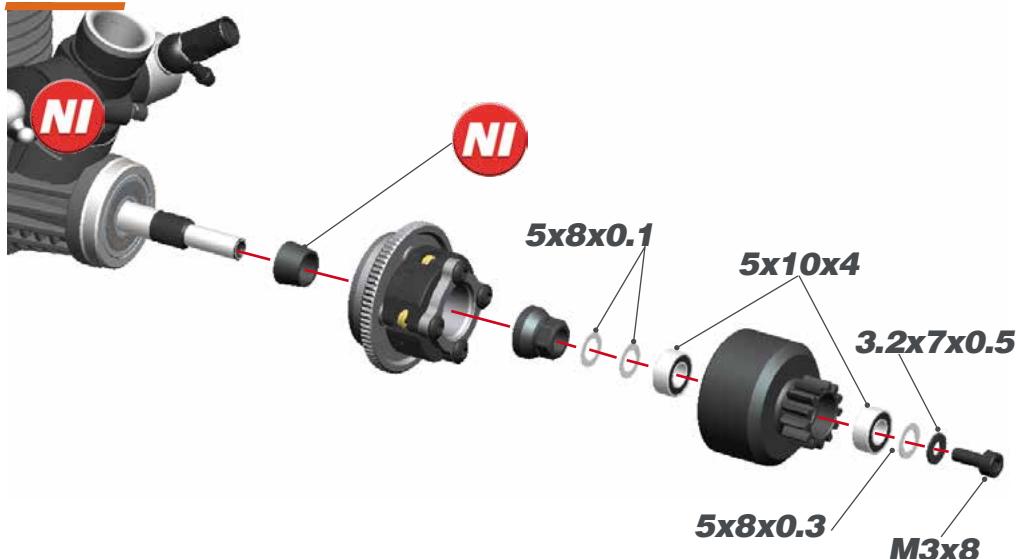

5x8x0.1

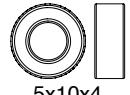


5x10x4



5x8x0.3



3.2x7x0.5

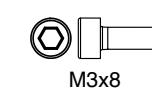


M3x8

STEP 60



Do not fully tighten the M3x14 screws till Step 61.

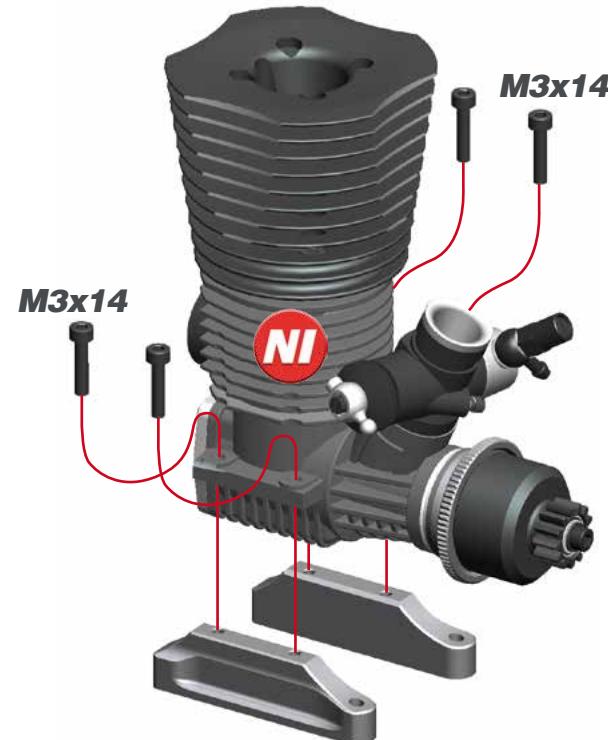


M3x14

STEP 61

- ! 1- Assemble and fully tighten the M4x10 screws.
 2- Position the engine in such way on the engine mount that the garmesh is correct.
 3- Fully tighten M3x14 screws assembled during the Step 60.


If the engine used is an OS (or OS based engines like Mx), Alpha and SH, it might be needed to trim off some plastic from the center diff cover to give the carburetor enough clearance over the brake plates. This could be done with a hobby knife.

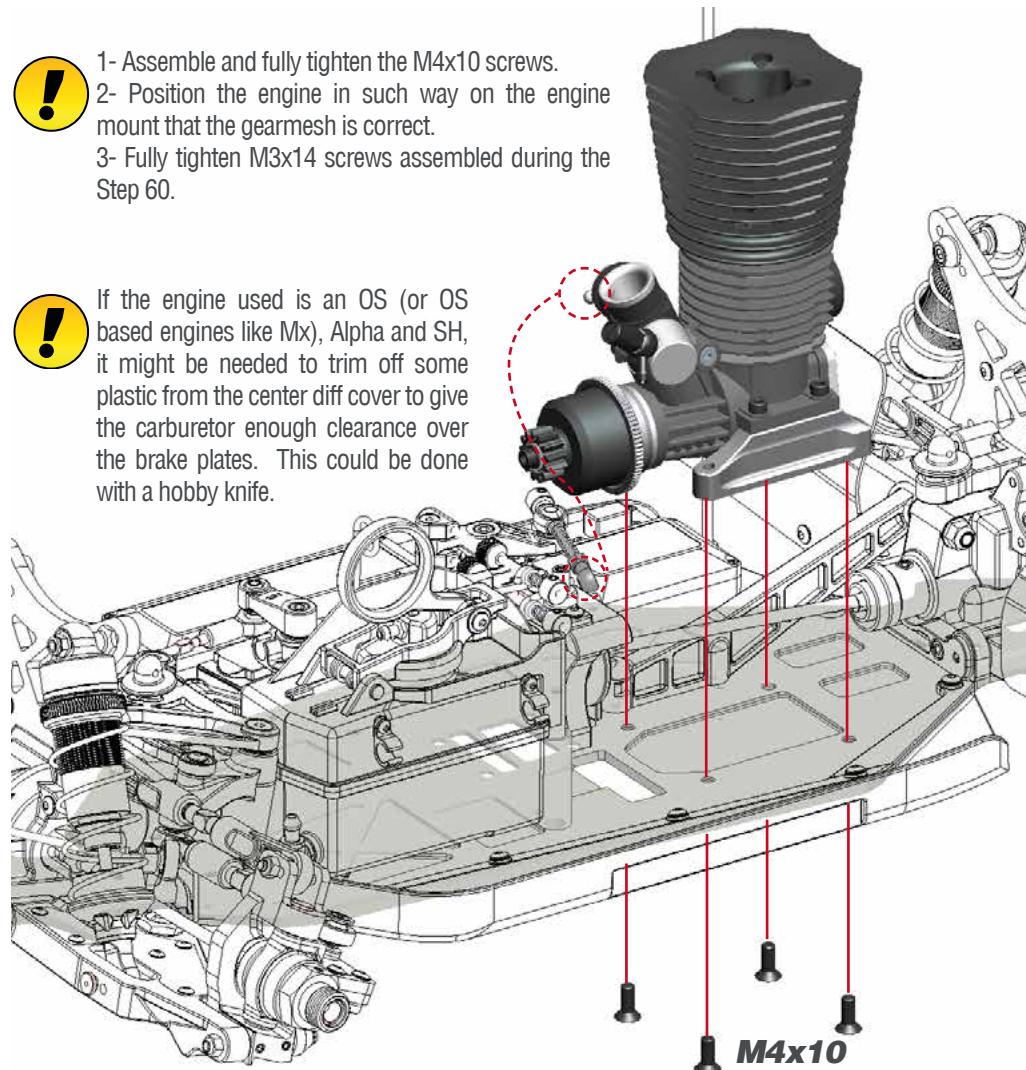

M4x10

STEP 62


TL
M5x4

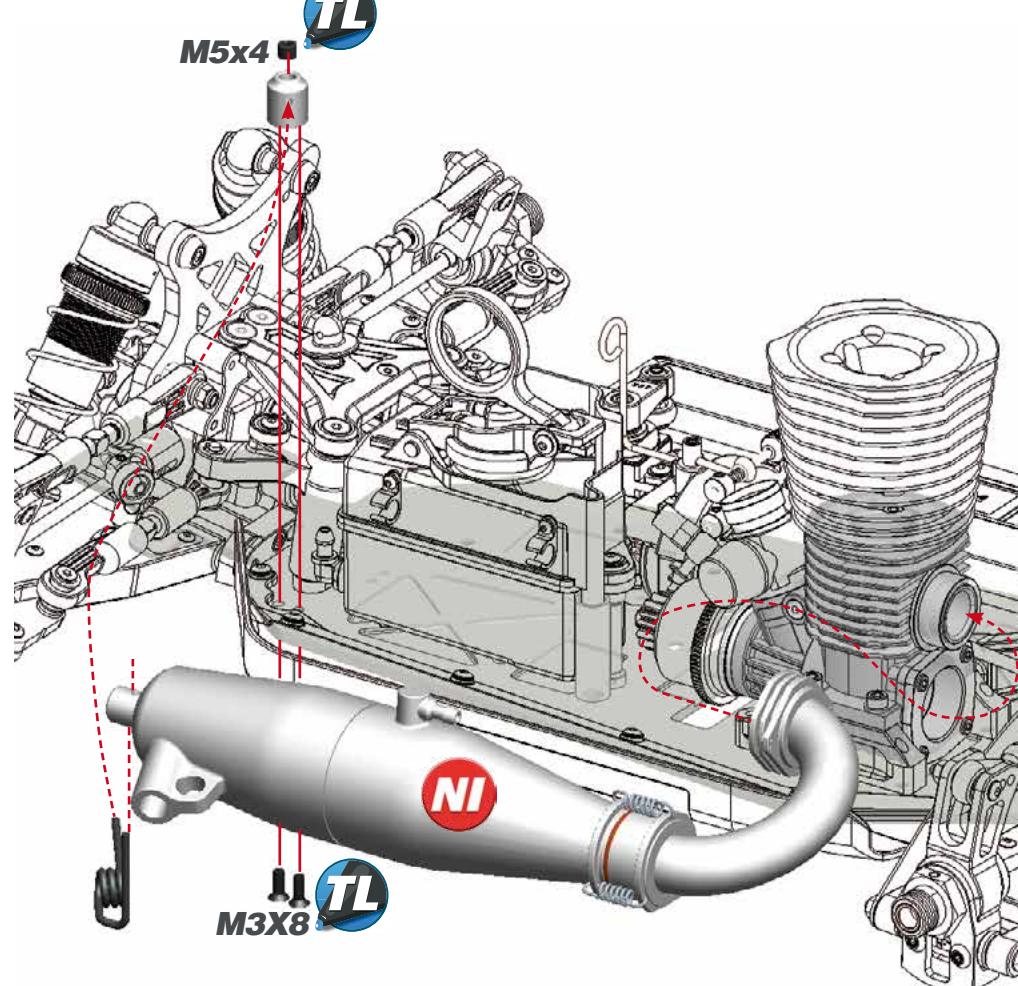

M3x8











M5x4

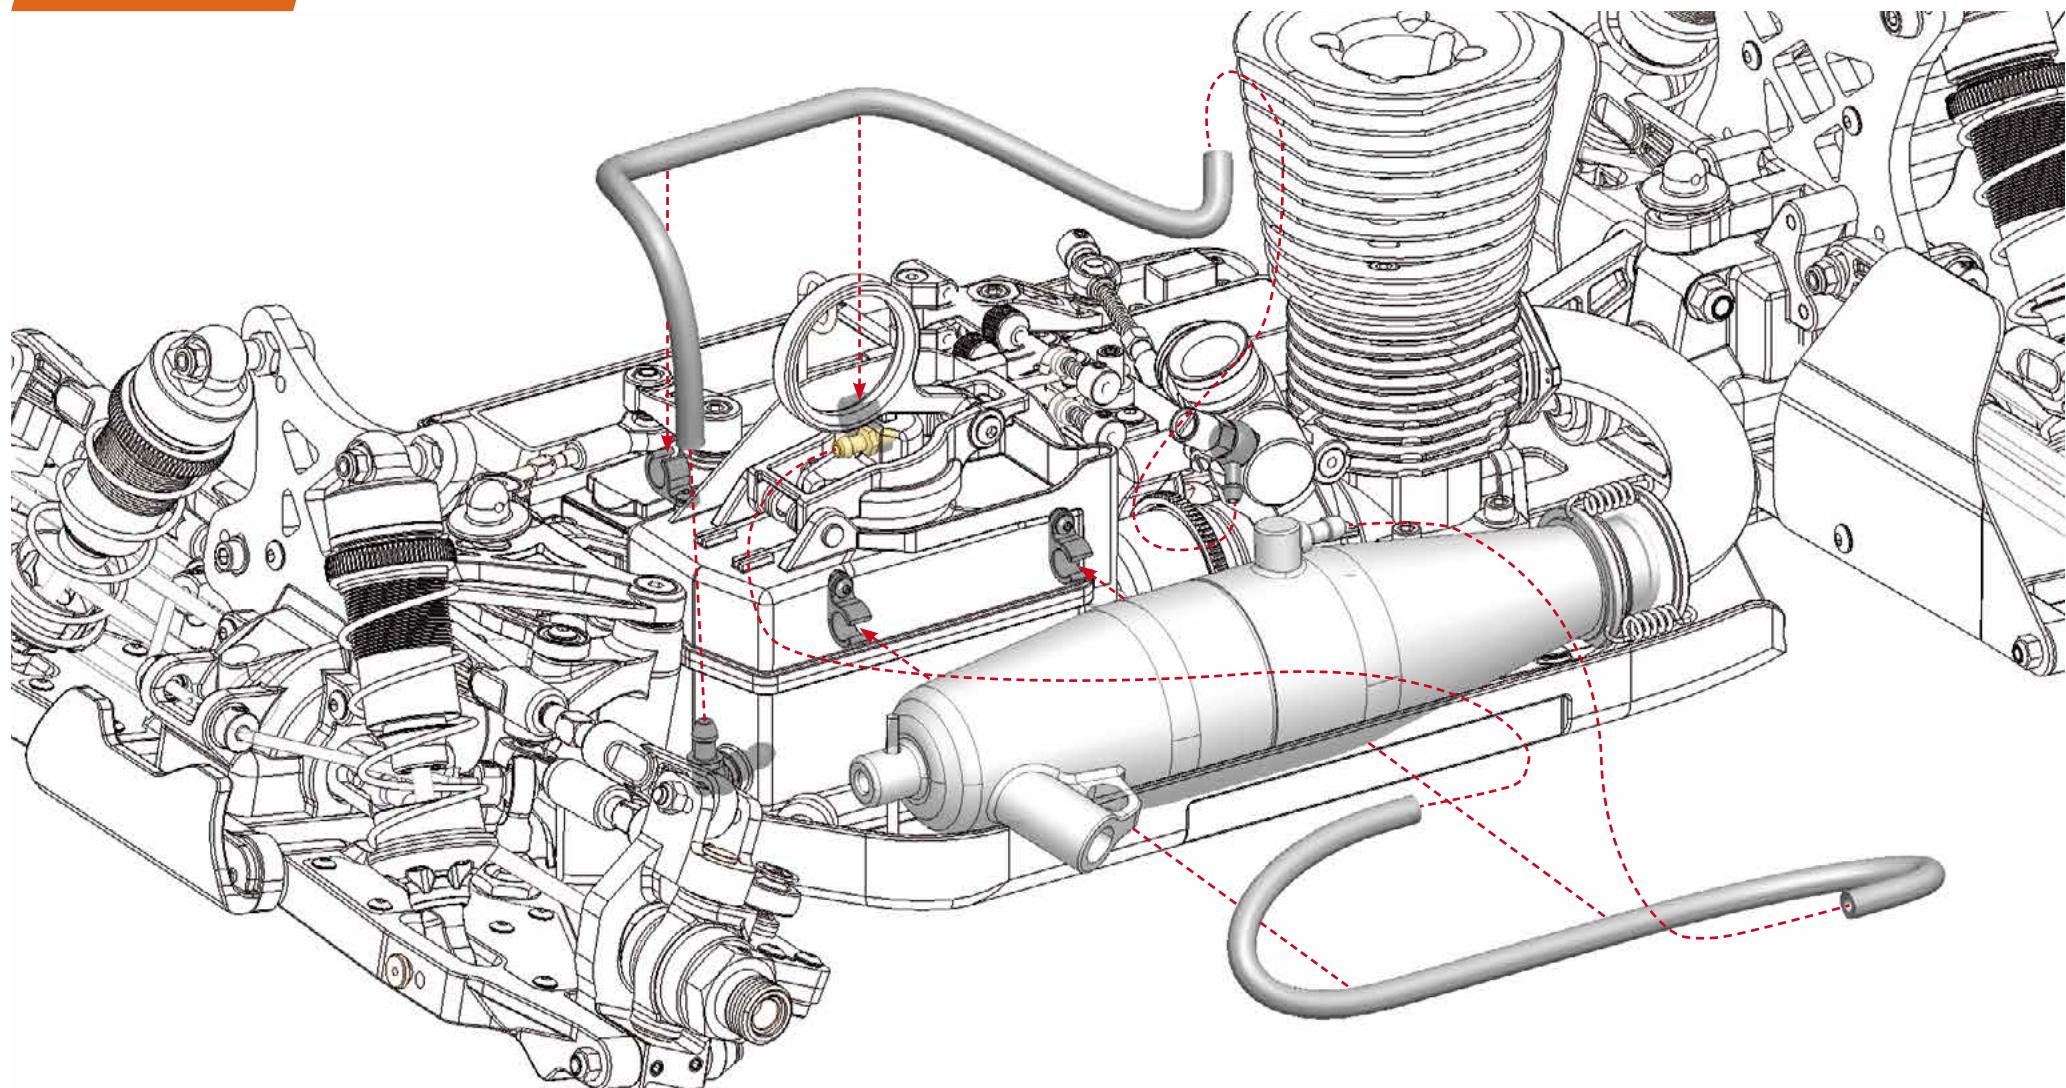STEP 63

STEP 64 **BAG 17****64.1**

! Use tie raps to fix the the air filter boot to the airfilter and to the carburetor.

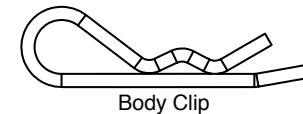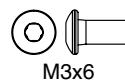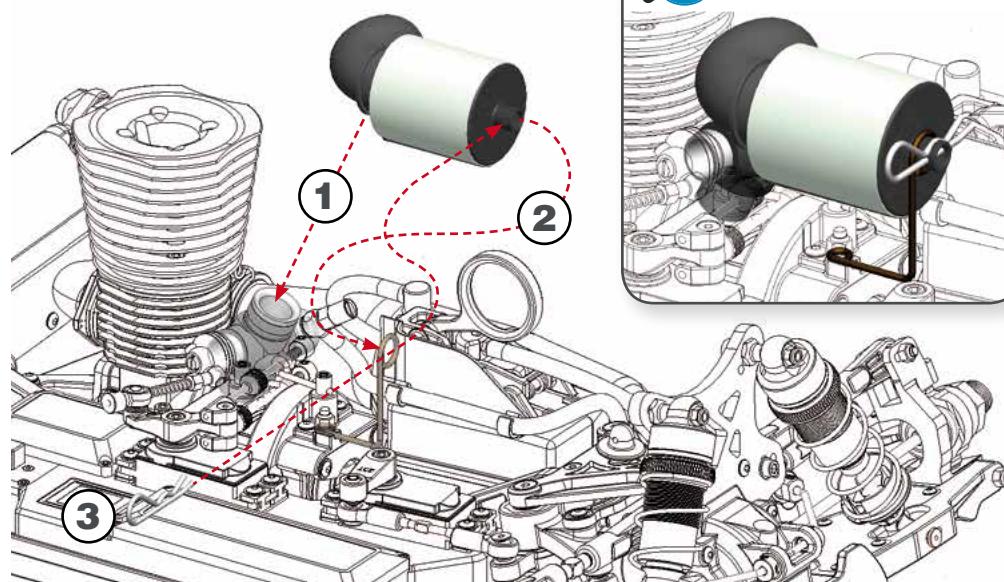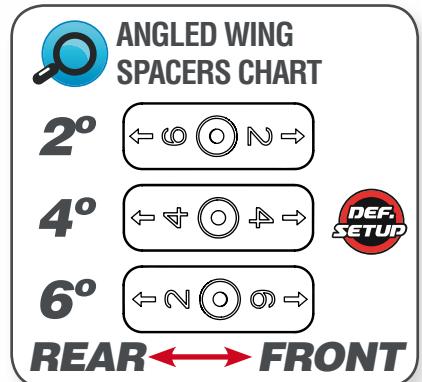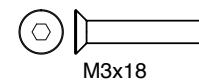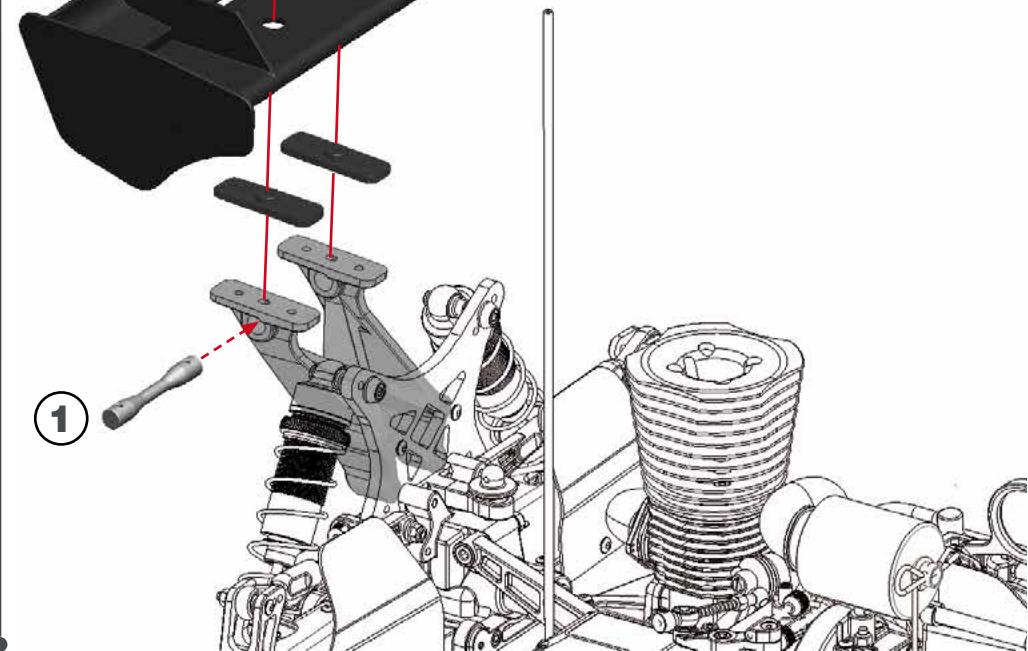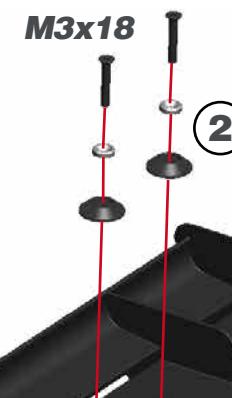64.2**STEP 65**



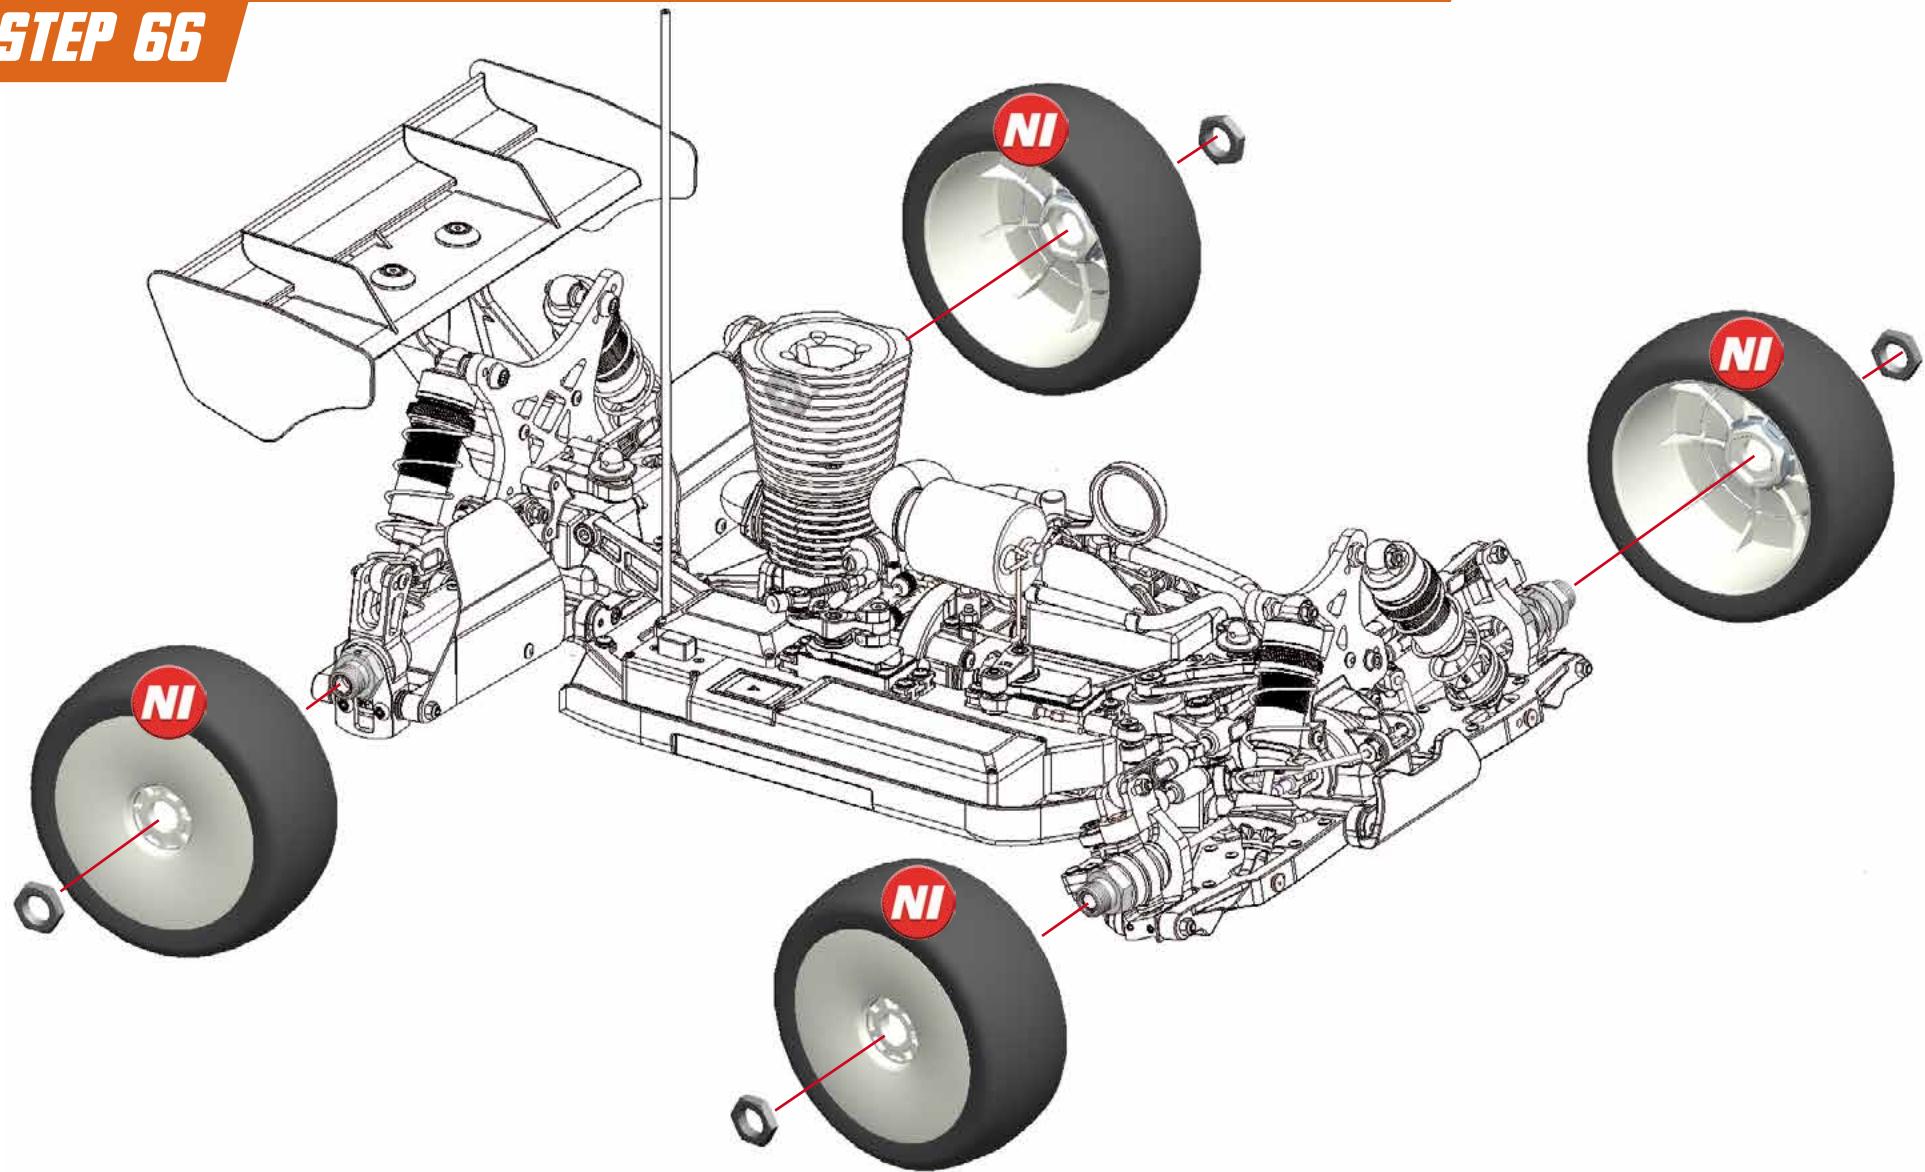
STEP 66

STEP 67

1- Cut the body along the cutting line with special scissors (not included). Make holes for the bodypost and antenna as needed with a body reamer (not included). Make a longer bodypost hole in the rear, to allow for chassis flex movement.

2- Before painting the body, apply the precut masking sheet elements to the inside of the body. Follow the cleaning & painting instructions supplied by the polycarbonate paint supplier you choose.

3- Apply the Serpent and Cobra logo-decals on the body and wing.

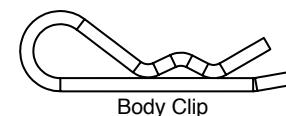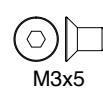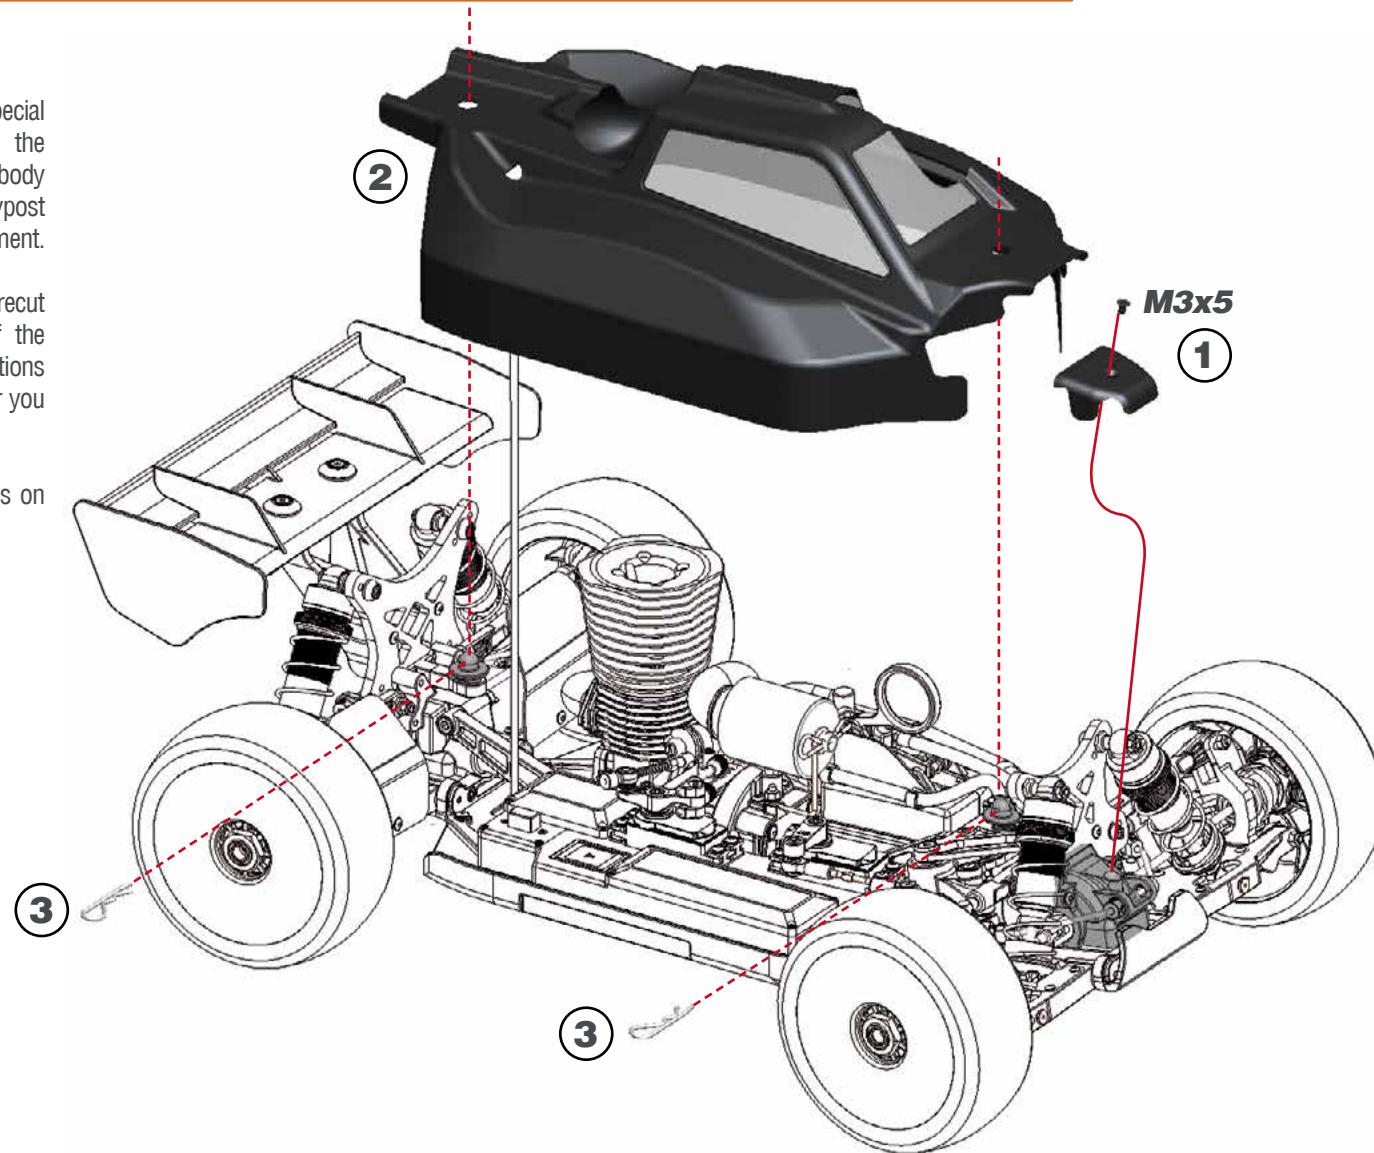


INDEX

DIFFERENTIALS EXPLODED VIEW	42
CENTRAL EXPLODED VIEW	43
REAR EXPLODED VIEW	44
FRONT EXPLODED VIEW	45
STEERING EXPLODED VIEW	46
RADIO EXPLODED VIEW	47
SHOCKS EXPLODED VIEW	48
CLUTCH EXPLODED VIEW	49
FINAL 1 EXPLODED VIEW	50
FINAL 2 EXPLODED VIEW	51

DIFFERENTIAL EXPLODED VIEW

COBRA
SRX8

Serpent

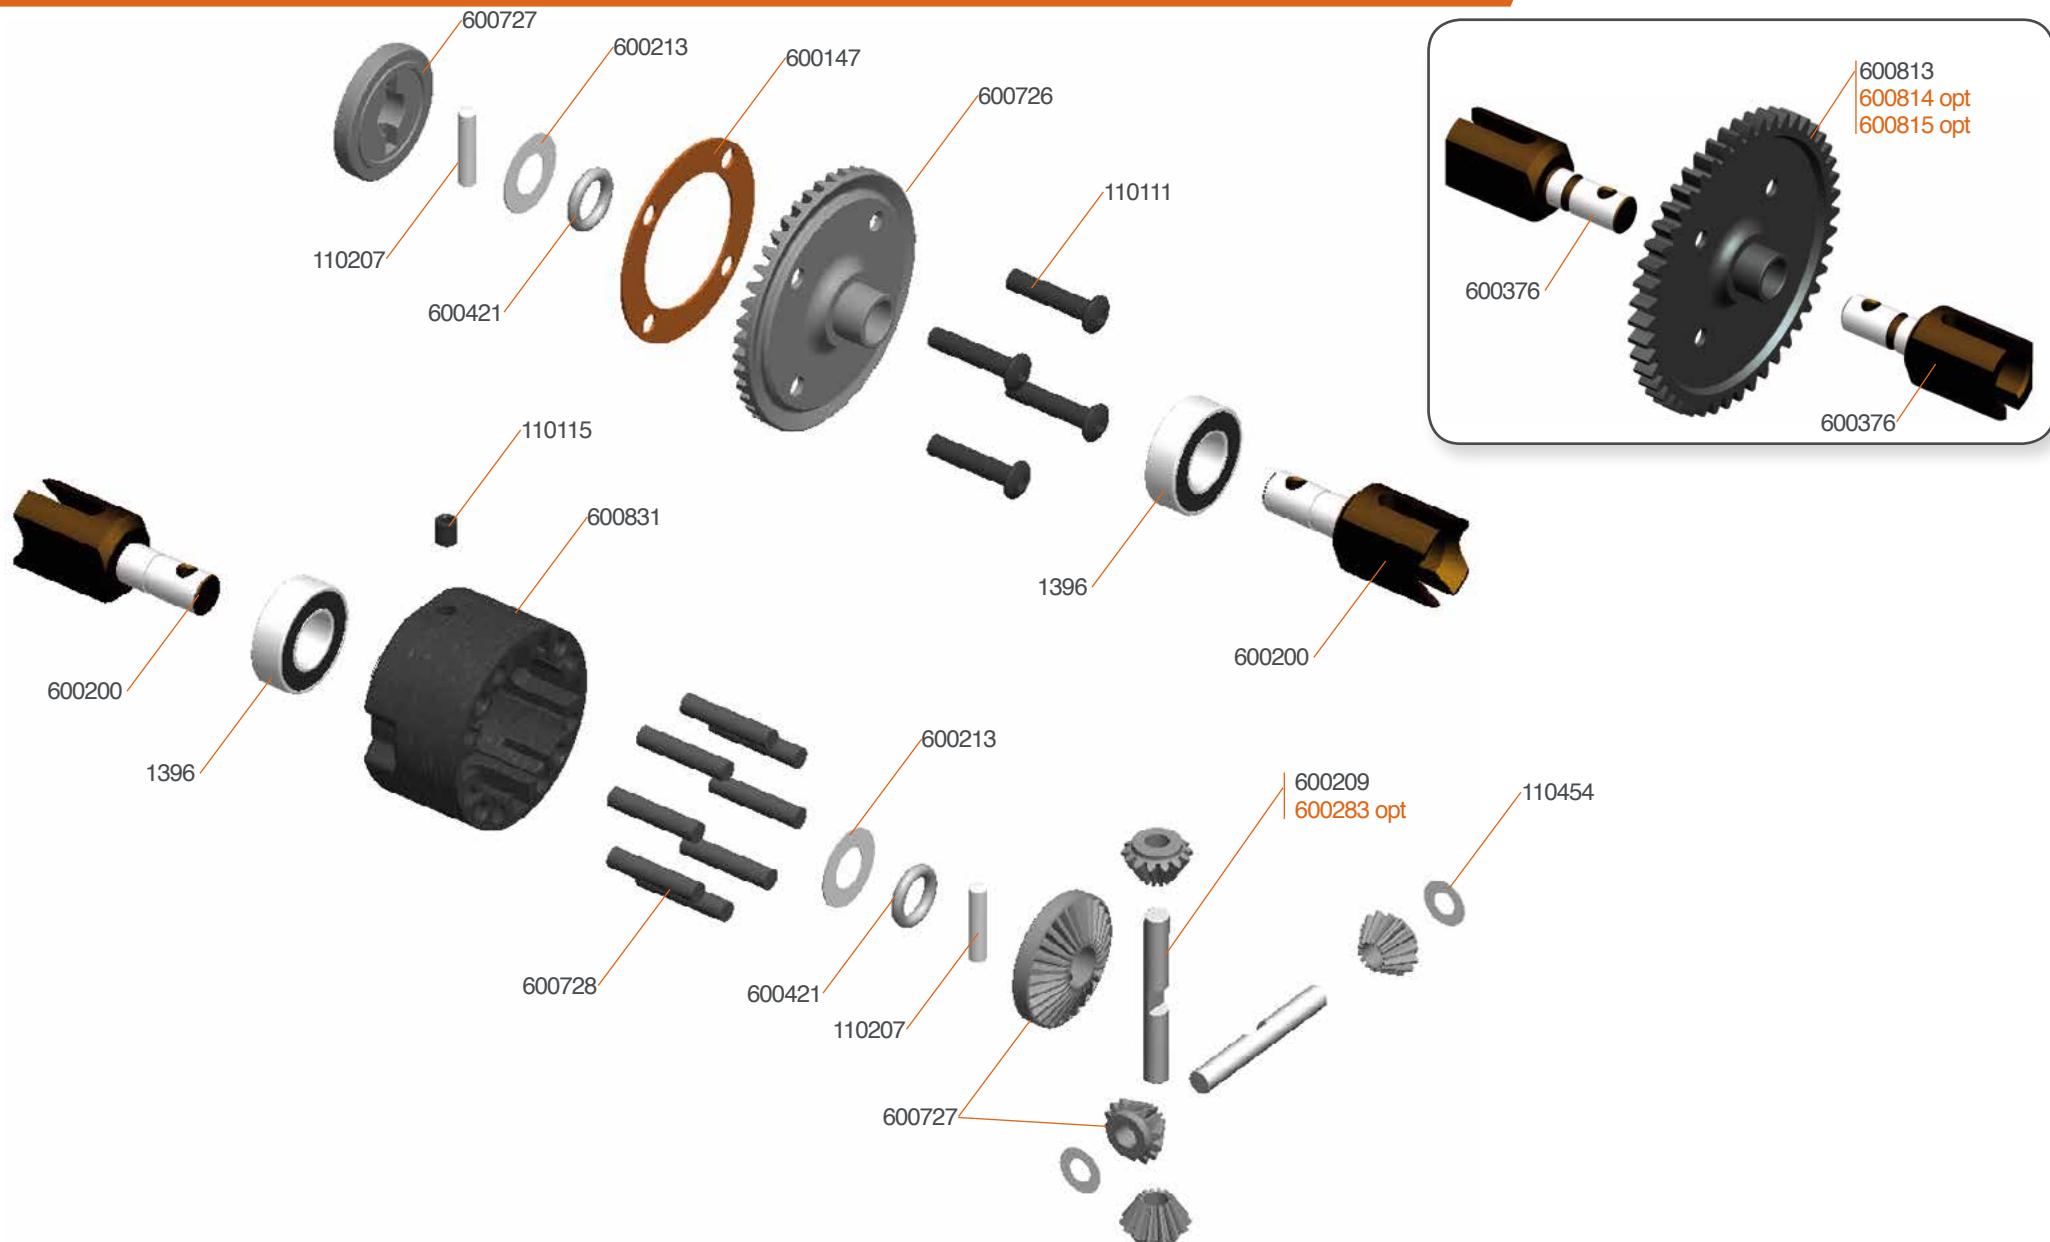


OPT

600283 Diff pin 10T alu (2)
 600814 Spur gear 47T SRX8
 600815 Spur gear 48T SRX8
 600868 Diff set 44T front / rear SRX8

600869 Diff set 46T center SRX8


CENTRAL EXPLODED VIEW

COBRA
SRX8

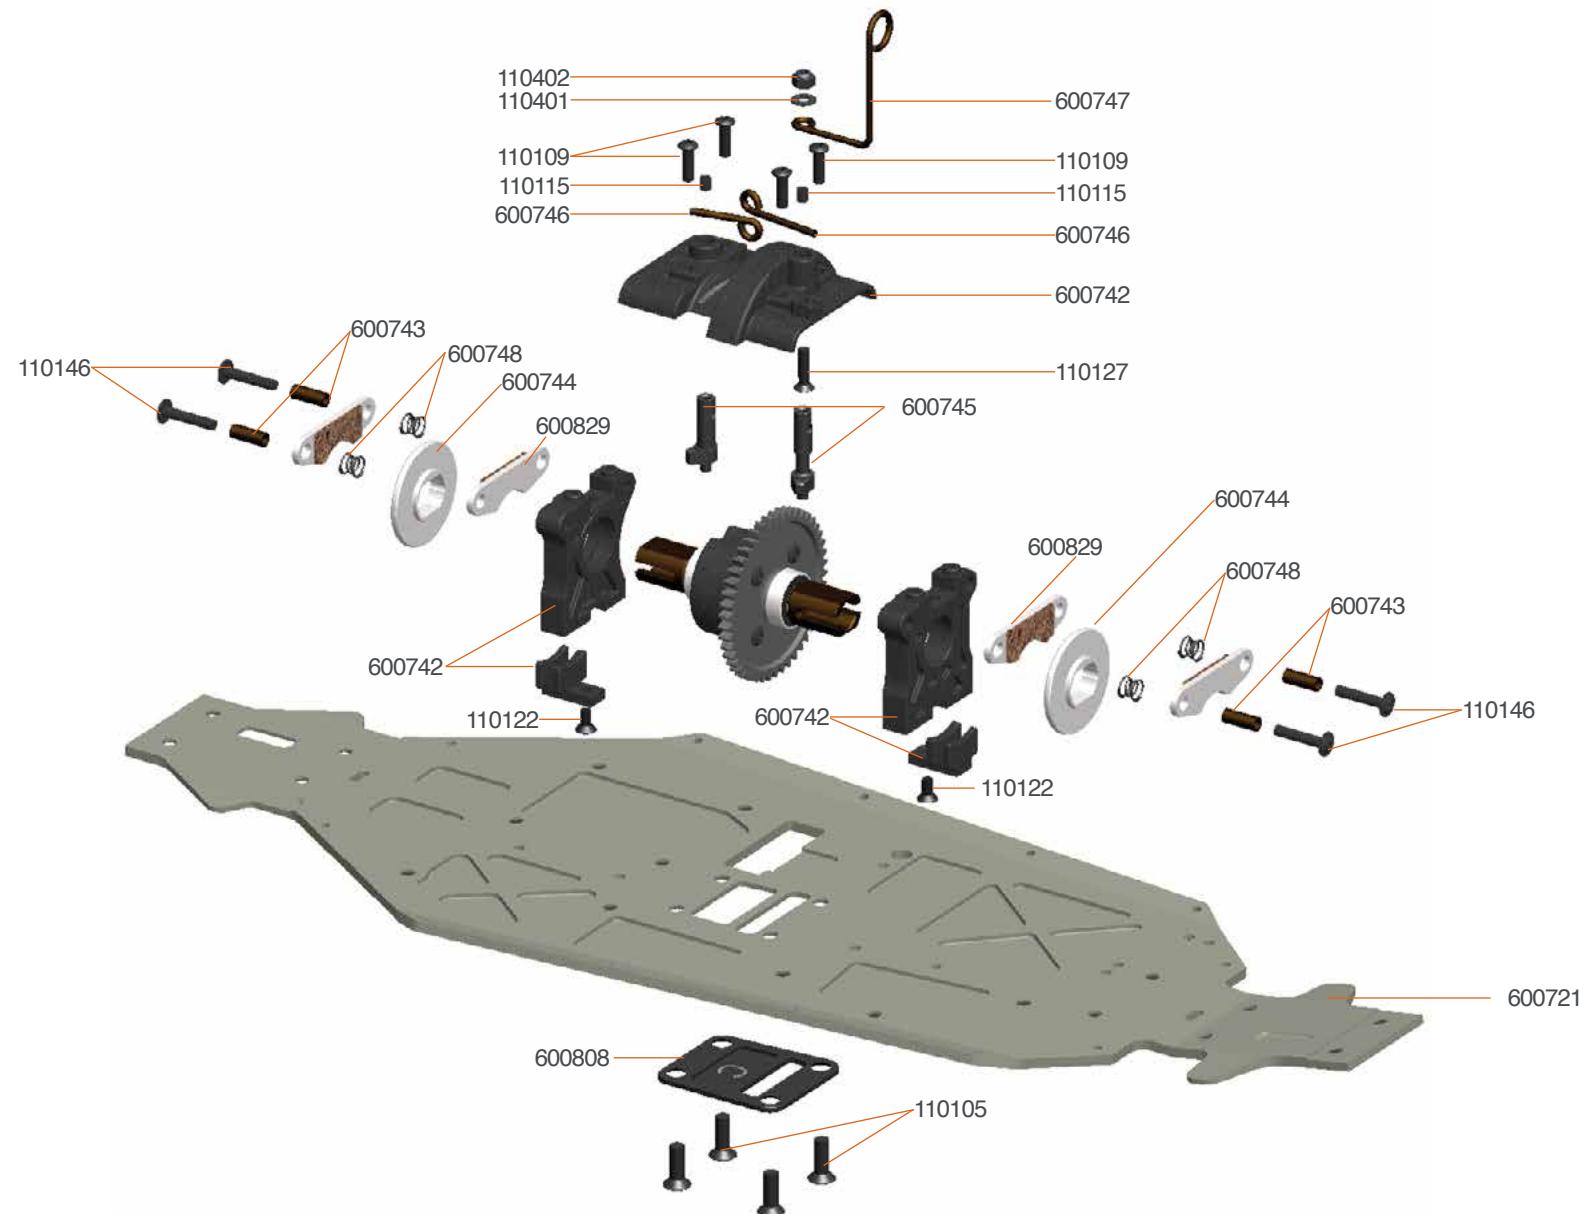

REAR EXPLODED VIEW

COBRA SRX8 

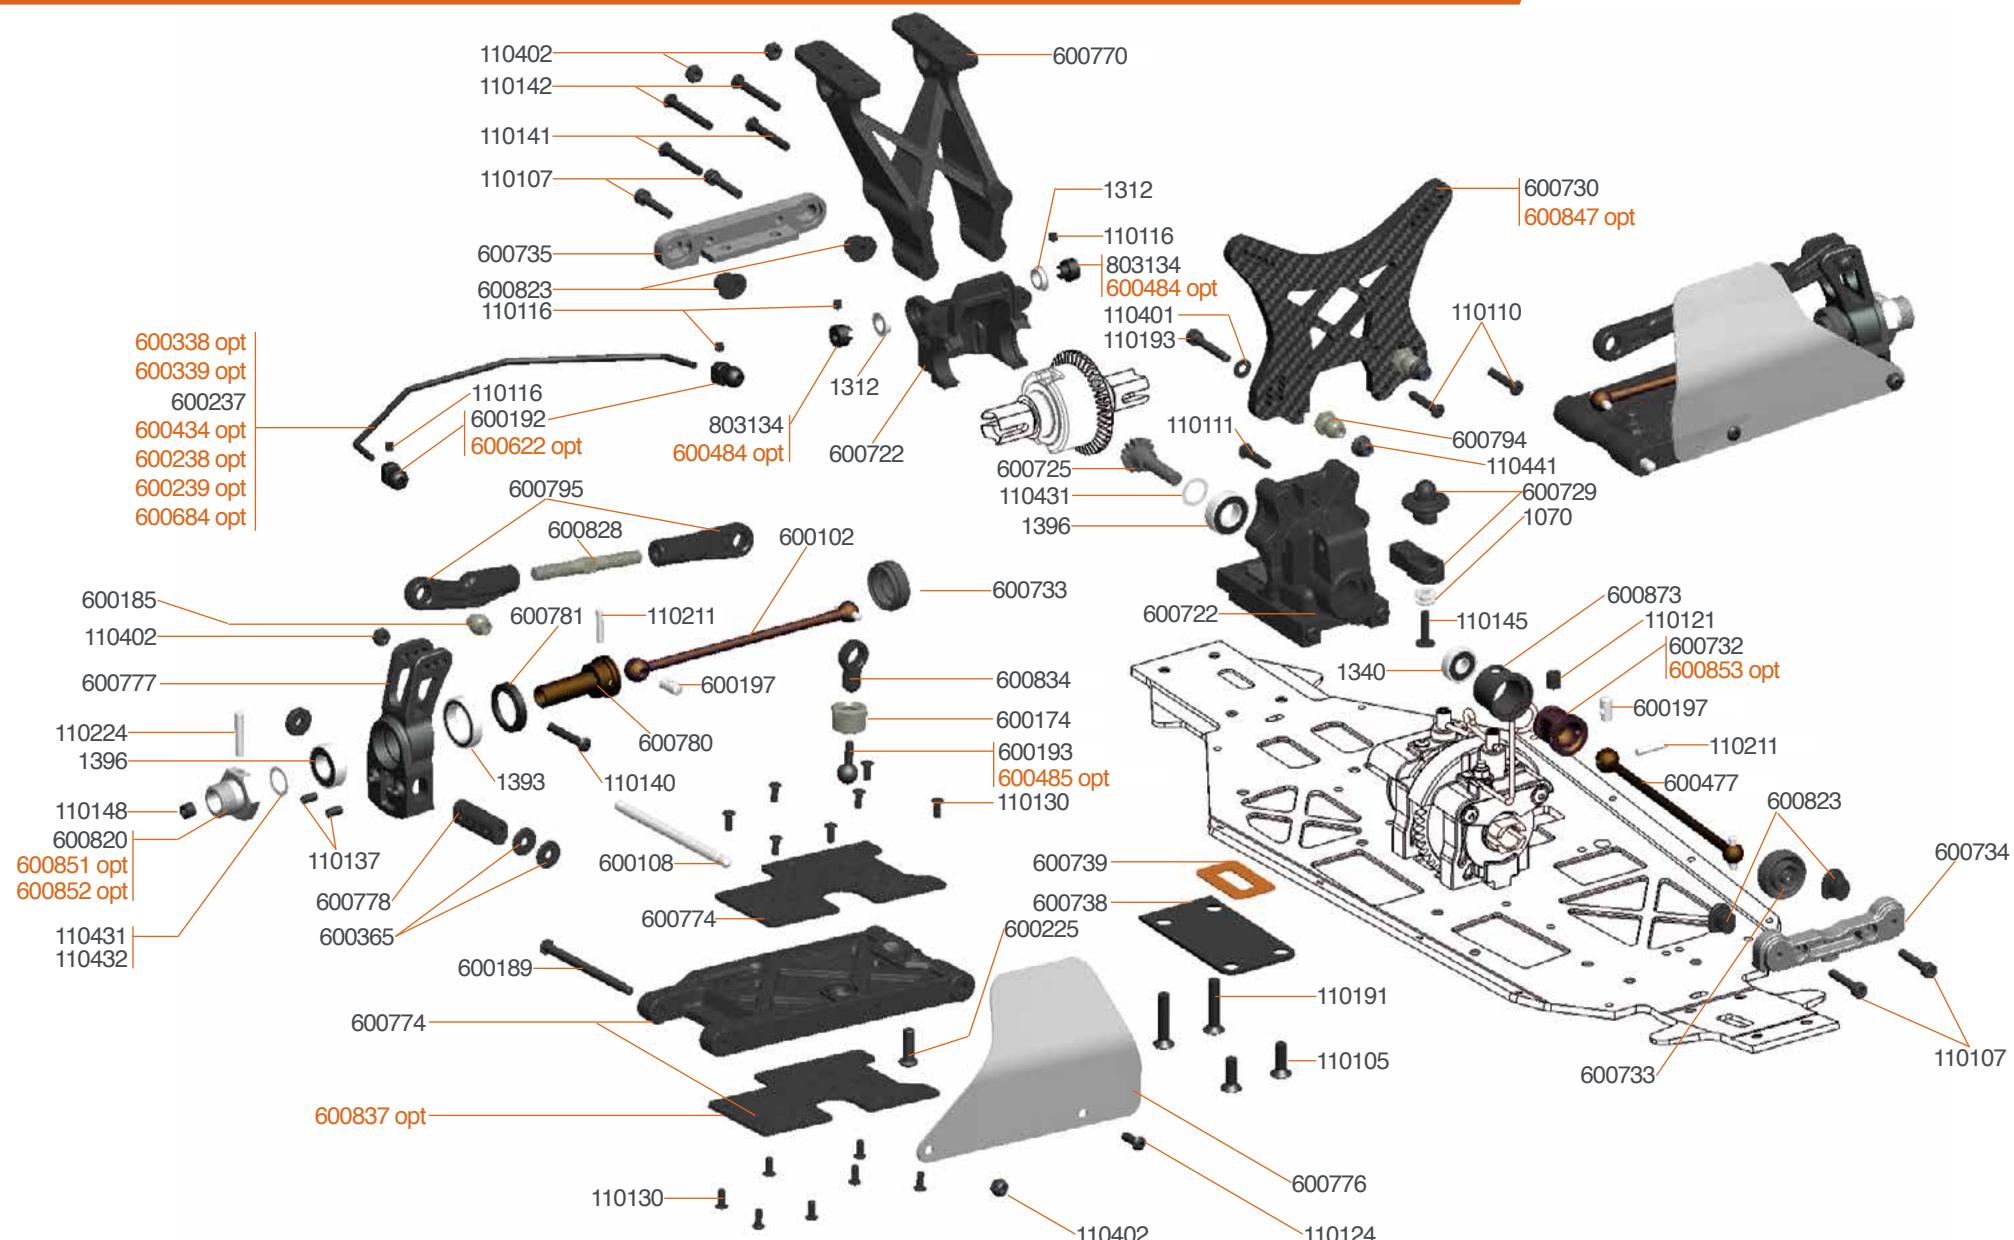

OPT

- 600338 Antiroll bar rear 1.8mm
- 600339 Antiroll bar rear 2.0mm
- 600434 Antiroll bar rear 2.4mm
- 600238 Antiroll bar rear 2.5mm


- 600239 Antiroll bar rear 2.7mm
- 600684 Antiroll bar rear 3.0mm
- 600484 Antirollbar spacer 3mm alu (2)
- 600485 Pivotball threaded anti roll bar alu (2)

- 600622 Pivotball antirollbar alu (4)
- 600837 Wishbone insert carbon RR (2+2) SRX8
- 600838 Upright weight brass 15gr (2) SRX8

- 600847 Shocktower RR alu SRX8
- 600851 Wheelhexagon 0mm light (2) SRX8
- 600852 Wheelhexagon +1mm light (2) SRX8
- 600853 Gear coupler alu SRX8

FRONT EXPLODED VIEW

COBRA
SRX8

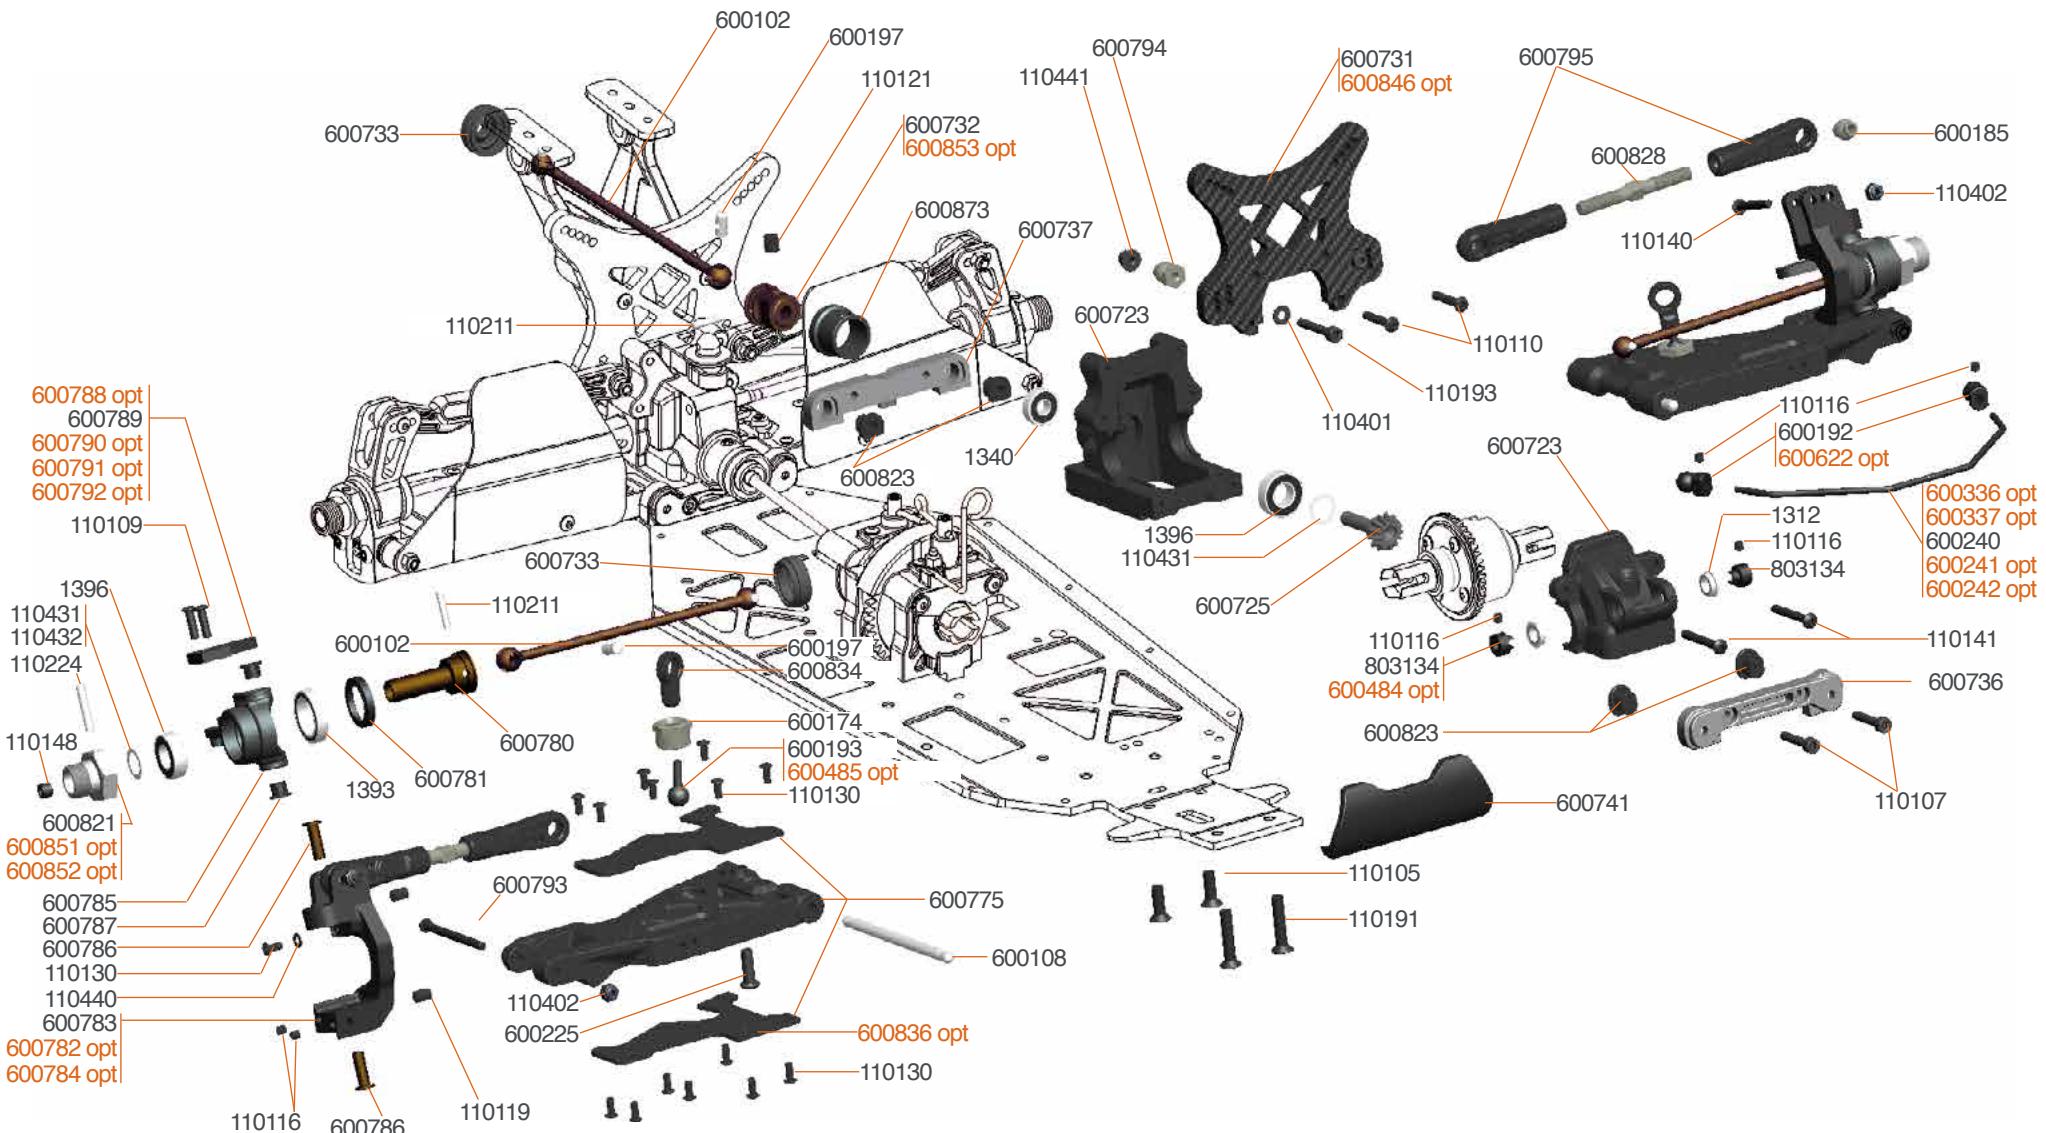

600336 Antiroll bar front 1.8mm

600337 Antiroll bar front 2.0mm

600241 Antiroll bar front 2.5mm

600242 Antiroll bar front 2.7mm

600484 Antirollbar spacer 3mm alu (2)

600485 Pivotball threaded anti roll bar alu (2)

600622 Pivotball antirollbar alu (4)

600782 C-hub 13deg L+R alu SRX8

600784 C-hub 17deg L+R alu SRX8

600788 Steering arm 0 carbon (2) SRX8

600790 Steering arm 2 carbon (2) SRX8

600791 Steering arm 3 carbon (2) SRX8

600792 Steering arm 4 carbon (2) SRX8

600836 Wishbone insert carbon FR (2+2)

SRX8

600846 Shocktower FR alu SRX8

600851 Wheelhexagon 0mm light (2) SRX8


600852 Wheelhexagon +1mm light (2) SRX8

600853 Gear coupler alu SRX8

OPT

STEERING EXPLODED VIEW

COBRA
SRX8

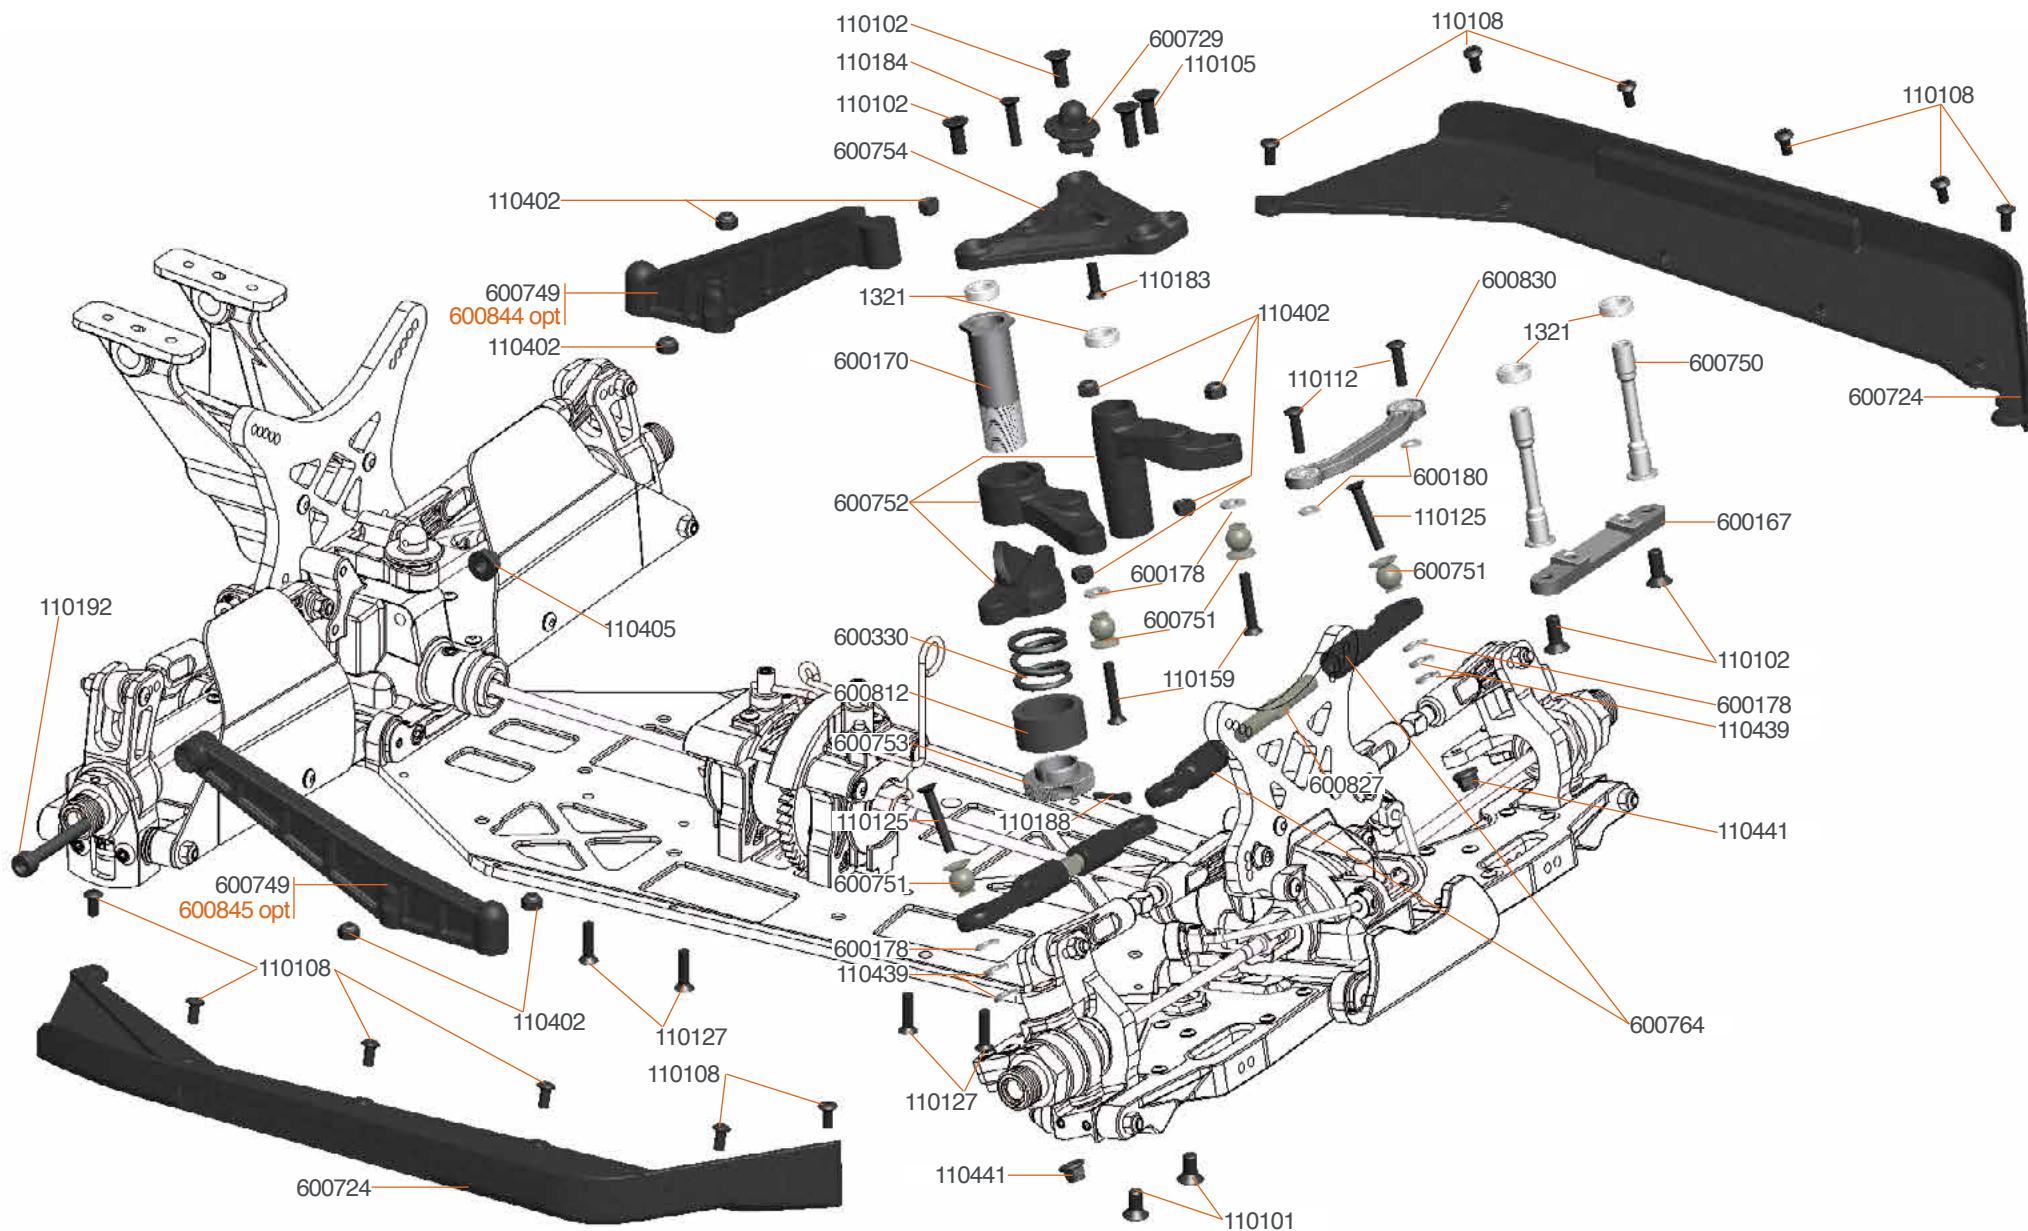

600844 Transmission brace alu FR SRX8


600845 Transmission brace alu RR SRX8

OPT

RADIO EXPLODED VIEW

COBRA
SRX8


Serpent

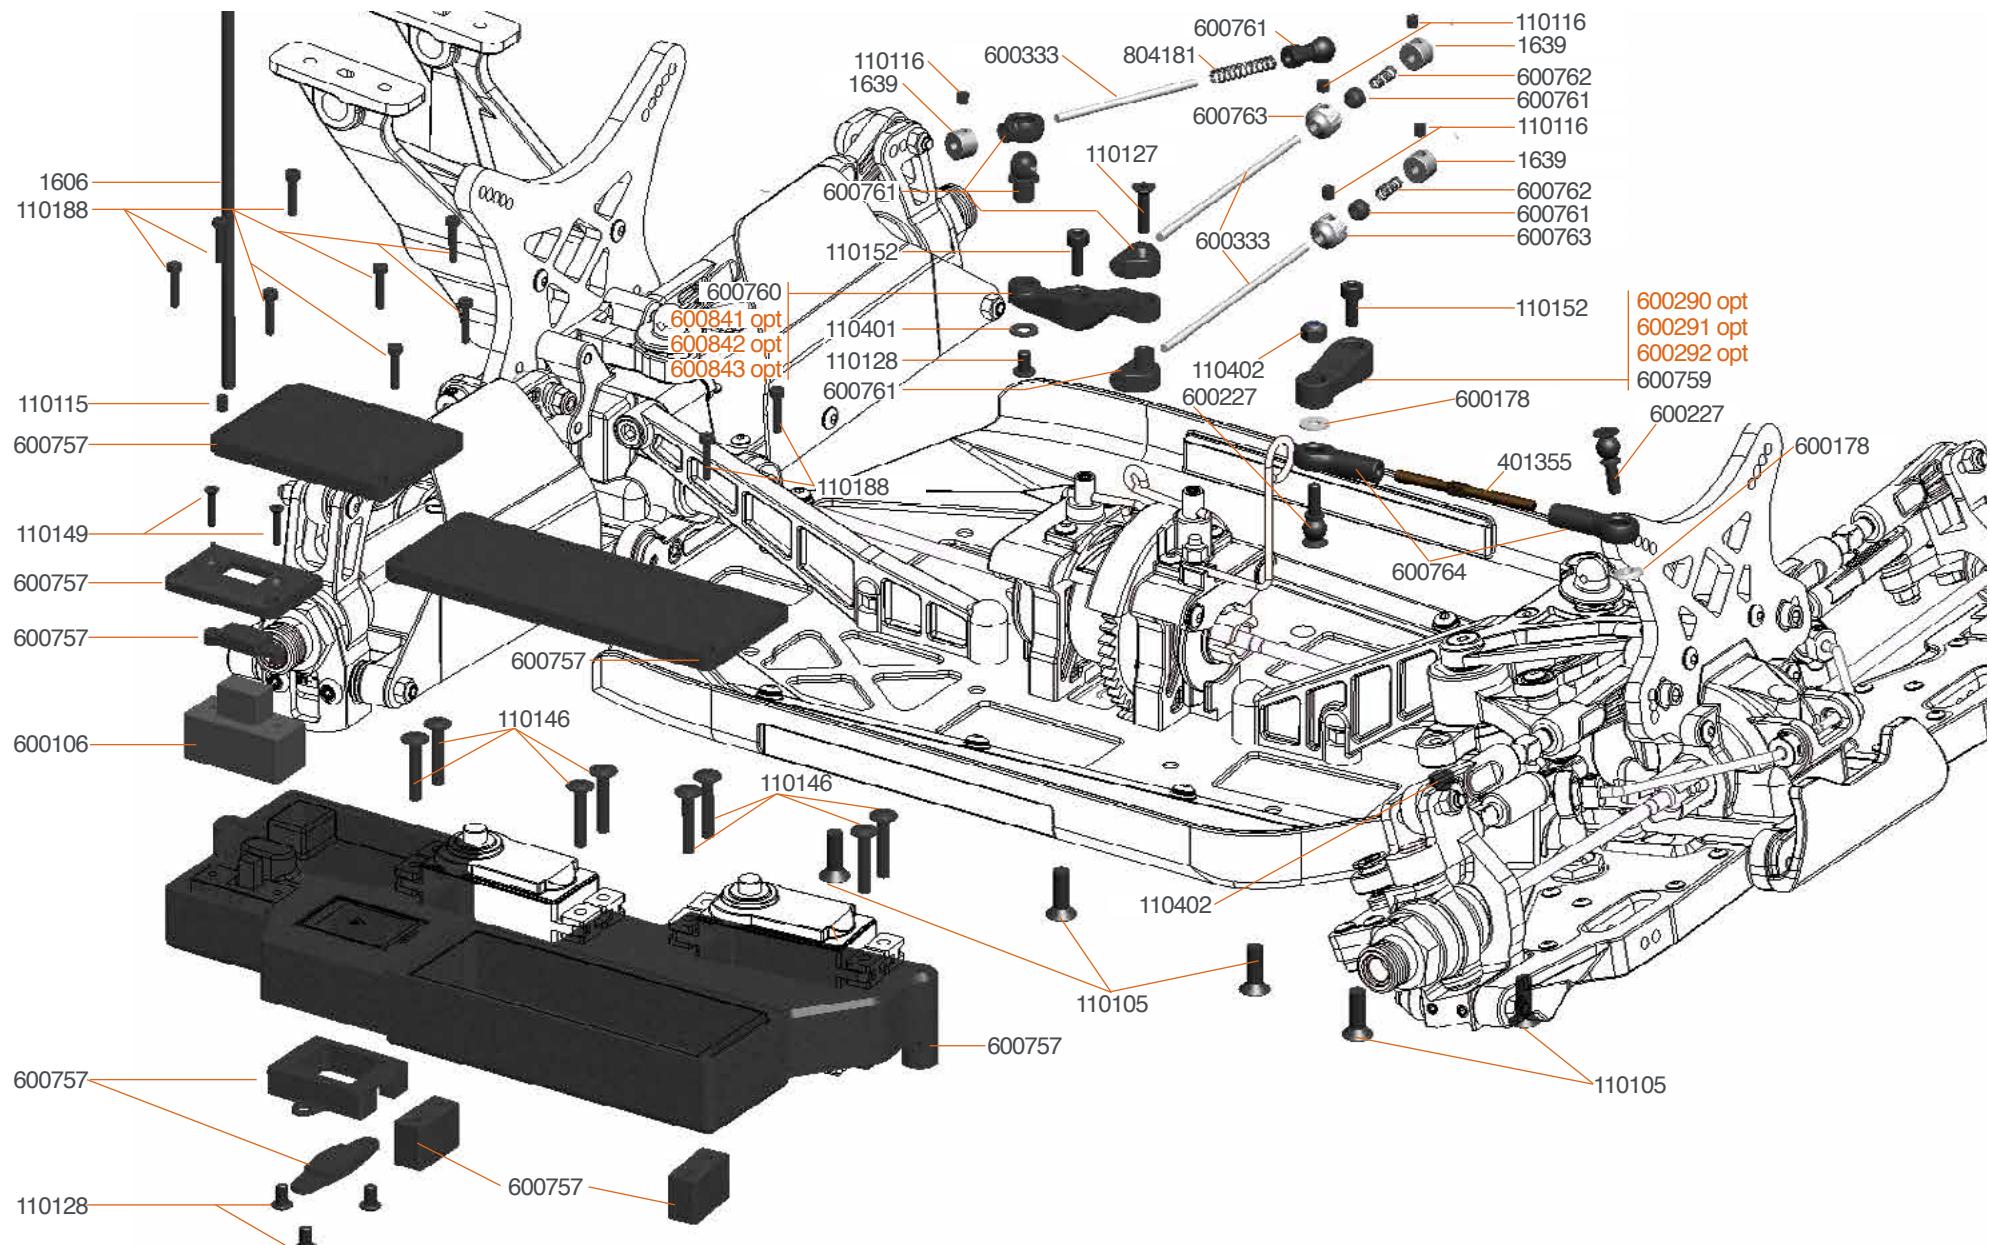

OPT
 600290 Servo lever steering 23T alu
 600291 Servo lever steering 24T alu
 600292 Servo lever steering 25T alu

600841 Servo lever throttle alu 23T SRX8
 600842 Servo lever throttle alu 24T SRX8
 600843 Servo lever throttle alu 25T SRX8

600758 Radio + battery box skin carbon look SRX8

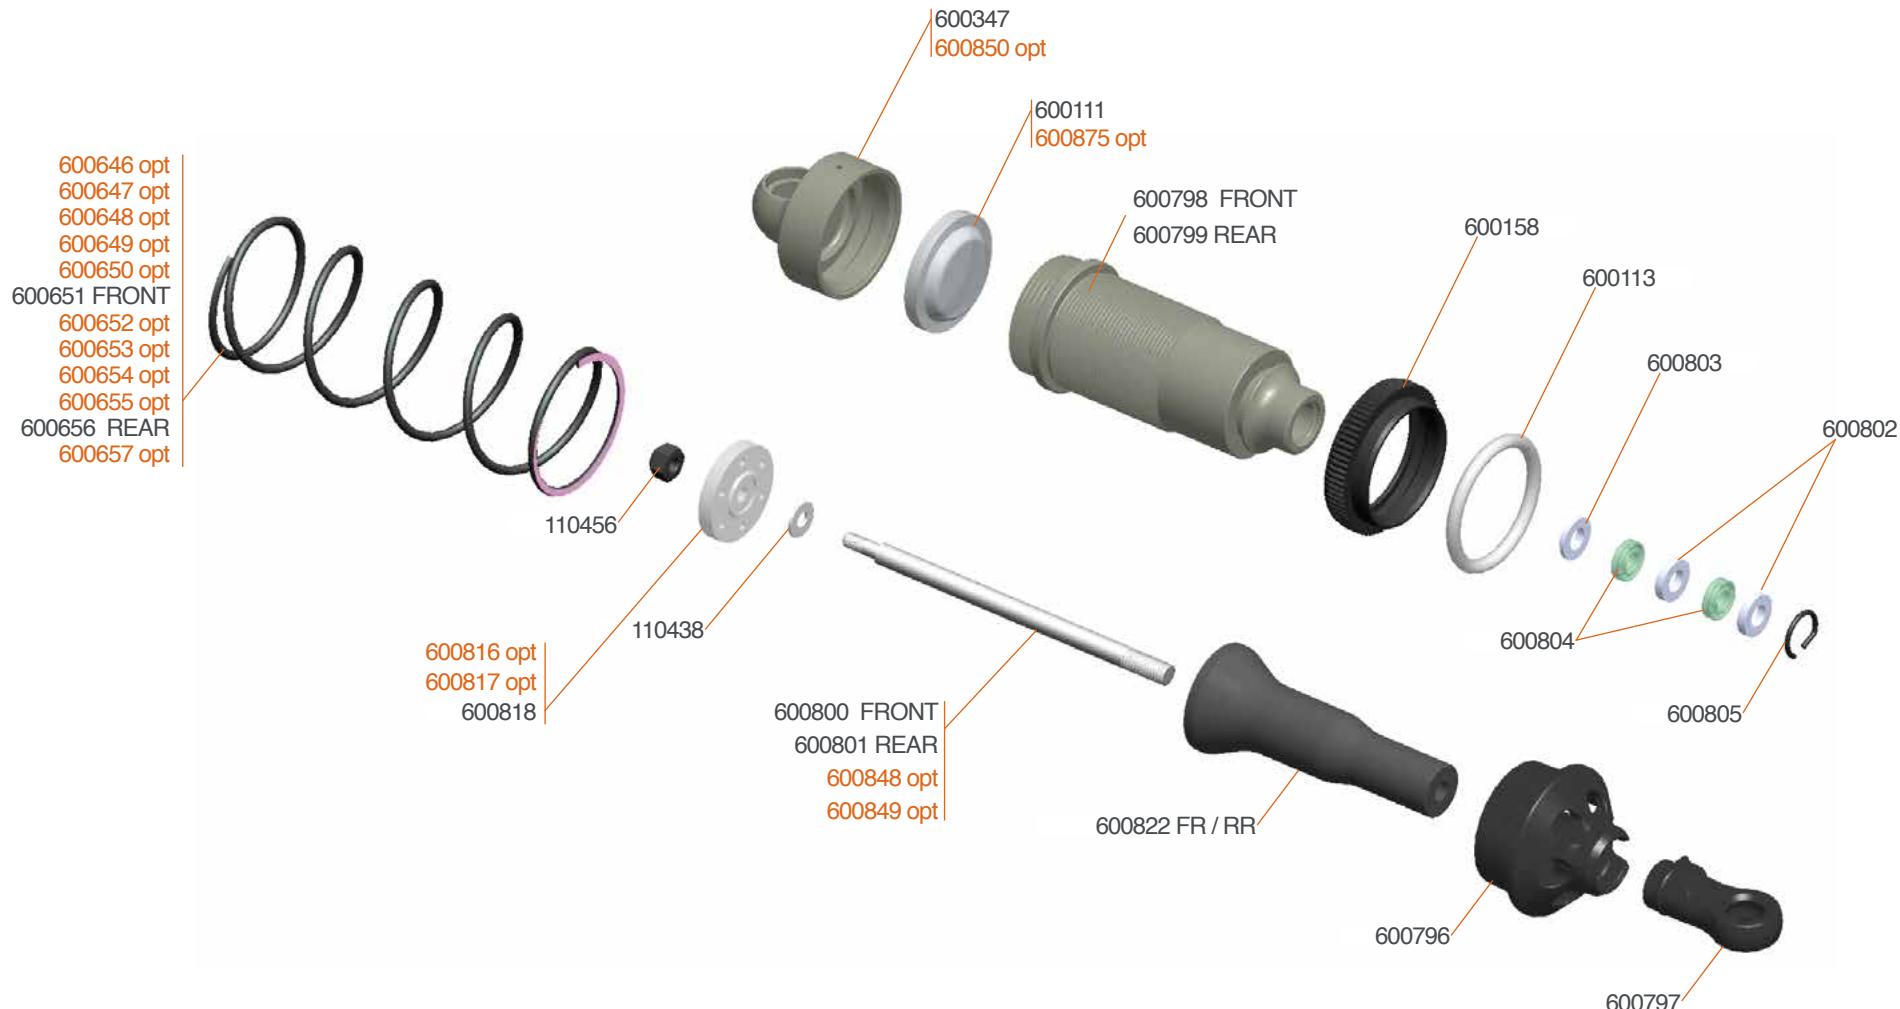


OPT

600646 Shockspring FR orange V2 (2)
 600647 Shockspring FR red V2 (2)
 600648 Shockspring FR blue V2 (2)
 600649 Shockspring FR purple V2 (2)
 600650 Shockspring FR green V2 (2)
 600658 Shockspring set FR V2 (6x2)

600652 Shockspring RR orange V2 (2)
 600653 Shockspring RR red V2 (2)
 600654 Shockspring RR blue V2 (2)
 600655 Shockspring RR purple V2 (2)
 600657 Shockspring RR green V2 (2)
 600659 Shockspring set RR V2 (6x2)

600357 Membrane webbed silicone (4)
 600816 Shock piston blank (4) SRX8
 600817 Shock piston 5 holes (4) SRX8
 600819 Shock piston 8 holes (4) SRX8
 600848 Shock shaft FR TiN coated (2) SRX8
 600849 Shock shaft RR TiN coated (2) SRX8

600850 Shock cap pro hard coated (2) SRX8
 600870 Shock set Pro front (2) SRX8
 600871 Shock set Pro rear (2) SRX8
 600875 Shock top gasket (4) SRX8

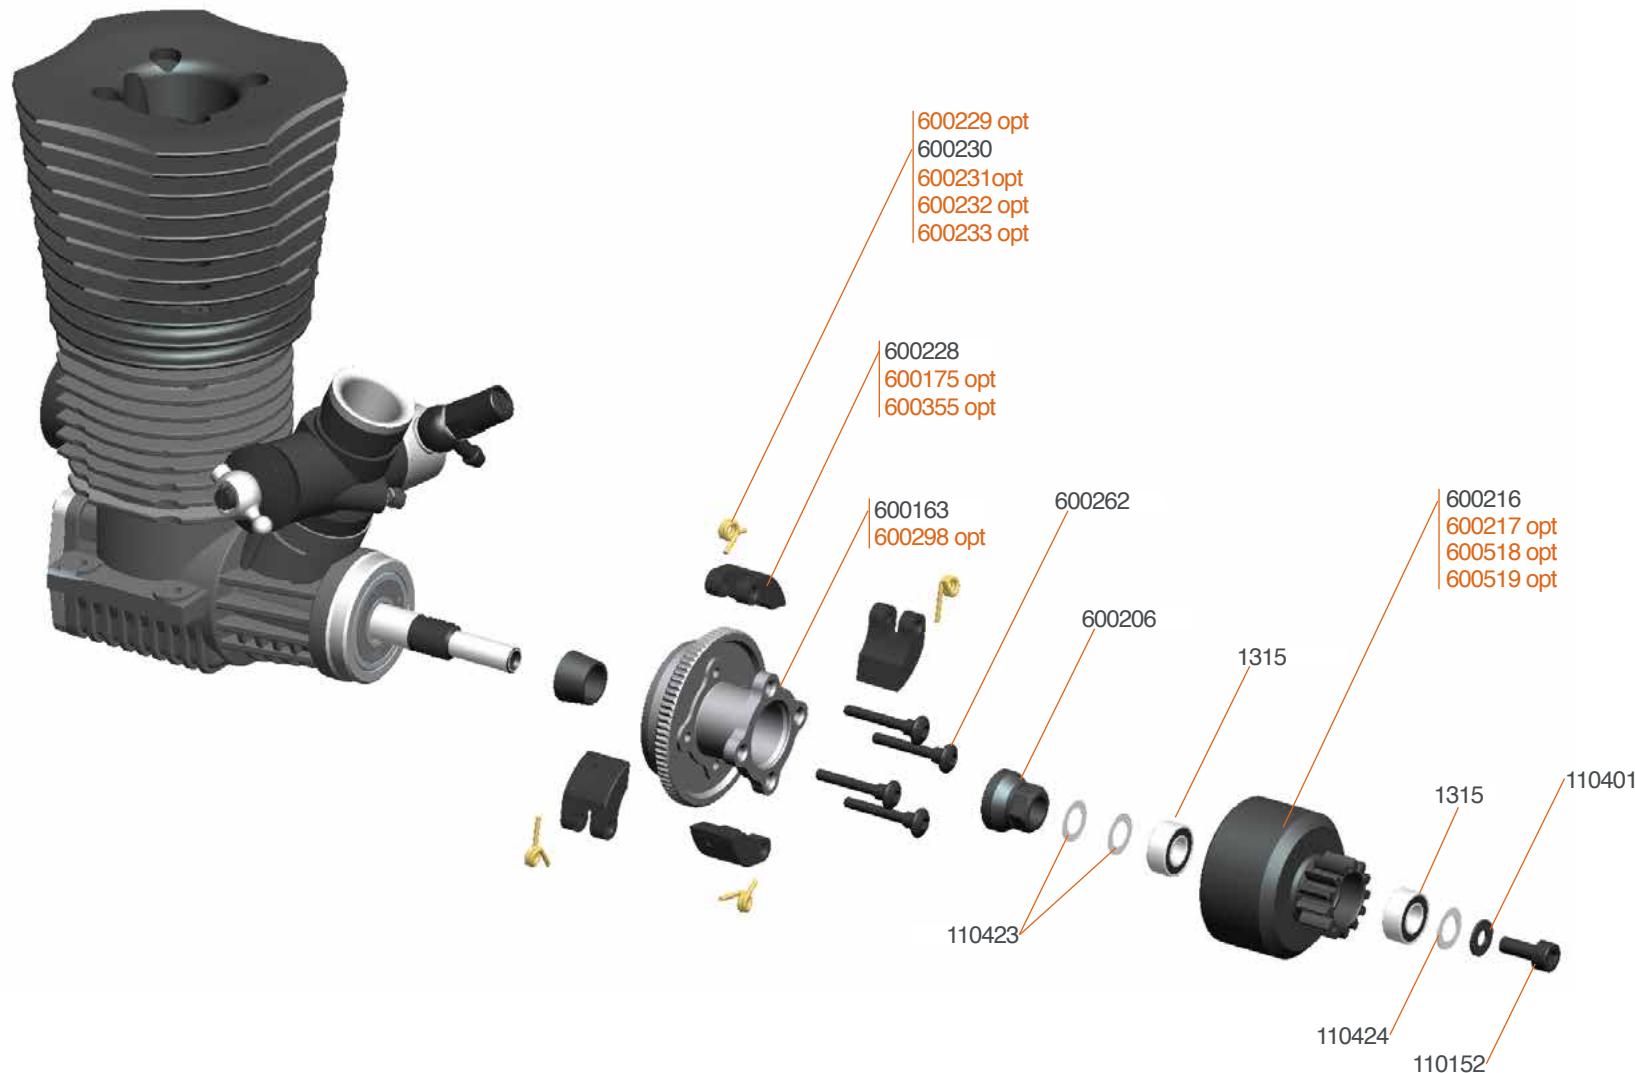


600518 Clutch bell 13T vented
600217 Clutch bell 14T
600519 Clutch bell 14T vented

600229 Clutch spring soft 0.85mm (4)
600231 Clutch spring hard 0.95mm(4)
600232 Clutch spring X hard 1mm(4)


600233 Clutch spring set (4x4)
600175 Clutchshoe alu (4)
600355 Clutch shoe set Alu / Carbon (2+2)

600244 Clutch-set alu / carbon
600298 Flywheel steel

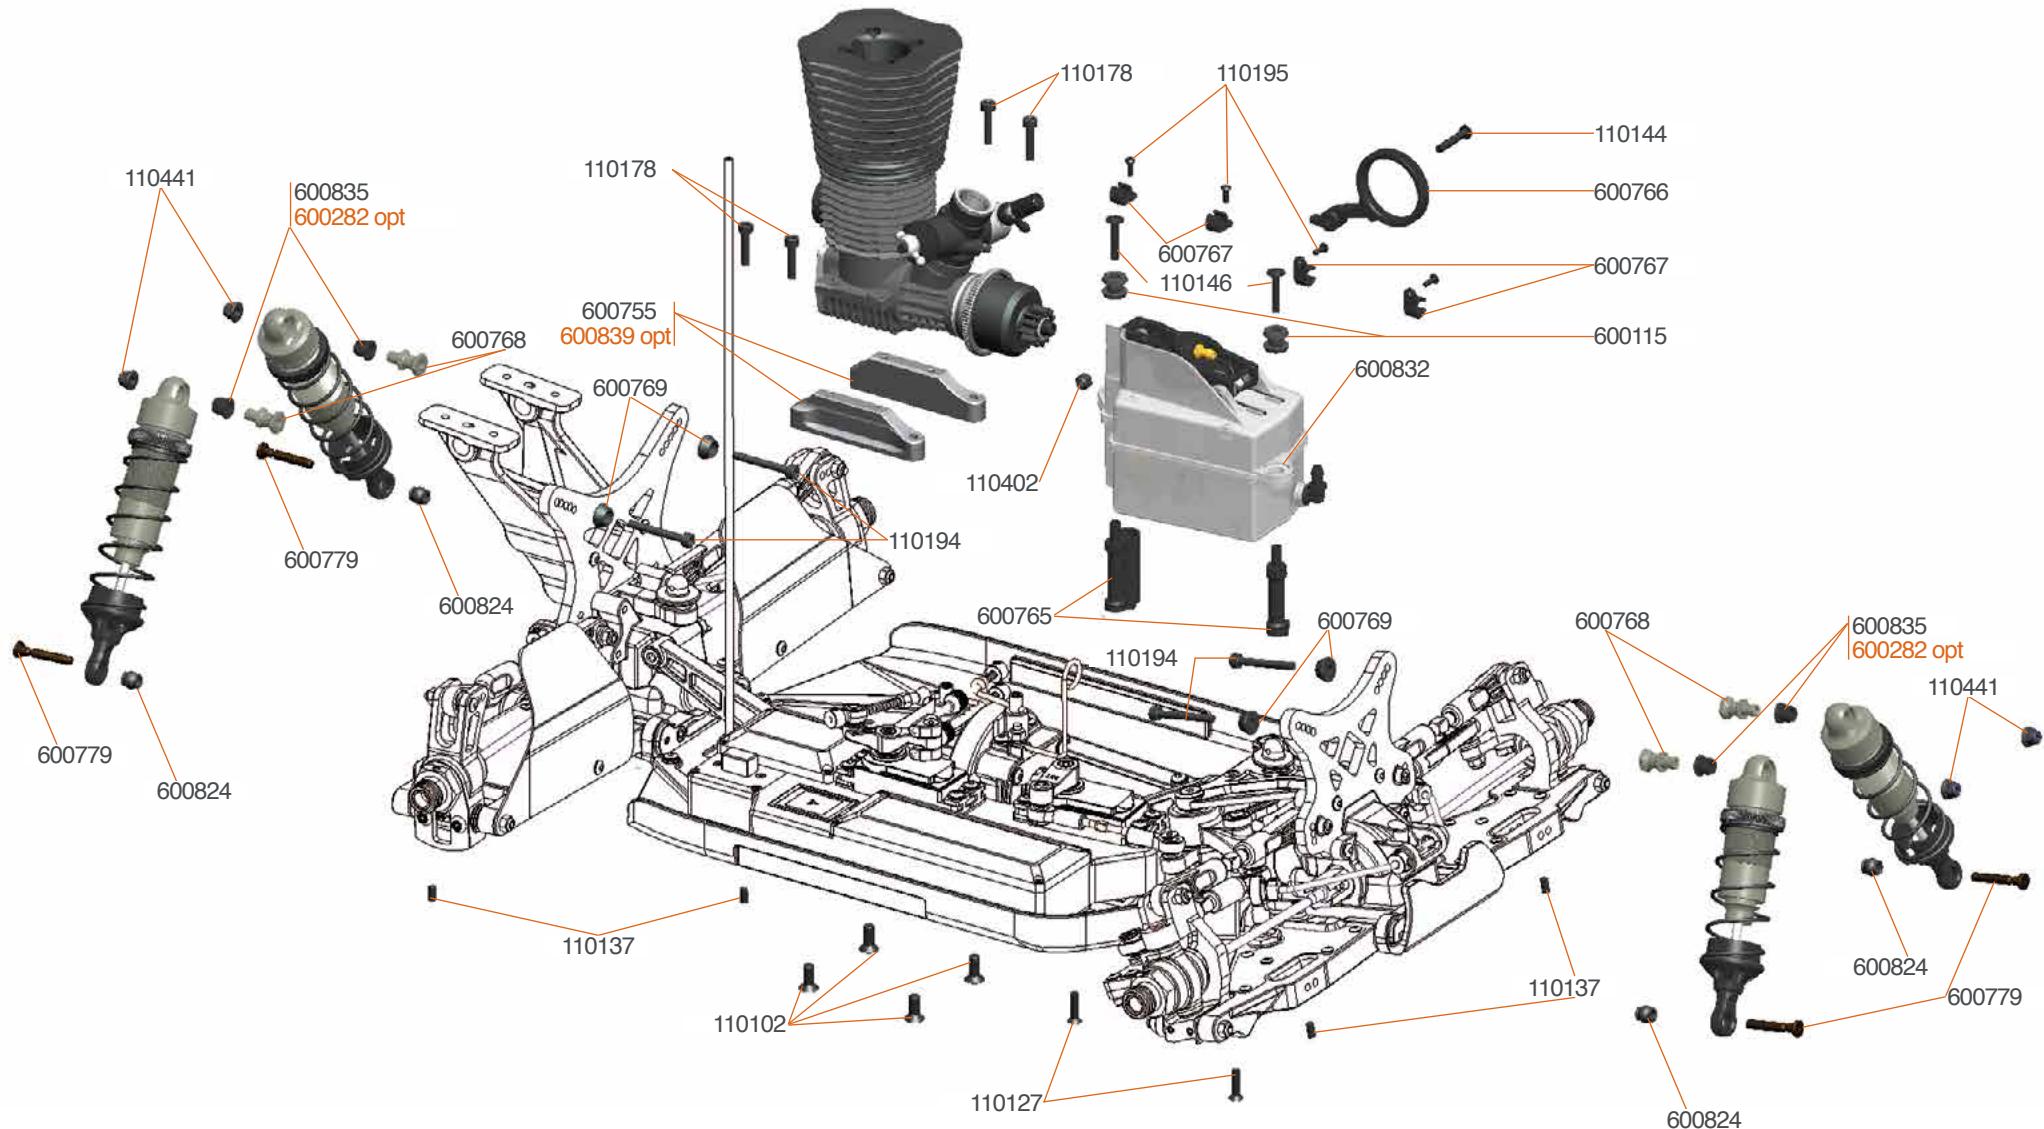

OPT

600282 Shock-pivot bushing delrin (4)
600839 Motormount mono alu SRX8

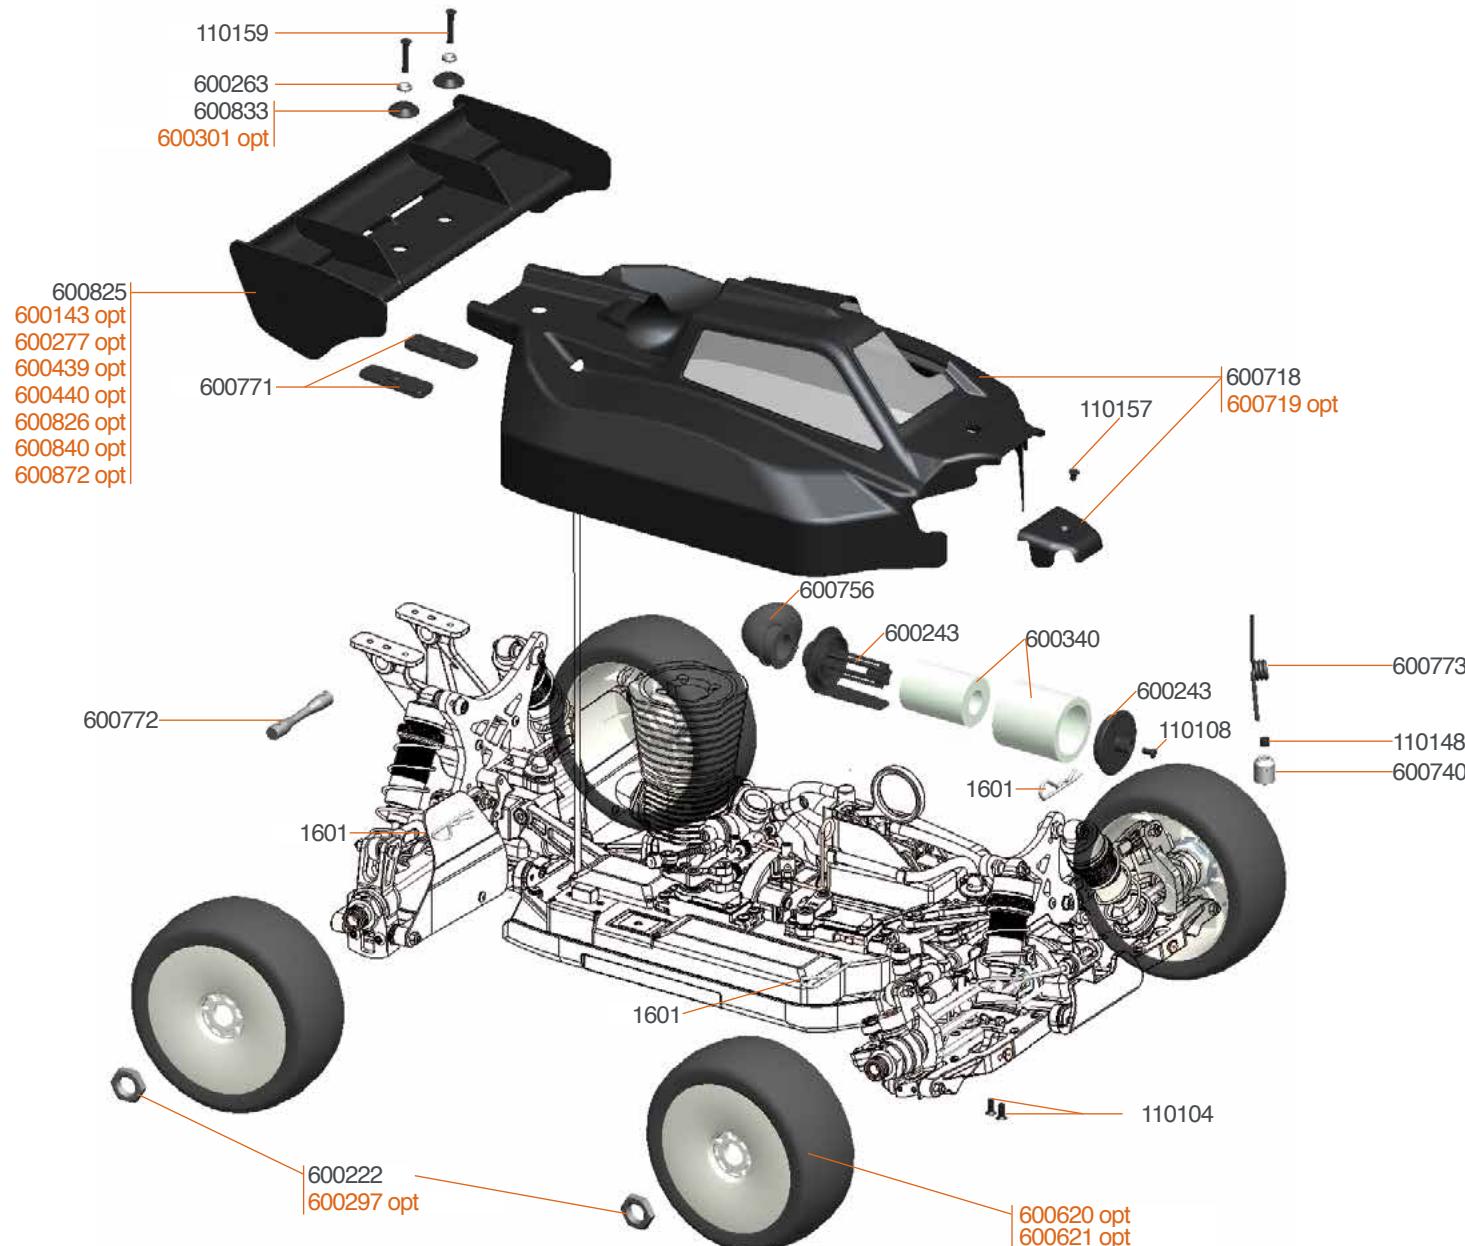

OPT
600297 Wheel-nut 17mm flanged/light (4)
600143 Wing white nylon
600277 Wing black nylon

600439 Wing white low 811
600440 Wing black low 811
600719 Body SRX8 High Downforce

600826 Wing straight MD white 1/8
600840 Wing lexan HD with gurney 1/8
600872 Wing gurney

600620 Rim 1/8 buggy White (4)
600621 Rim 1/8 buggy Yellow (4)

TEAM SERPENT NETWORK

SRX8 SPARE PARTS www.serpent.com/600017/spares/



SRX8 OPTIONALS PARTS www.serpent.com/600017/Optionals/



SERPENT TOOLS www.serpent.com/product/Tools/



SERPENT MERCHANDISING www.serpent.com/product/Merchandising/



SERPENT WEBSITE AND BLOG

www.serpent.com
www.teamserpent.com
www.dragon-rc.com

SERPENT PROMO PAGES <http://promo.serpent.com>

SERPENT FACEBOOK GROUPS <http://promo.serpent.com/indexfb.htm>

SERPENT ADVANCED MANUALS <http://promo.serpent.com/sam/>

SERPENT SOCIAL MEDIA

-  www.facebook.com/SerpentMRC
-  www.youtube.com/user/SerpentMRC
-  www.twitter.com/SerpentMRC
-  www.plus.google.com/+SerpentModelcars/posts
-  www.weibo.com/teamserpent





COBRA

SRX8




the racing experience



Manual Cobra SRX8 #82806-1