



INSTRUCTION MANUAL
& REFERENCE GUIDE



Welcome to Serpent

You are now part of the worldwide network of Serpent drivers, which gives you superior technical support and access to many benefits that only Serpent drivers can enjoy.

The Serpent Spyder offers state of the art specifications and leads the way in 1/10 buggy design, using all the knowledge we have gathered since 1980. Continuously pushing the performance envelope, Serpent's engineers have added many new and innovative features that can help take your Serpent Spyder into the winner's circle.

INSTRUCTIONS

Serpent's long tradition of excellence extends to their instruction manuals, and this instruction manual is no exception. The easy-to-follow layout is richly illustrated with 3D-rendered full-color images to make your building experience quick and easy. A default set-up sheet is added to have a good base set-up. Following the instructions will result in a well-built, high-performance racecar that will soon be able to unleash its full potential at the racetrack.

This instruction manual has been divided into sections that will logically lead you through the assembly process of your Serpent Spyder. Follow the assembly steps in the order presented to ensure that no problems occur during assembly. Each step indicates all the fasteners and small

parts used. Bag numbers identify the kit bag(s) that contains the appropriate parts.

EXPLODED VIEWS AND PARTS LIST

In the back of this manual it is possible to find the exploded views for the Serpent Spyder. These exploded views show the standard parts of a particular assembly step along with the Serpent part number.

The parts list include the optionals, hardware and merchandising. It indicates the part number and name of each part for easy reference when ordering.

A full partslist in excel can be downloaded from the car-page on www.serpent.com.

Below you will find some information on safety; read those well before using the car. Also some info on how to use the manual best.

The worldwide network of Serpent drivers, dealers and distributors will help you to get the maximum out of your Serpent Spyder.

Join the free Serpent forum for support, use our social media like Twitter and Facebook to follow all info and meet other Serpent drivers, watch the Serpent Youtube channel for video's, the Serpent Teamblog for race reports around the globe and the Serpent website for all other info and news.

Enjoy racing !

Team Serpent

SAFETY

Read and take note of the 'Read this First section' before proceeding to assemble the car-kit. This car-kit is intended for persons aged 16 or older.

CUSTOMER SERVICE

Serpent has made a strong effort to make this manual as complete and clear as possible.

Additional info may be published in our website: www.serpent.com or you may ask your dealer or the Serpent distributor for advice, or email Serpent direct: info@serpent.com

The Serpent Facebook, Twitter and Youtube pages give additional means of support and communications.

INSTRUCTIONS, HOW TO USE

The kit includes bags, with bag numbers, which refer to the same step in the manual. Open only the indicated bag(s) per step and finish that part of the assembly.

Remaining parts will be needed later on in the assembly process.

SETUP

In many assembly steps you mount specific parts that suit the default set-up. We advise to keep the separate default set-up sheet alongside the manual, during all assembly.

Other finetuning of the set-up, must be done at the track.

CONTENTS

FRONT DIFFERENTIAL ASSEMBLY	4
REAR DIFFERENTIAL ASSEMBLY	5
REAR TRANSMISSION ASSEMBLY	6
MID TRANSMISSION ASSEMBLY	7
REAR ASSEMBLY	11
FRONT ASSEMBLY	14
SHOCKS ASSEMBLY	19
FINAL ASSEMBLY	23
REFERENCE GUIDE	25
OPTIONALS AND MERCHANDISING	32

組立の前に

本品は競技用ラジコンカーシャシーキットです。
RC装置、動力装置、バッテリーなどは付属しません。

組立には経験や専門知識、専用工具などが必要となる場合がありますので、工具類の取扱にはご自身を含め、周辺の方々にも危険が及ばないように注意して下さい。

組立に不慣れな場合は、詳しい方にお尋ねください。

組立中、組難い箇所に遭遇した場合は無理に組まずいちど取扱説明書をよく読み、パーツ形状、向きなどを再確認して下さい。それでもうまく組めない場合はお近くの詳しい方、ご購入された専門店、もしくは弊社までお問合せ下さい。


回転部分の巻き込みには特に注意して下さい。

走行はラジコンカー専用のサーキットにて走行させて下さい。

RC装置など、周辺機器の取扱にも注意して下さい。

取説の見方

下記シンボルマークにはそれぞれの意味があります。それぞれの意味に従い正しく組立ます。

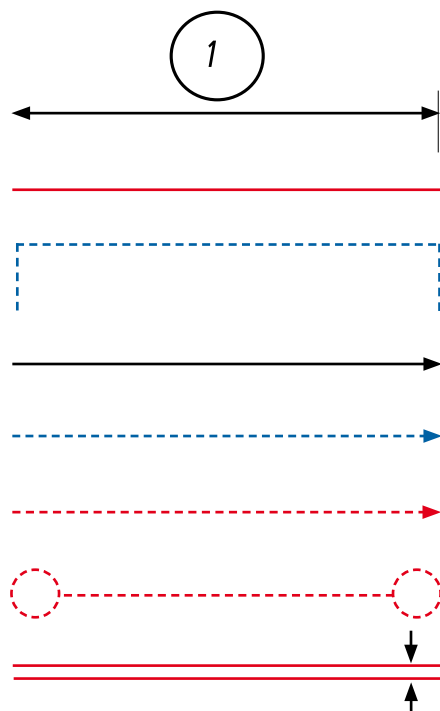

指示された部品を番号順に組立ます。

指定の長さに組みます。

線で結ばれたパーツ同士を組みます。

ラインで囲まれたパーツ群を始めに組みます。

矢印の方向へ動かします。

矢印で指示された部分へ接着します。

矢印で指示された部分へ挿入します。

囲まれたパーツ同士を組みます。

矢印部分の距離が指定の長さになるよう組みます。



グラファイトグリスを塗ります。



シリコングリスを塗ります。



ネジロック剤を塗ります。



シリコンオイルを塗ります。


※ケミカル類は必要に応じてご用意下さい。

フロントデフの組立

STEP

1

BAG
FRONT
DIFF

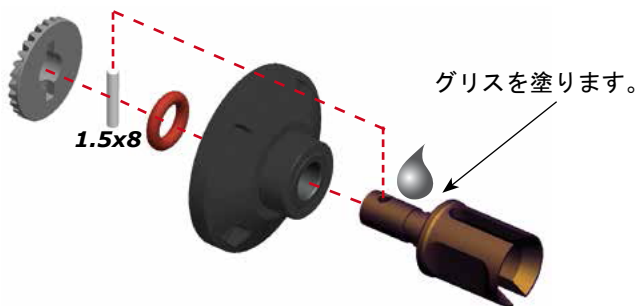


ピンは図の位置から差し込みます。



STEP

2

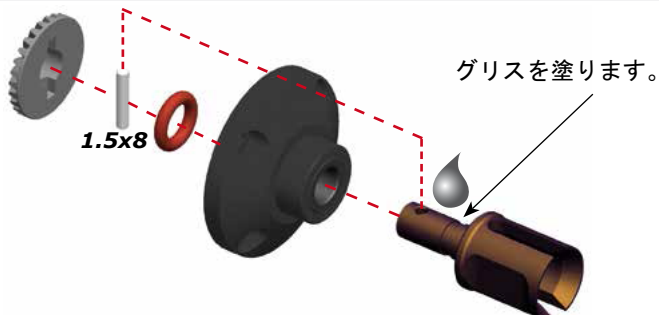

STEP

3


3.1

瞬間接着剤などでフランジを固定します。フランジにテーパーがある方がプーリー側になります。

プーリーは上下対象ではありません。固定用の4箇所ある穴が表、裏で大きさが異なります。3.2では穴の大きい面が上を向きますので注意して下さい。



3.2

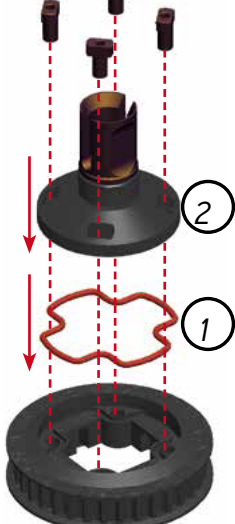


※ナットが硬くて入らない場合は反対側からM2のビスを少しずつ締め込み、ナットをデフカバーへ引き込みます。

3.3

ベベルギア浸る程度だけシリコンオイルを入れます。



3.4

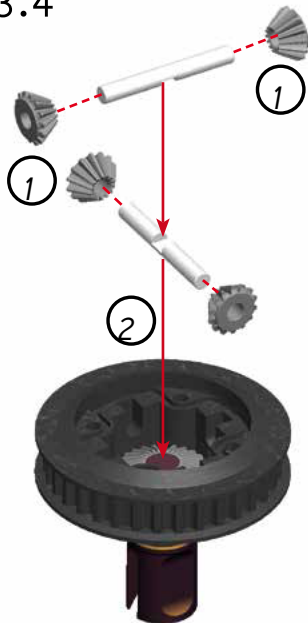

STEP

4

4.1

シリコンオイルを入れる前にOリングを取りつけます。

シリコンオイルはクロスピンが浸る程度だけ入れます。オイルの入れすぎに注意して下さい。



オイルを入れた下図の状態で重量が19.15gを超えないようにして下さい。





4.2

M2x10



M2のビスは締め込み過ぎに注意して下さい。

リアデフの組立

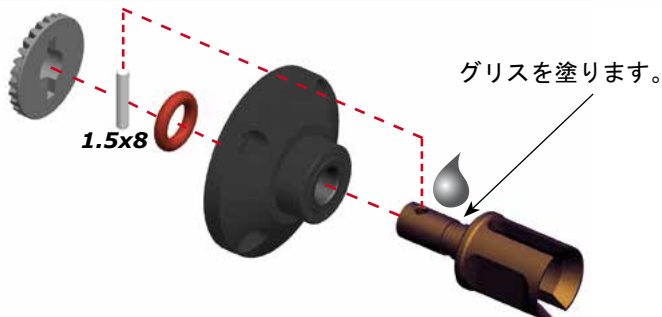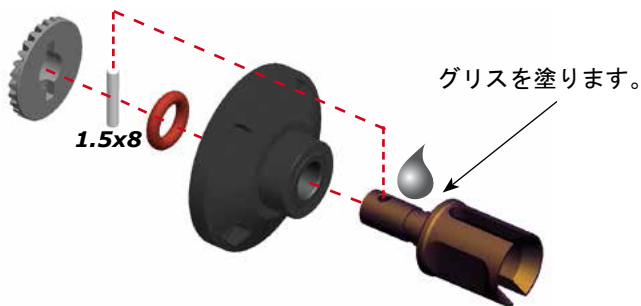

ピンは図の位置から差し込みます。




STEP
5

BAG
REAR
DIFF

STEP
6


7.1

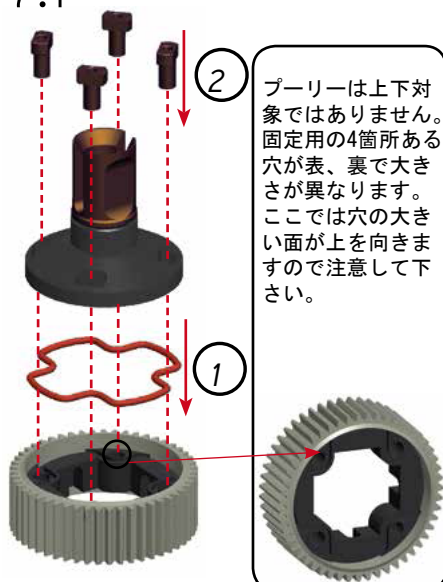

7.2



7.3

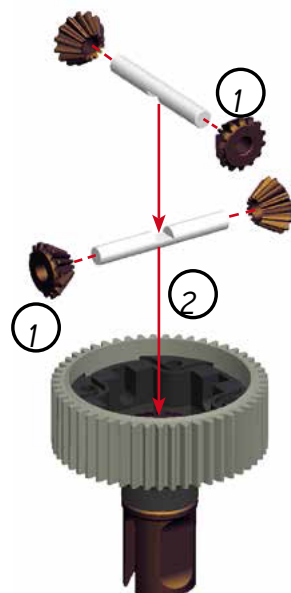


STEP
7

※ナットが硬くて入らない場合は反対側からM2のビスを少しずつ締め込み、ナットをデフカバーへ引き込みます。

8.1

シリコンオイルを入れる前にOリングを取り付けます。

シリコンオイルはクロスピンが浸る程度だけ入れます。オイルの入れすぎに注意して下さい。

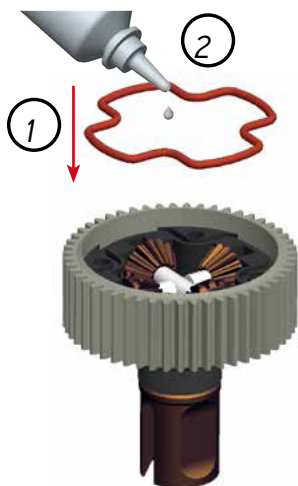


オイルを入れた下図の状態重量が19gを超えないようにして下さい。



8.2

M2x10

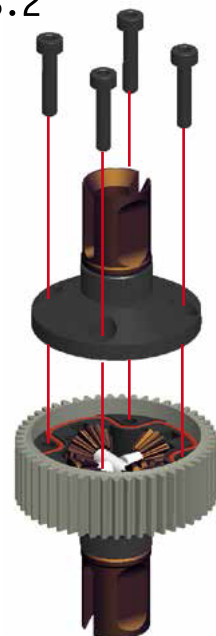

STEP
8

M2のビスは締め込み過ぎに注意して下さい。


リアギアボックスの組立

STEP

9


Bag

1

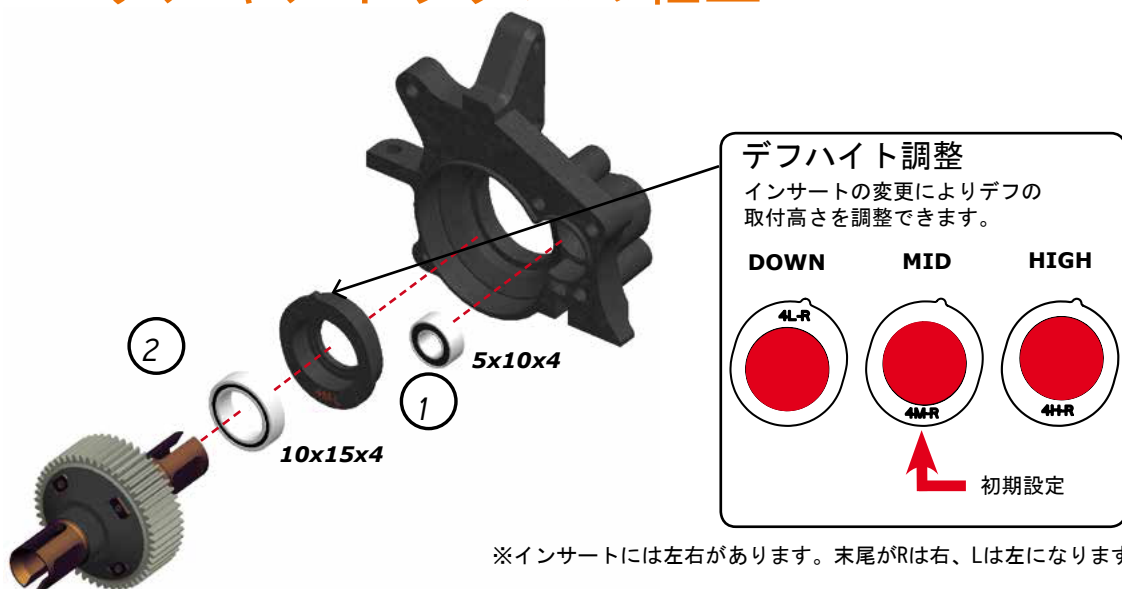


STEP

10

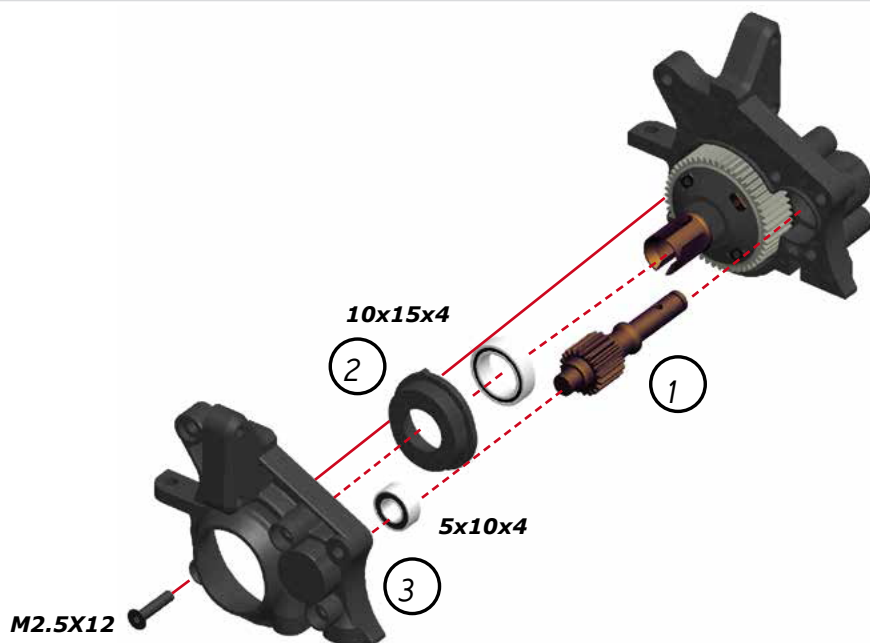

STEP

11

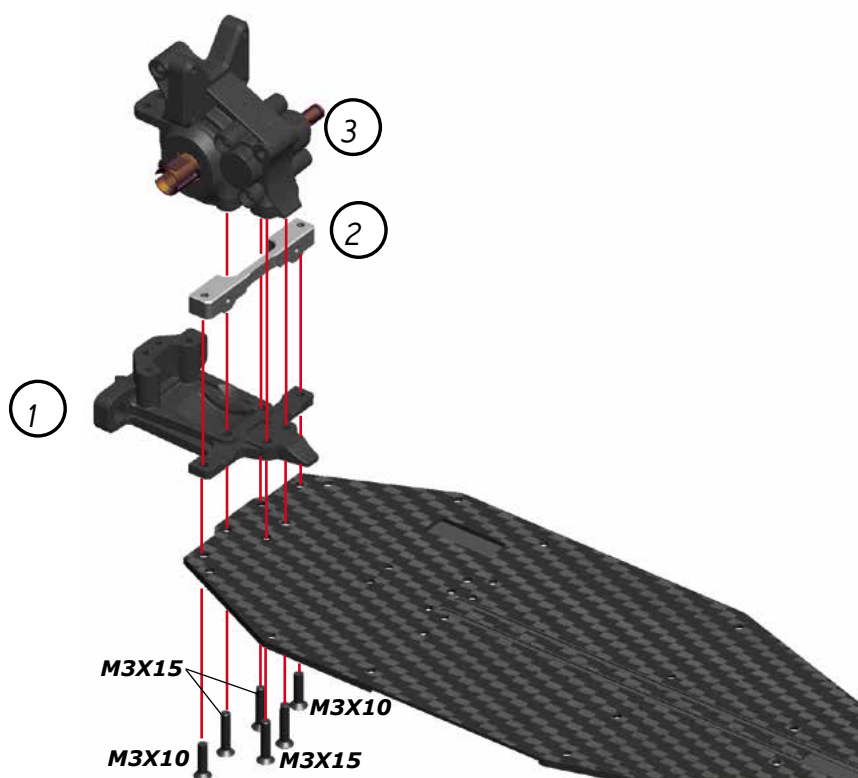


ミドルトランスミッションの組立

STEP

12


Bag

2

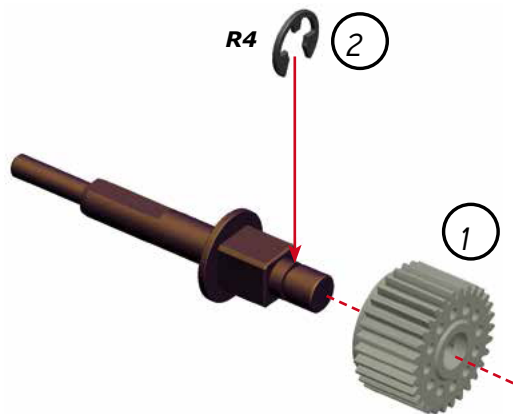


STEP

13

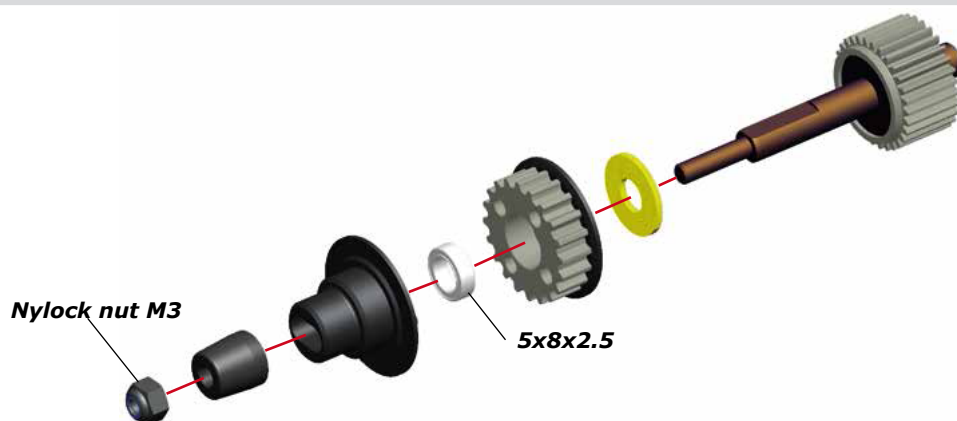


STEP




14



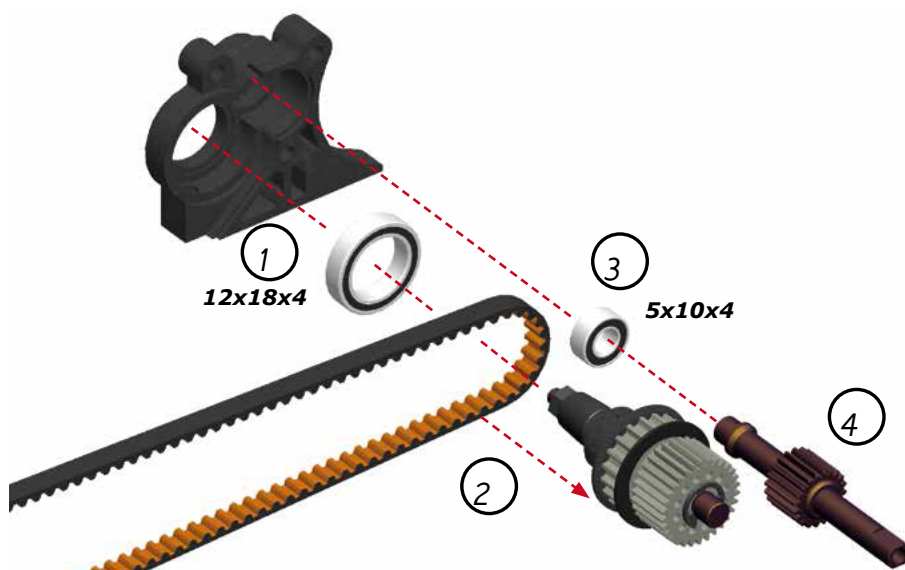



STEP

15

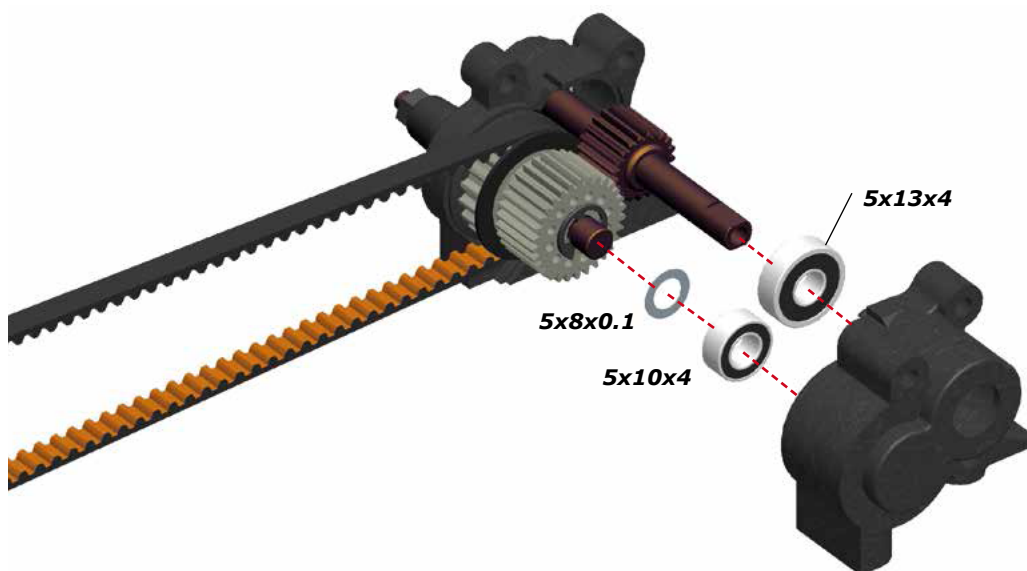

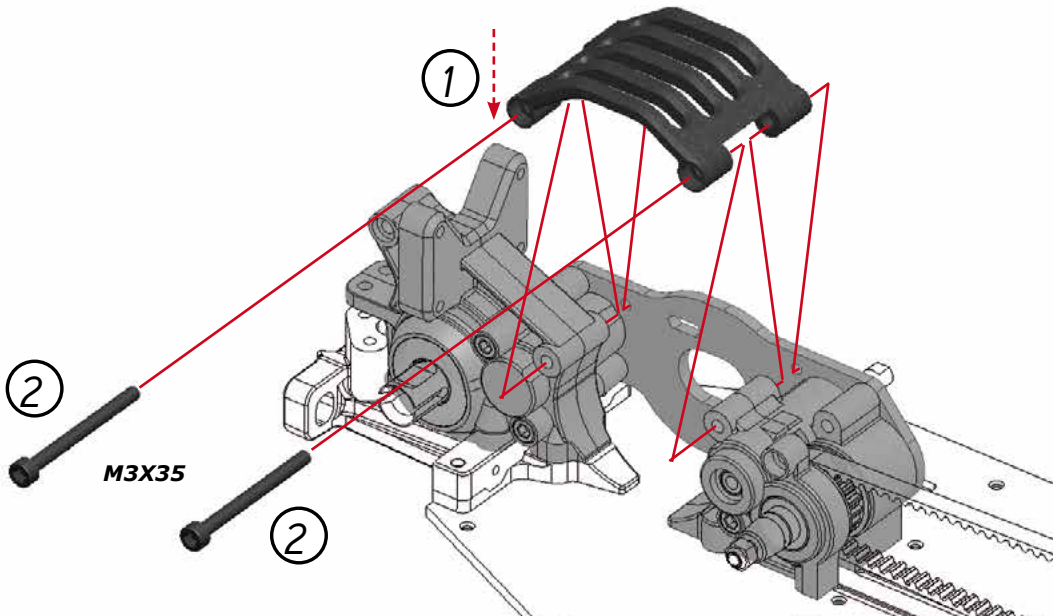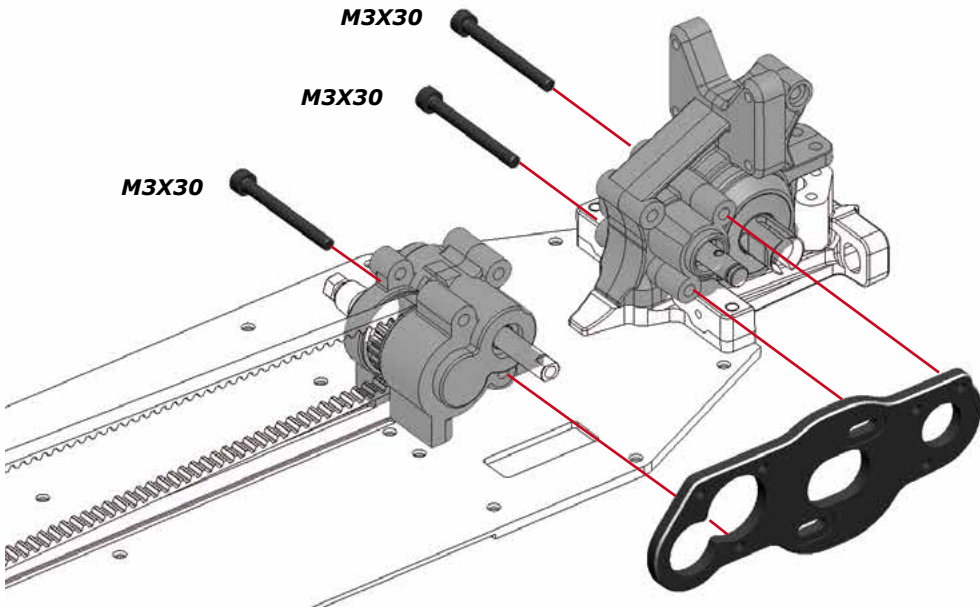
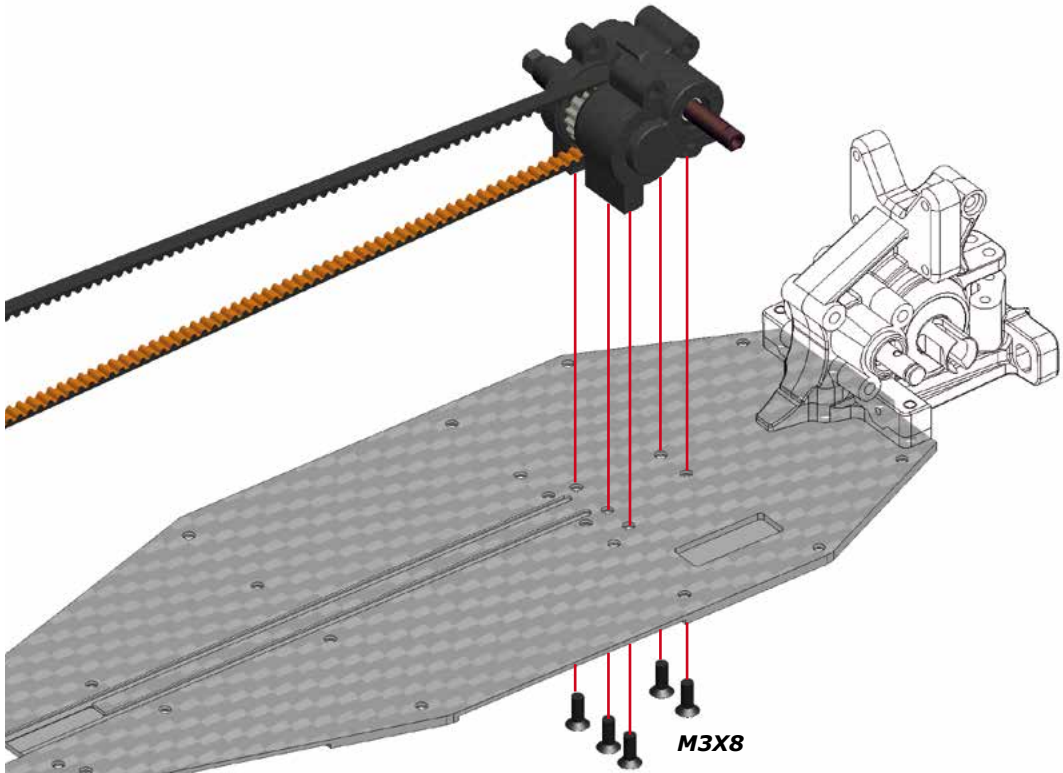


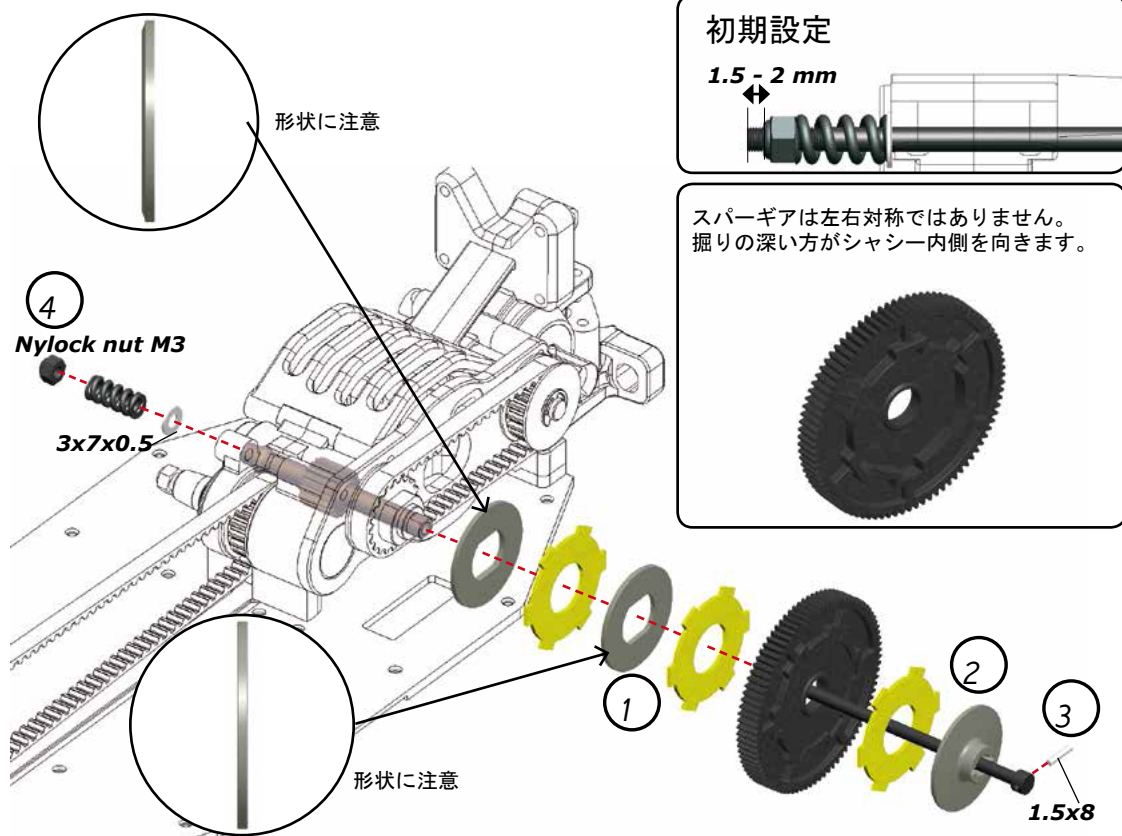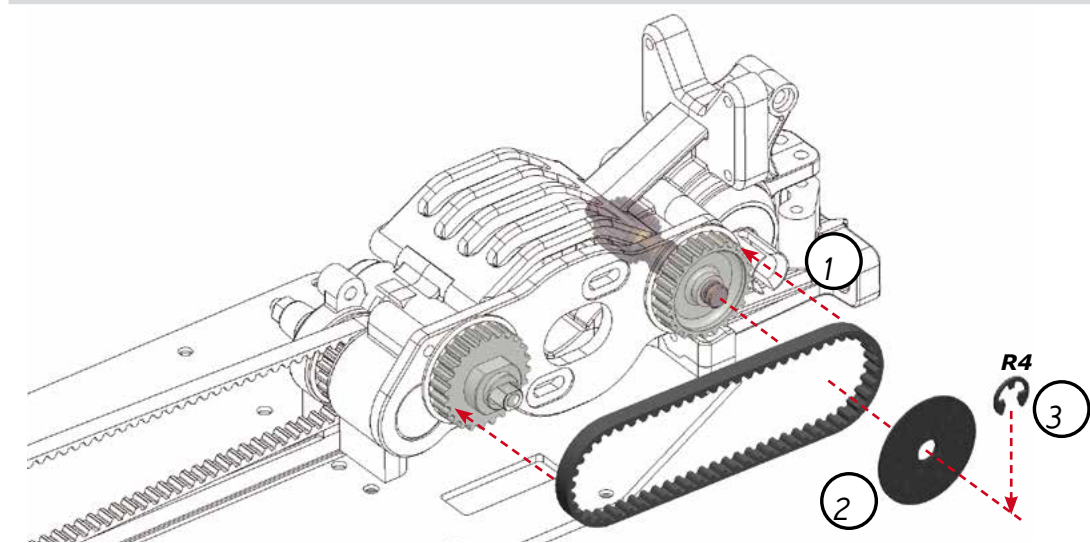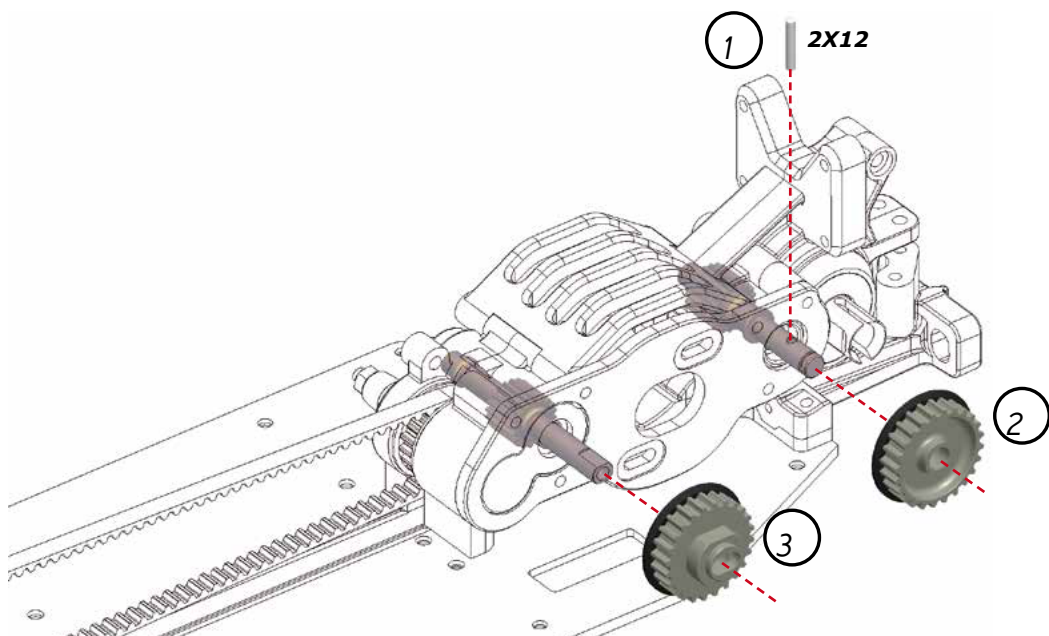

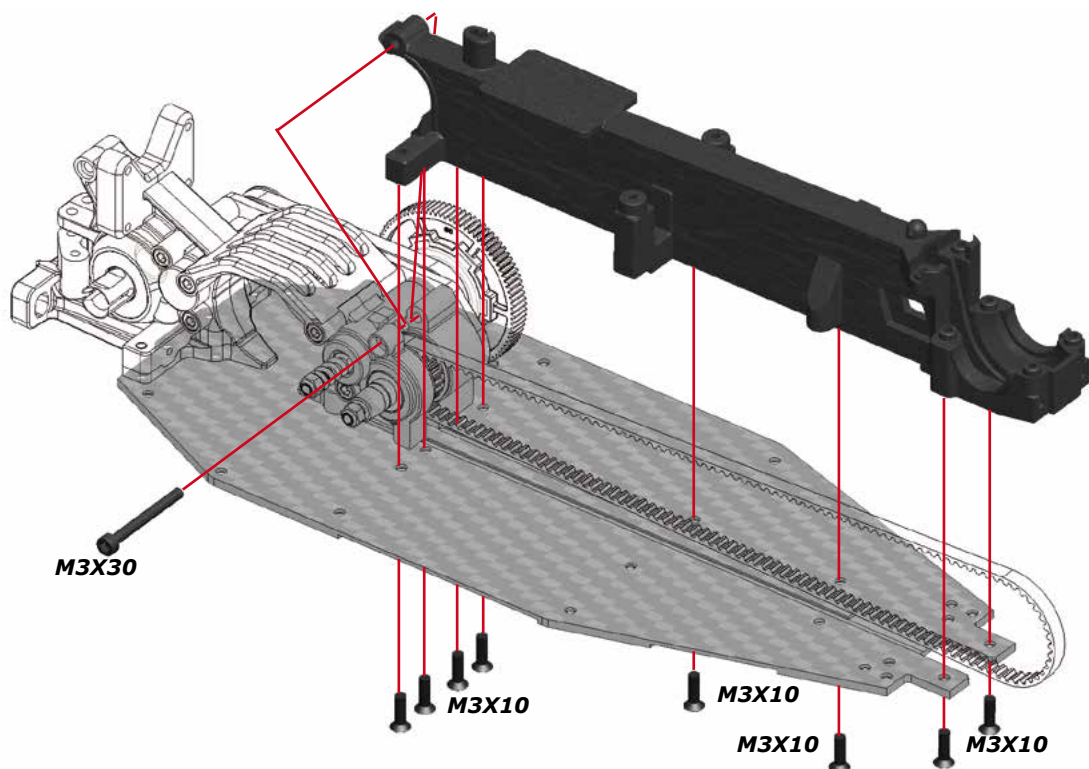


デフ高さ、及びベルトテンションセッティング

インサートの変更により、デフの取付高さ、そしてベルトのテンション調整ができます。下図はインサート右側です。
※初期設定はテンション「中」ですが新品時はベルトの伸びが無いので、テンションは緩めの方がよい場合があります。

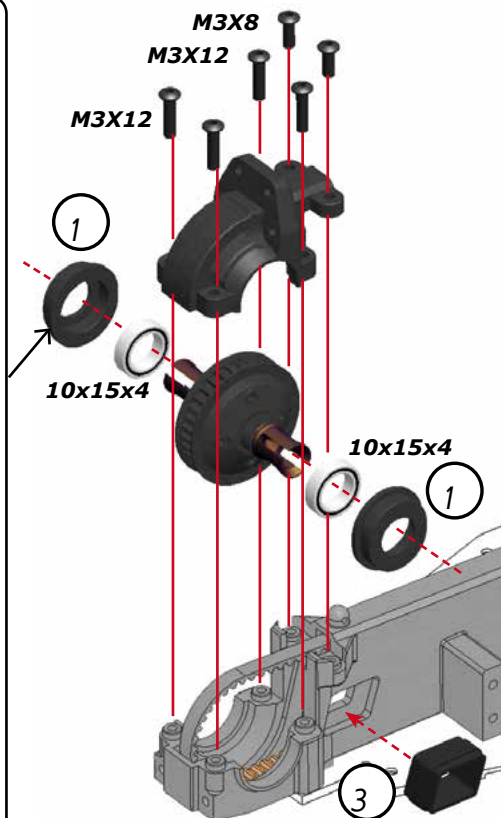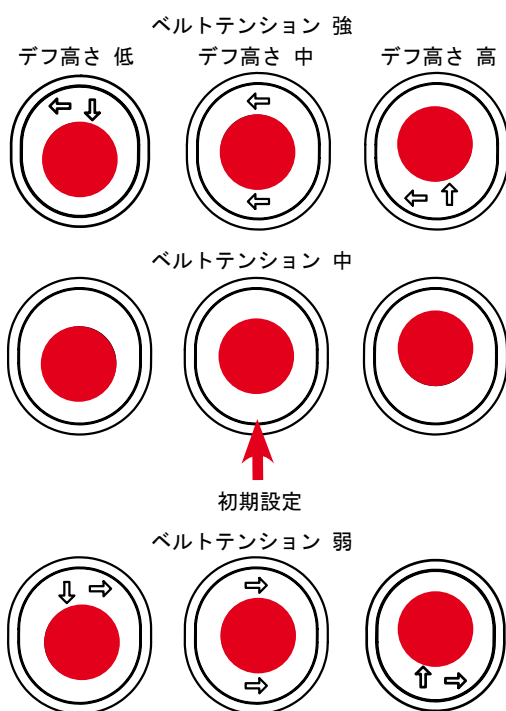

SPYDER SRX4

駆動レイアウト上面図

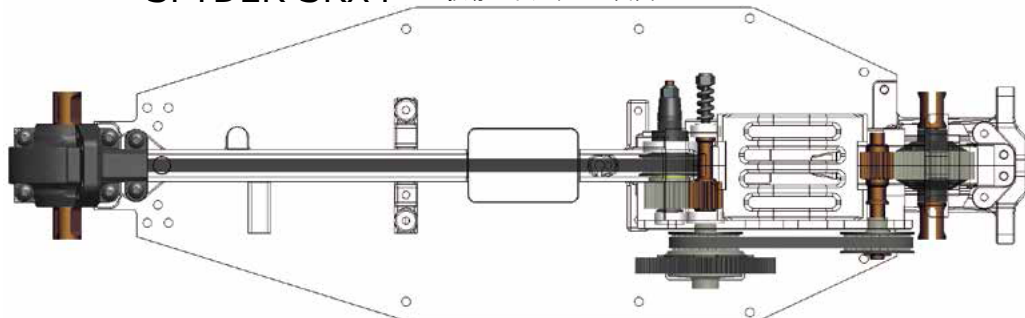

SPYDER SRX4

リアの組立

STEP

24

Bag

4

STEP

25




STEP

26

serpent


Page

11

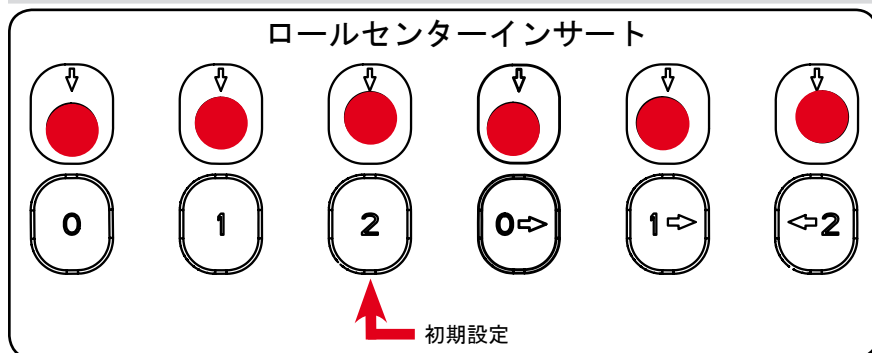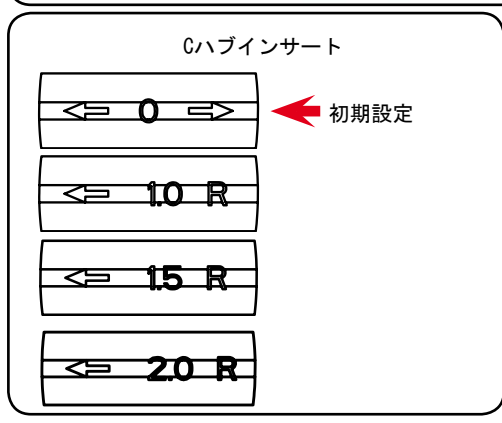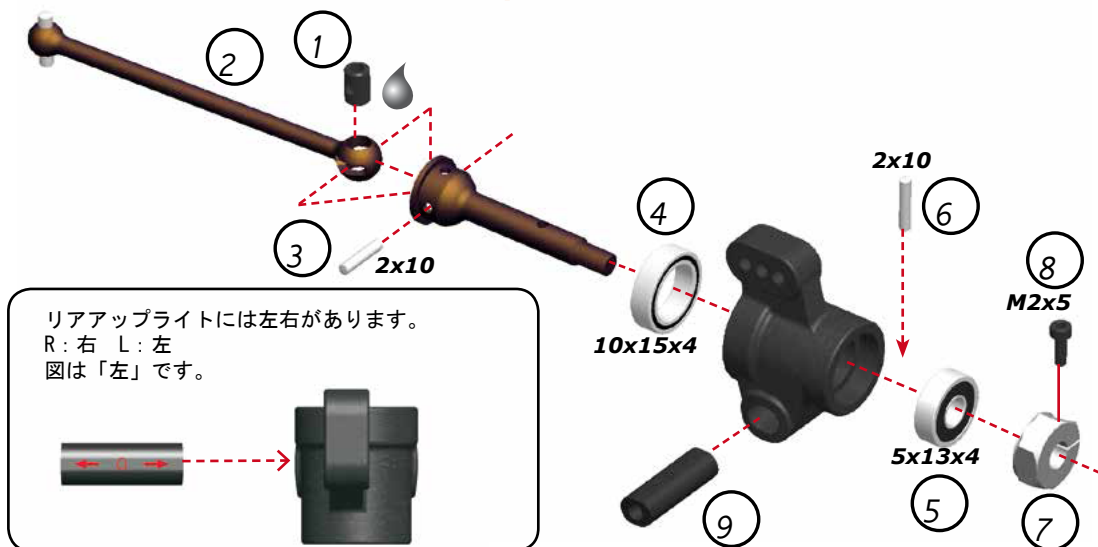


組立順

- 1) サスブラケット（フロント）にインサートを取付ます。
- 2) ロアアームを取付位置で手で保持します。
- 3) ピボットピンを後方から挿入します。
- 4) ロールセンターインサートをサスブラケットに取付け M2.3 x 4 のビスで固定します。

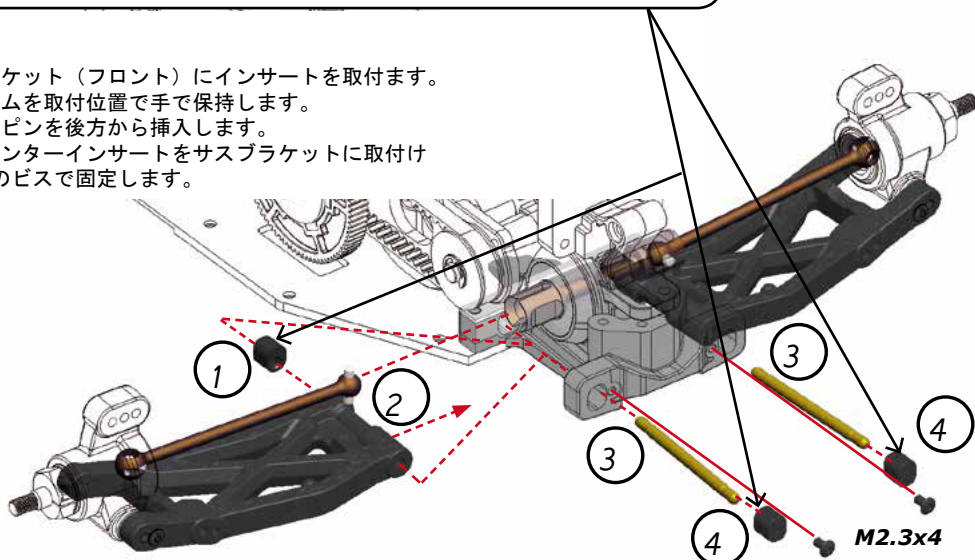

SPYDER SRX4

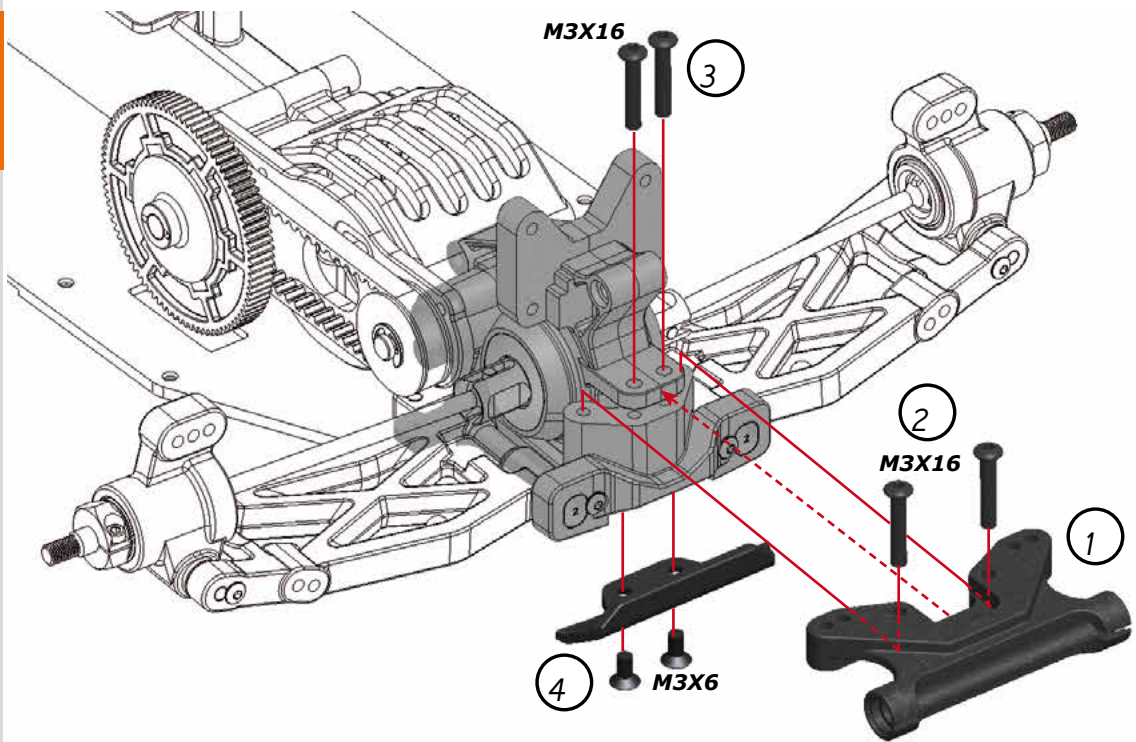

28.1




27.9 mm



28.2

ピボットボールの座部分がワッシャーのフライス部分きちんと収まるように取り付けます。



15.25 mm

長さの違いに注意！

17.25 mm




17.25 mm

①




3x6x1

15.25 mm

②

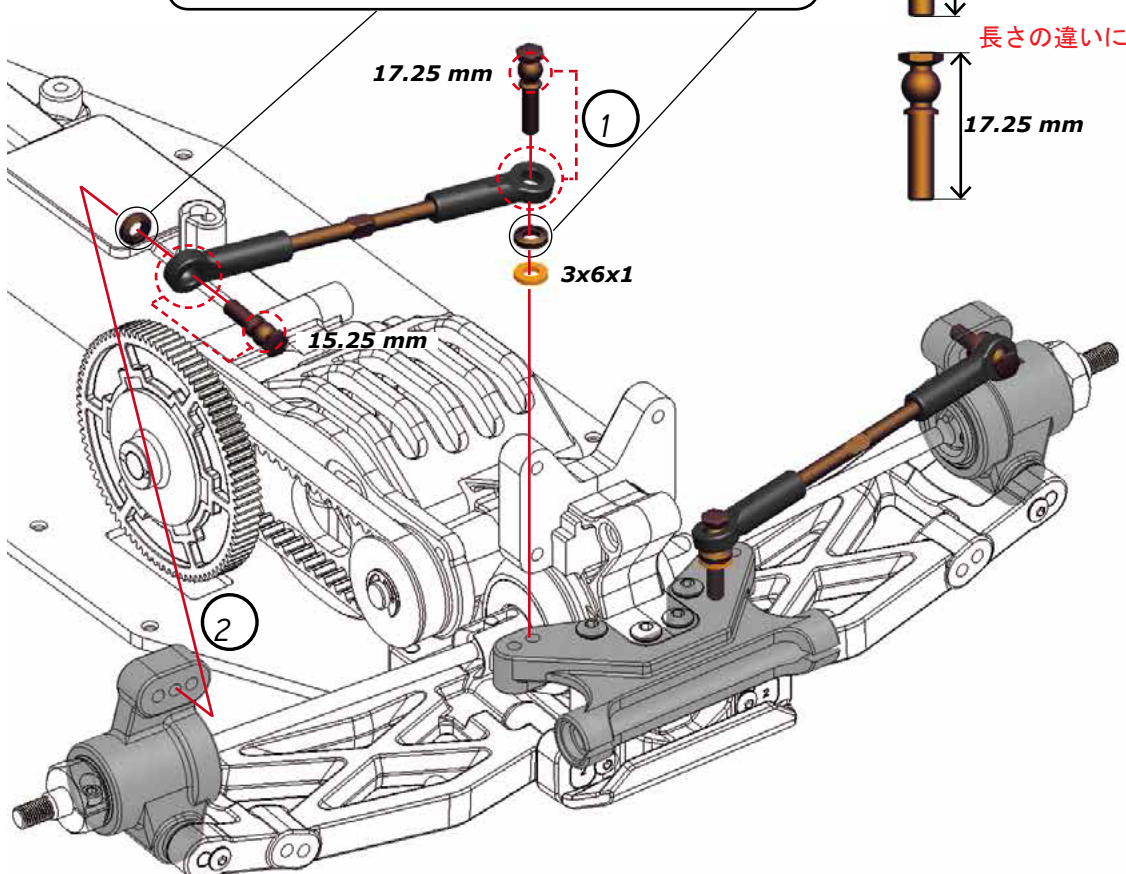

29.1
ここではM3x3のネジは仮止めにします。
アンチロールバーをセンターに位置決めしてから
締めます。締めすぎるとアンチロールバーが変形
しますので、締めすぎに注意して下さい。

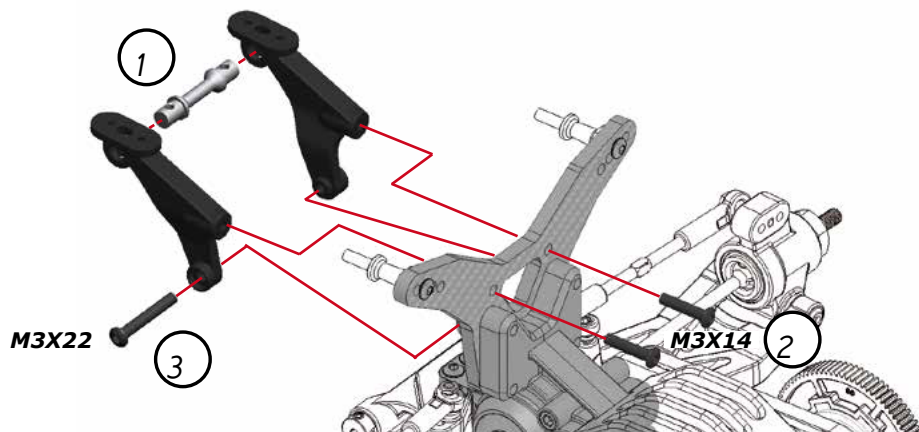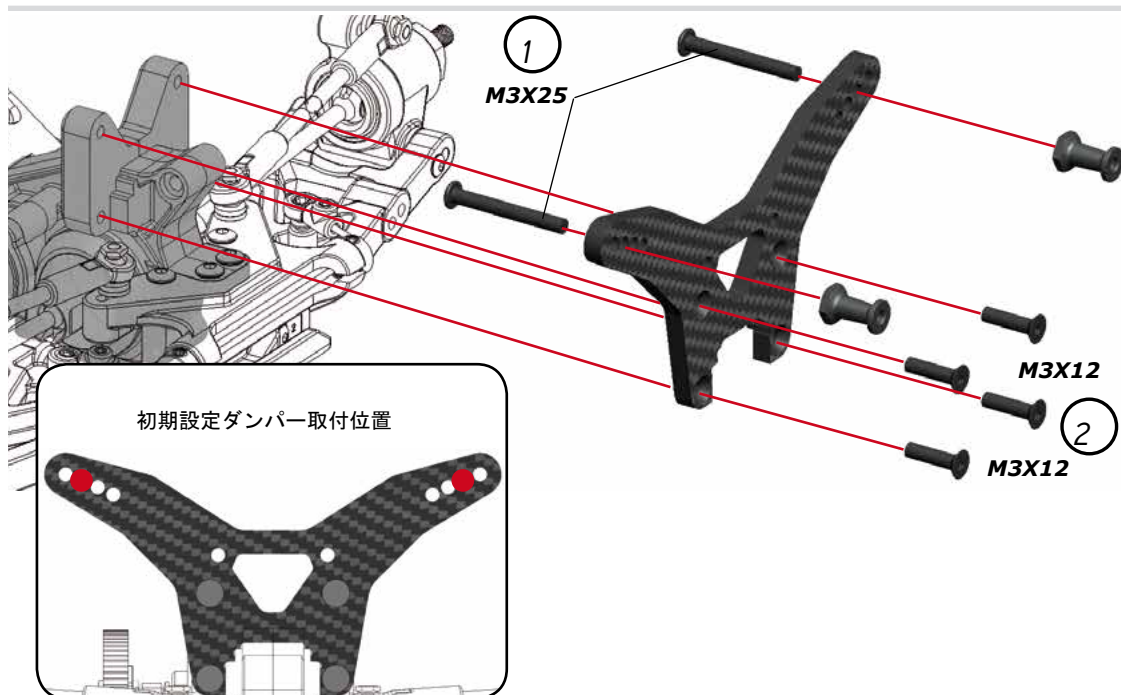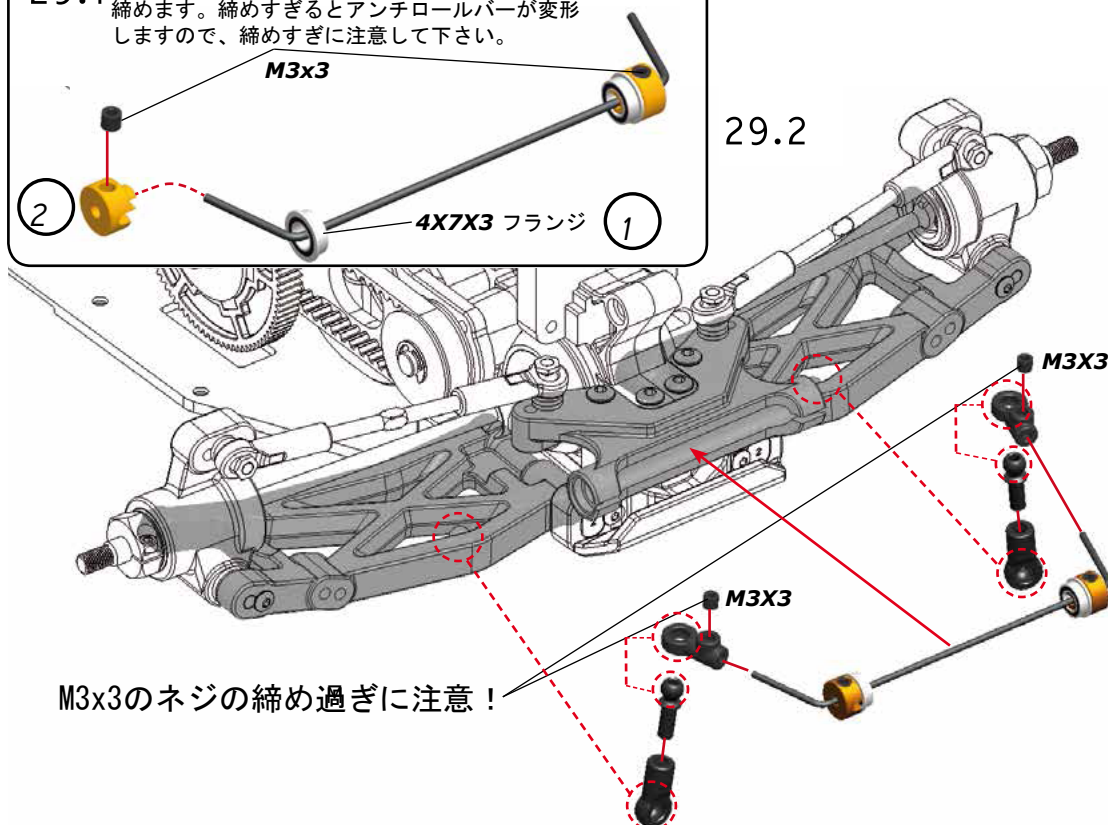

フロントの組立


STEP

32

Bag


6

ネジロック剤の塗りすぎに注意

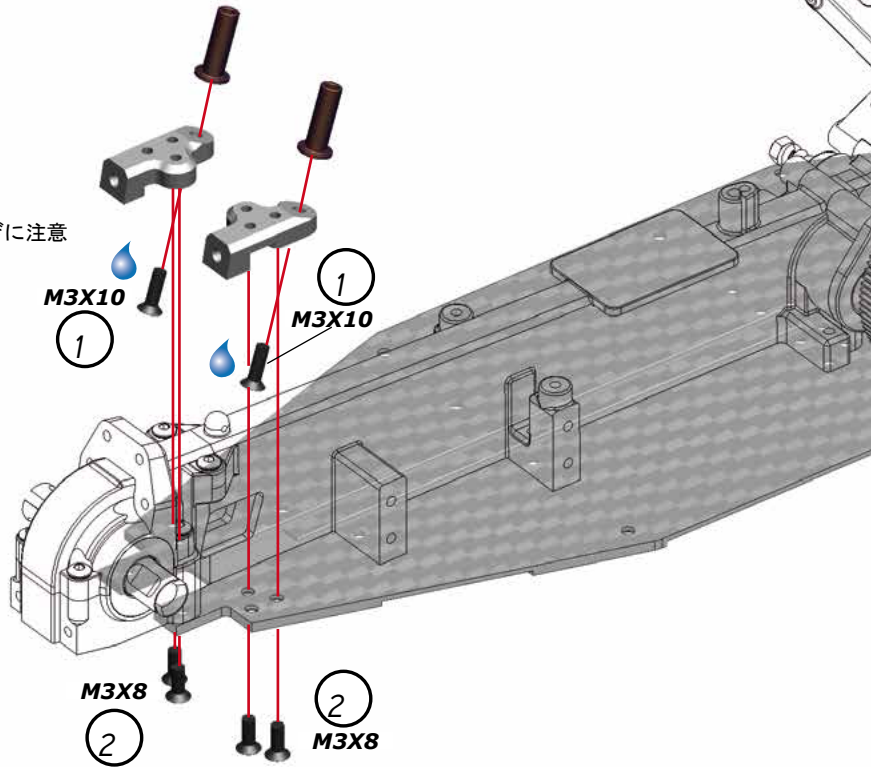

STEP

33


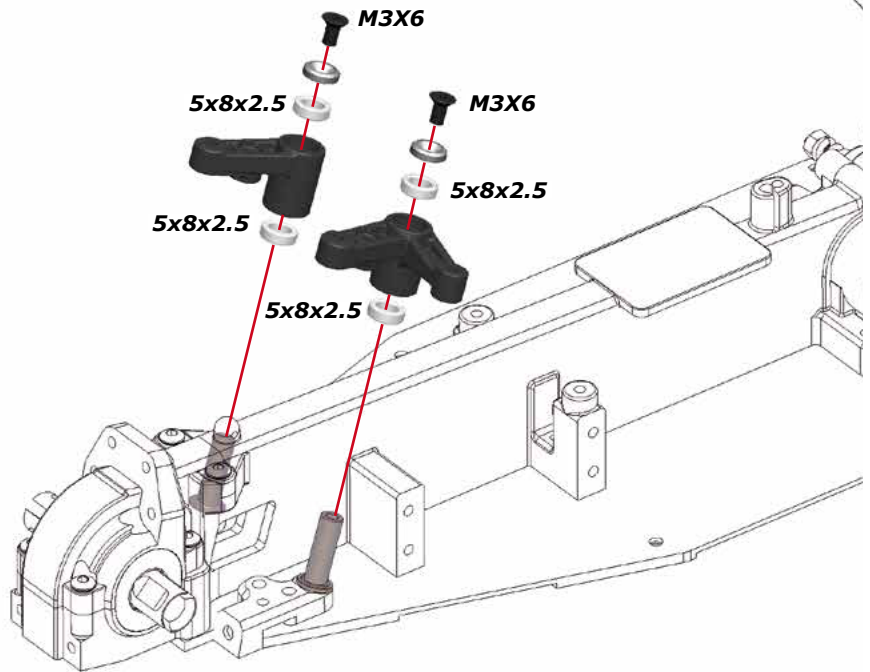



STEP

34


ネジロック剤の塗りすぎに注意

ステアリングクロスバー上面図

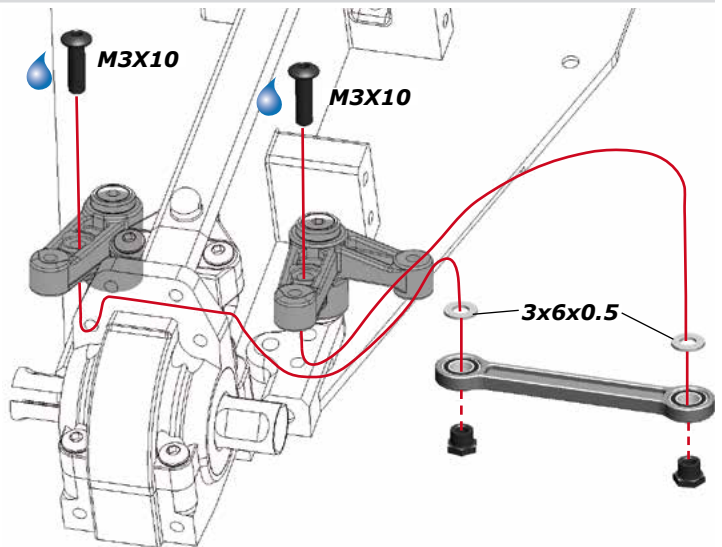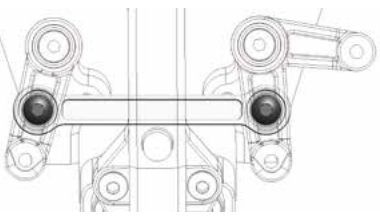


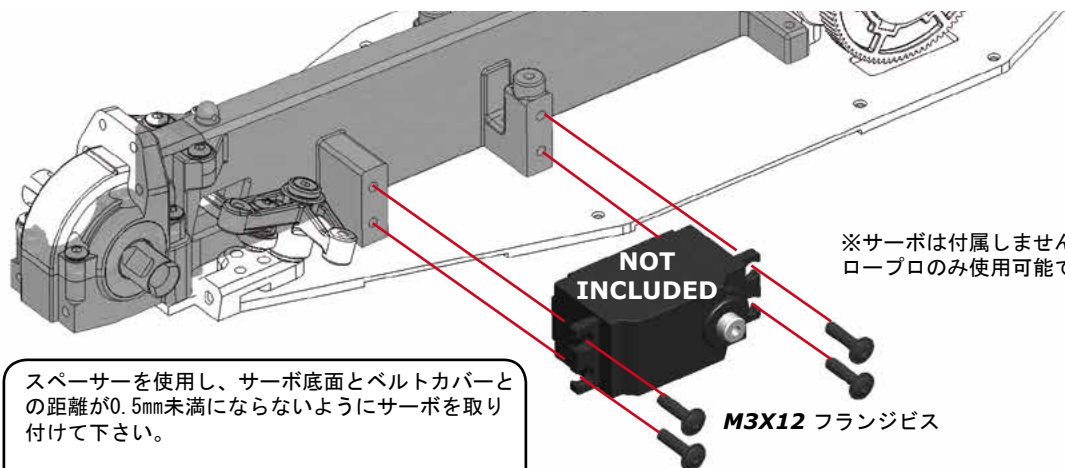



スペーサーを使用し、サーボ底面とベルトカバーとの距離が0.5mm未満にならないようにサーボを取り付けて下さい。

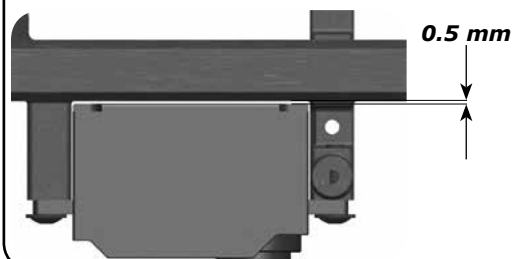

使用するサーボメーカーに合わせたサーボホーンを使用します。


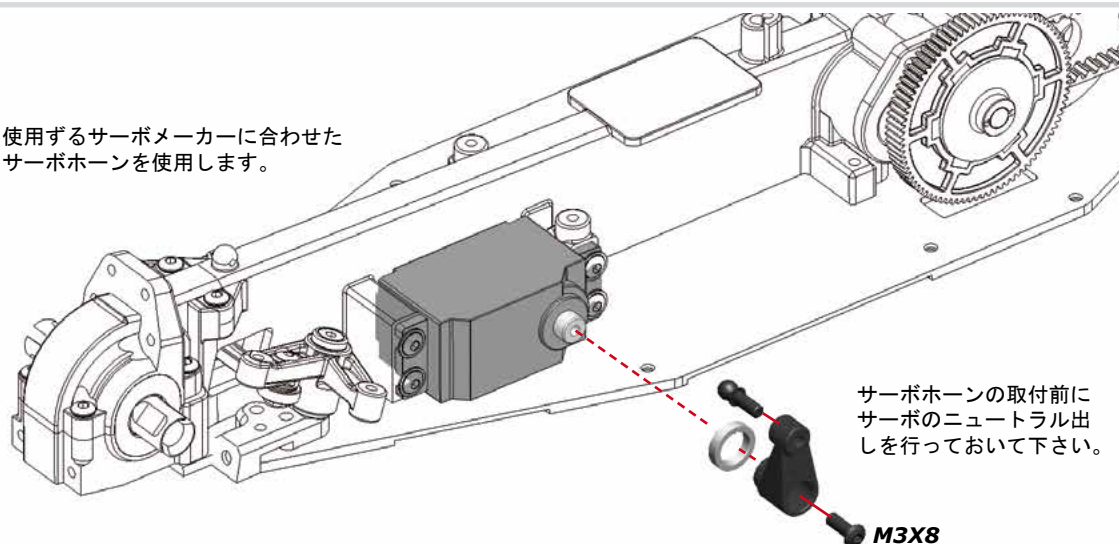


37.1

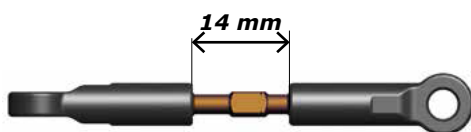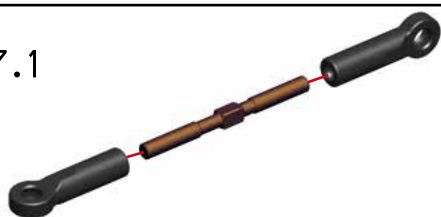


37.2




ピボットボールの座がワッシャーのフライス部分に
きちんと収まるよう取り付けて下さい。



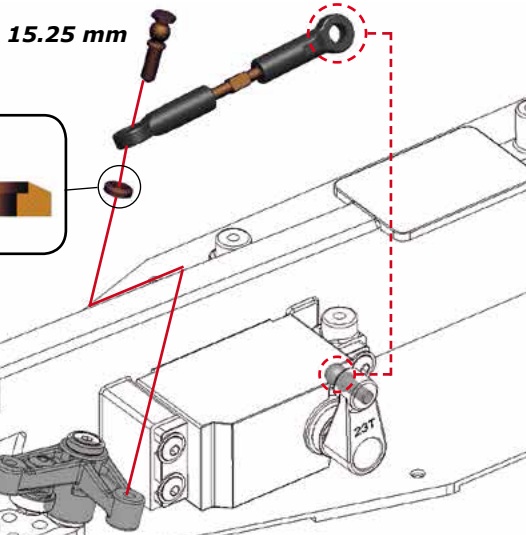
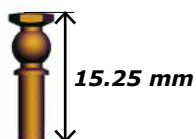


38.1

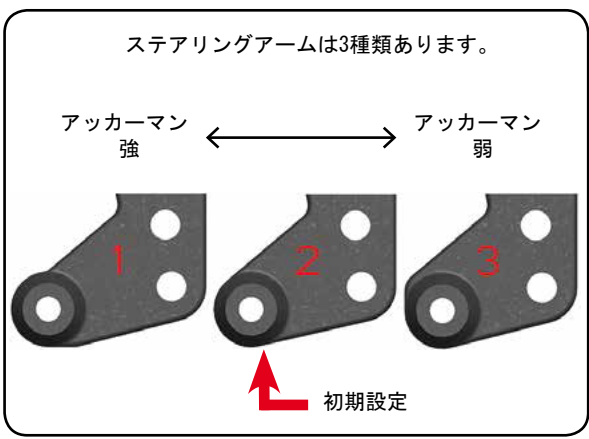



38.2

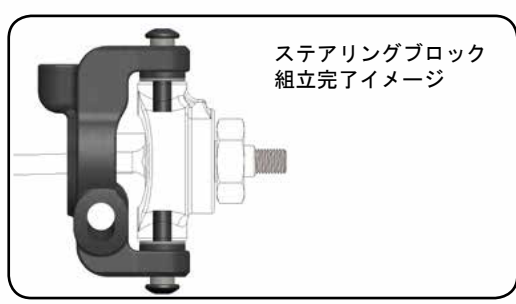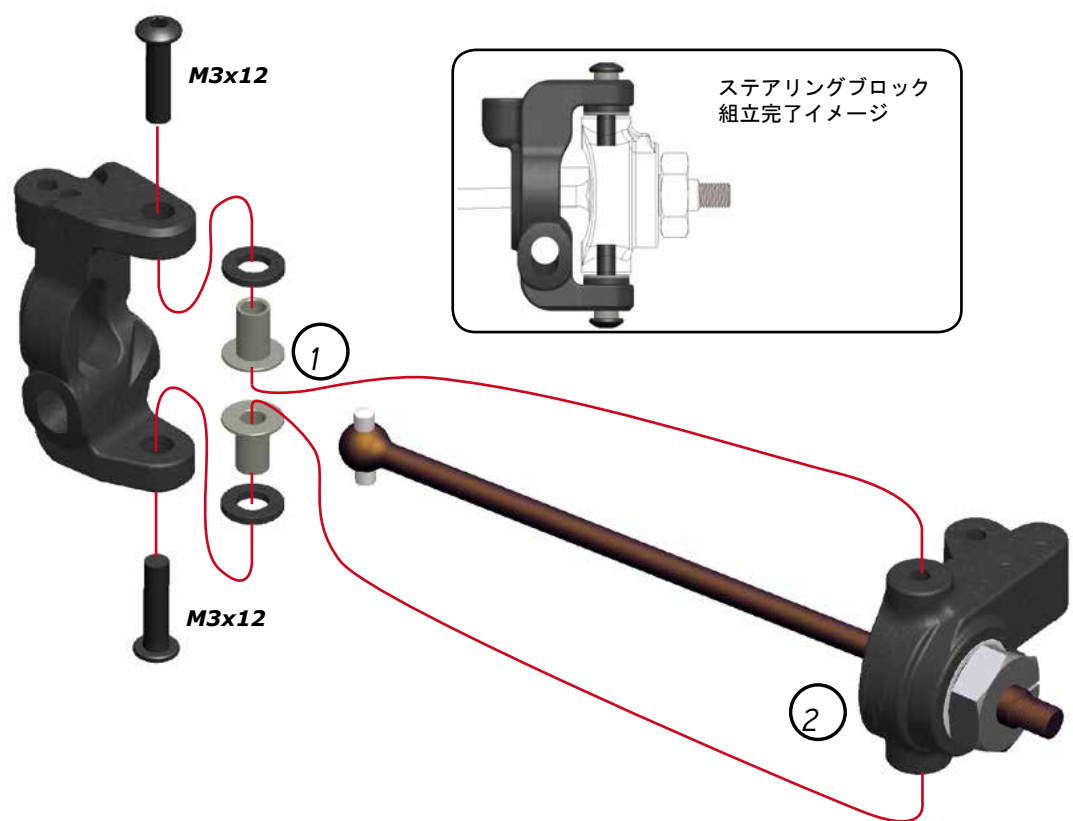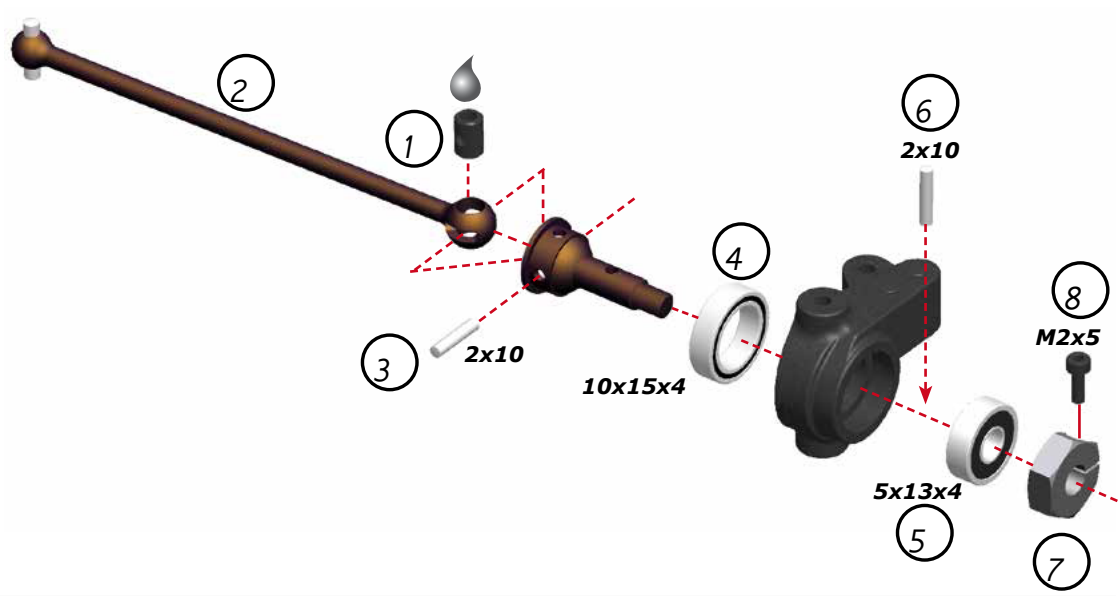

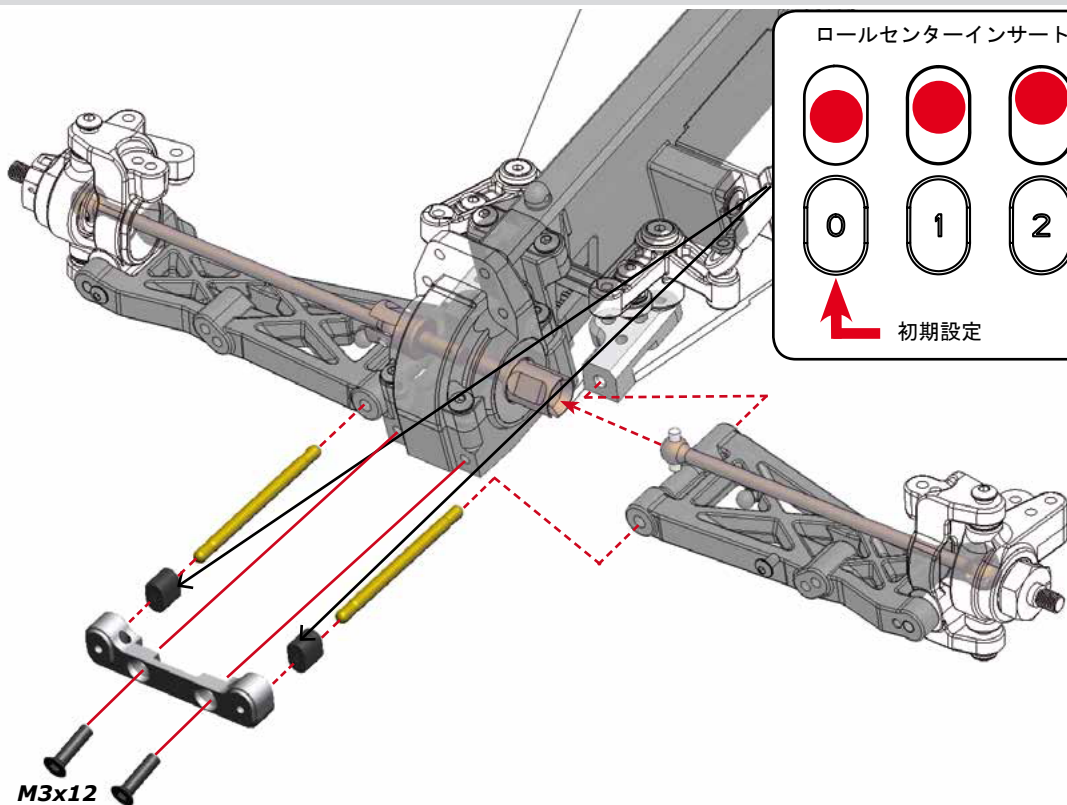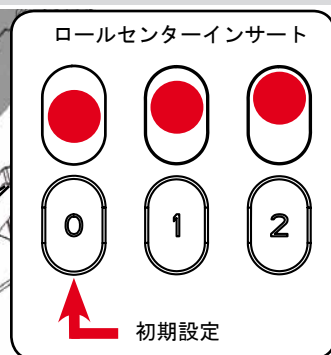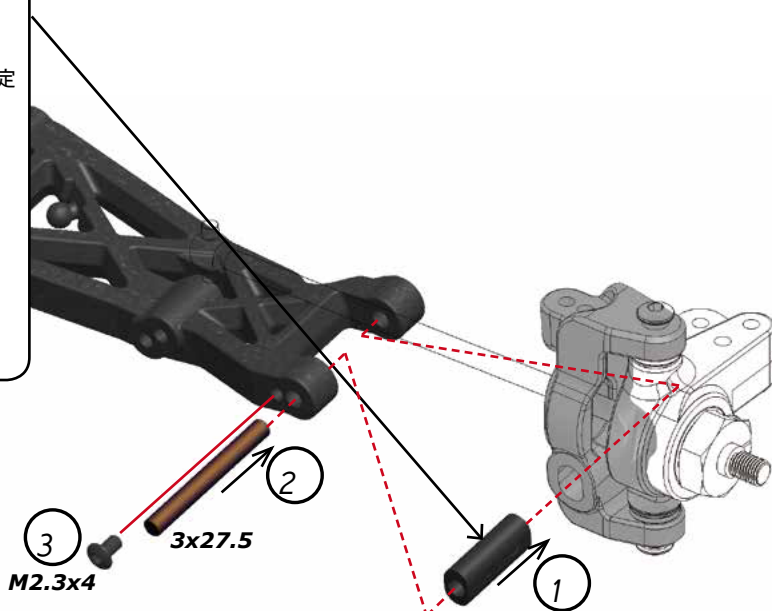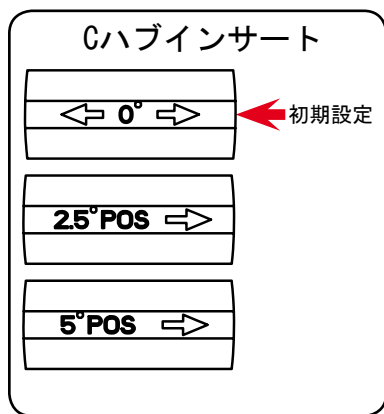


ネジロック剤の
塗りすぎに注意

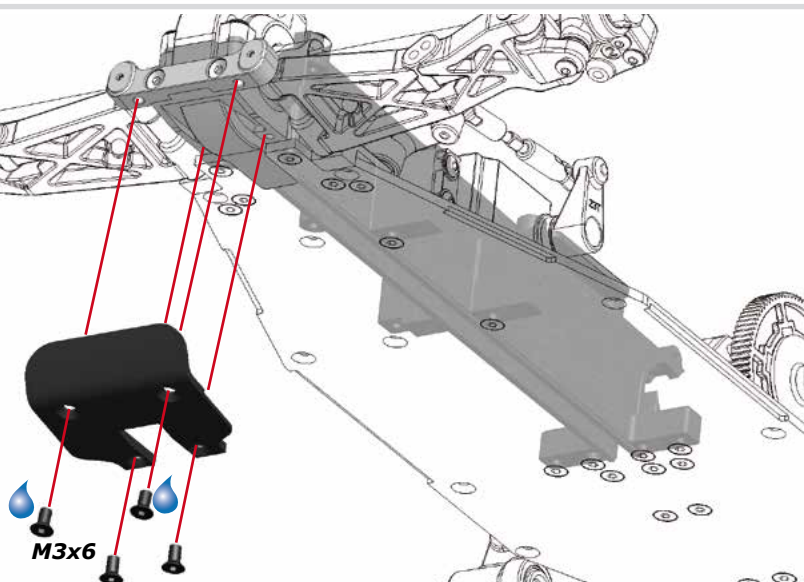


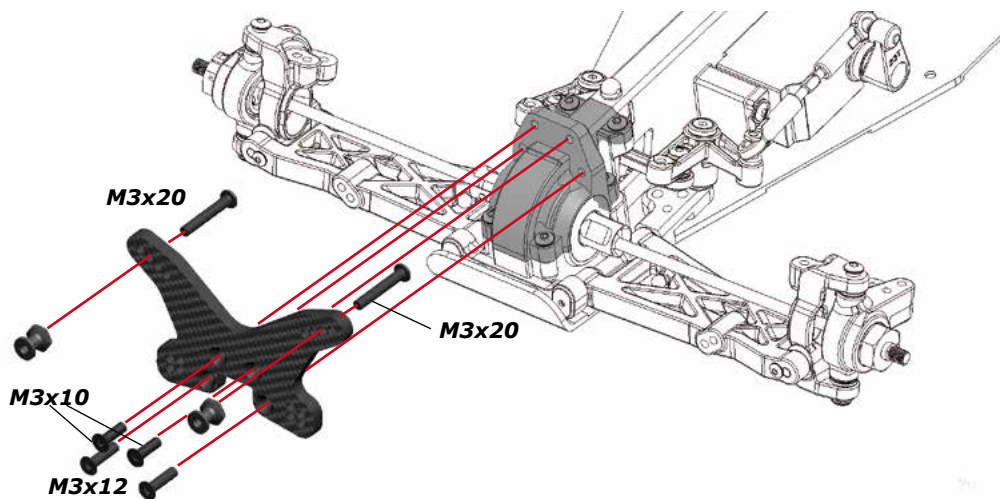


ダンパー取り付け位置、キャンバーリンクロッド取り付け位置

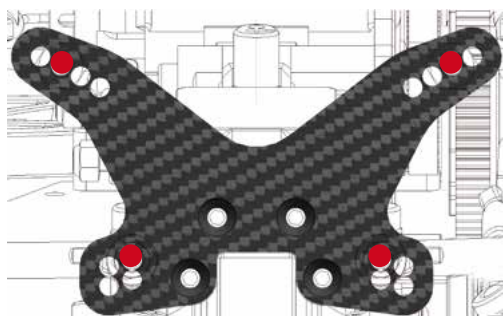



44.1

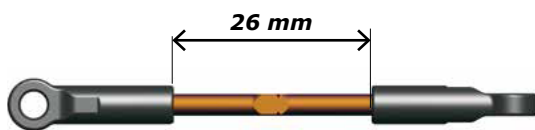

44.2

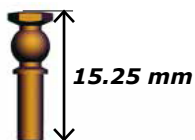

ピボットボールの座がワッシャーのフライス部分に
きちんと収まるように取付ます。

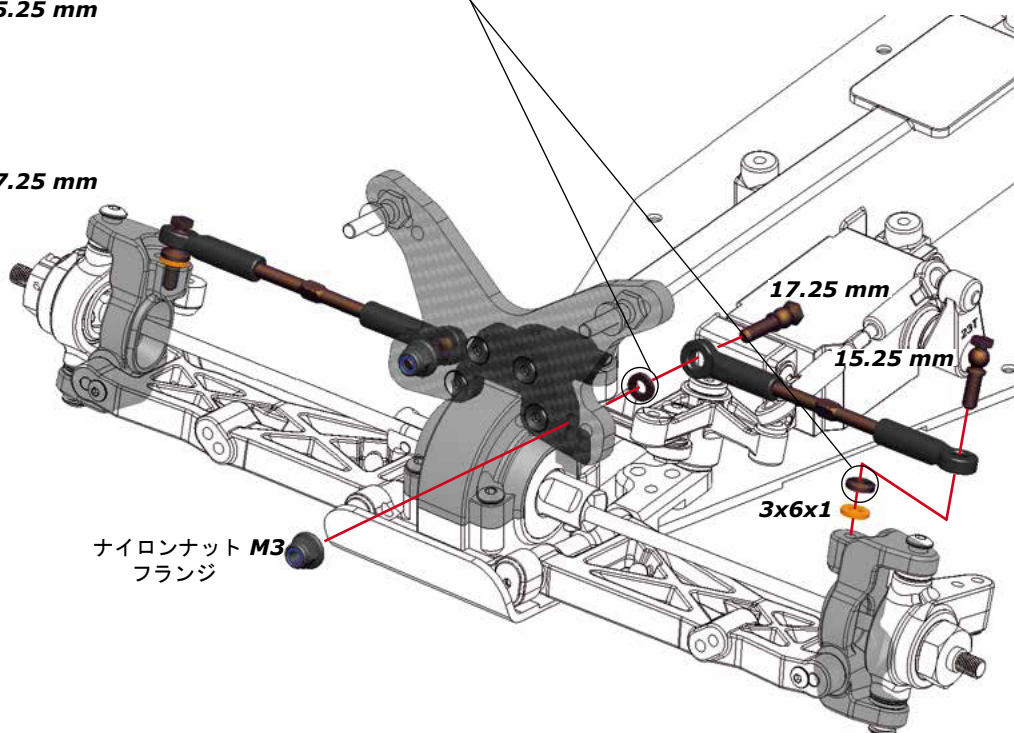


ナイロンナット M3
フランジ

17.25 mm


15.25 mm

3x6x1


45.1

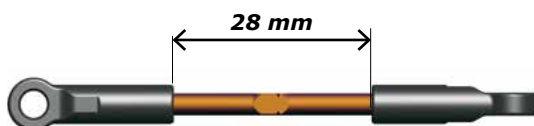

45.2

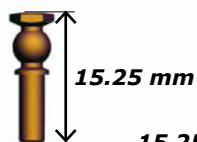


ロッドエンドの形状と向きに注意

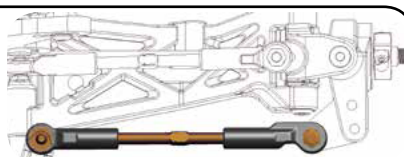


15.25 mm

15.25 mm

ピボットボールの座がワッシャーのフライス部分に
きちんと収まるよう取り付けます。

ダンパーの組立

46.1

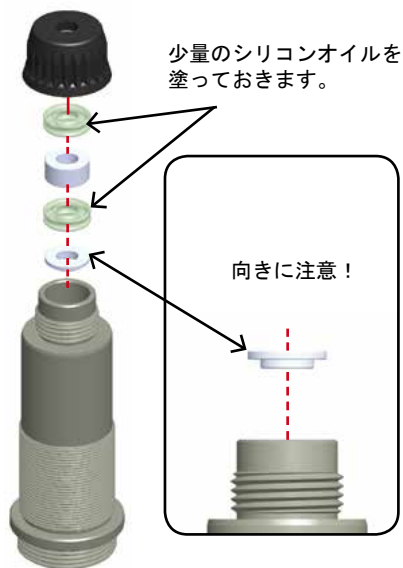


向きに注意！


46.2




46.3

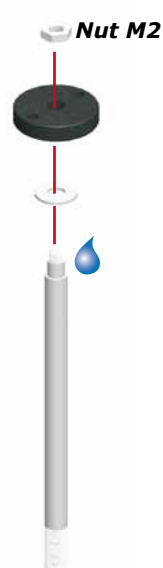

46.4 リアダンパー

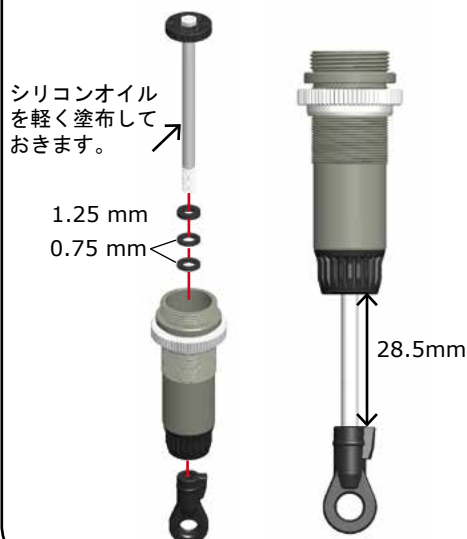

46.4 フロントダンパー

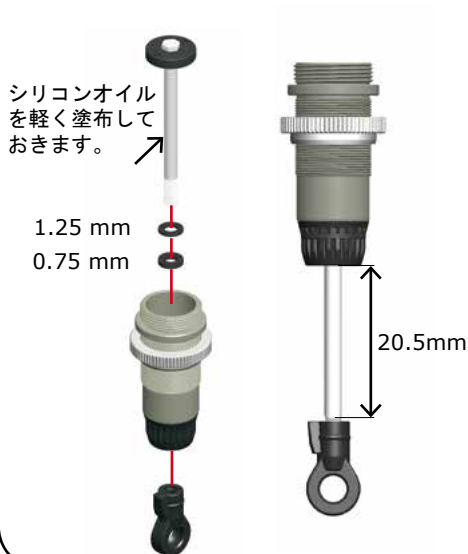

46.5

ダンパーケースをシリコンオイルで満たします。

ピストンを上下させて気泡を抜きます。



46.6

ガスケットをセットし、ダンパーキャップをすべて締めます。

ショックシャフトをゆっくりと押し込み、オイルを排出させます。



46.7

ダンパーシャフトをすべて押し込んだらOリングとビスで穴をふさぎます。

締めすぎに注意



46.8

スプリングをダンパーにセットします。

短いスプリングはフロントに、長いスプリングはリアに使用します。

スプリングサポートの長いタイプはフロントに、短いタイプはリアに使用します。




スプリングサポートは2種類あります。

フロントダンパー





リアダンパー



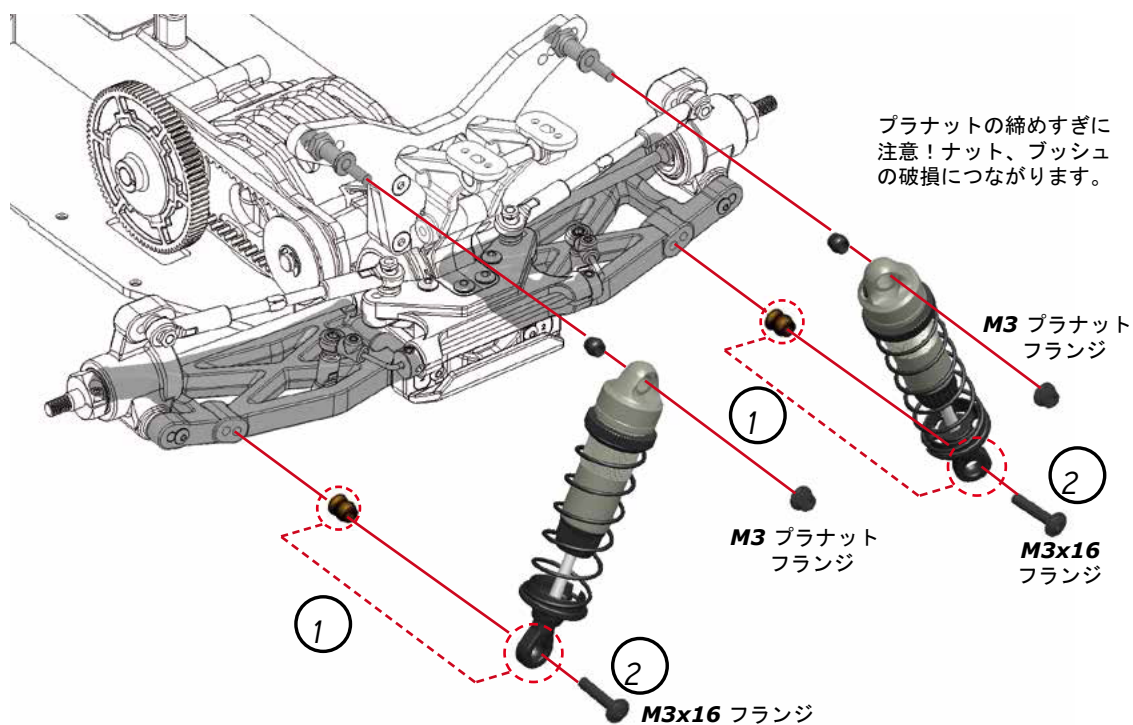

ワッシャの締めすぎに注意! ナット、ブッシュの破損につながります。

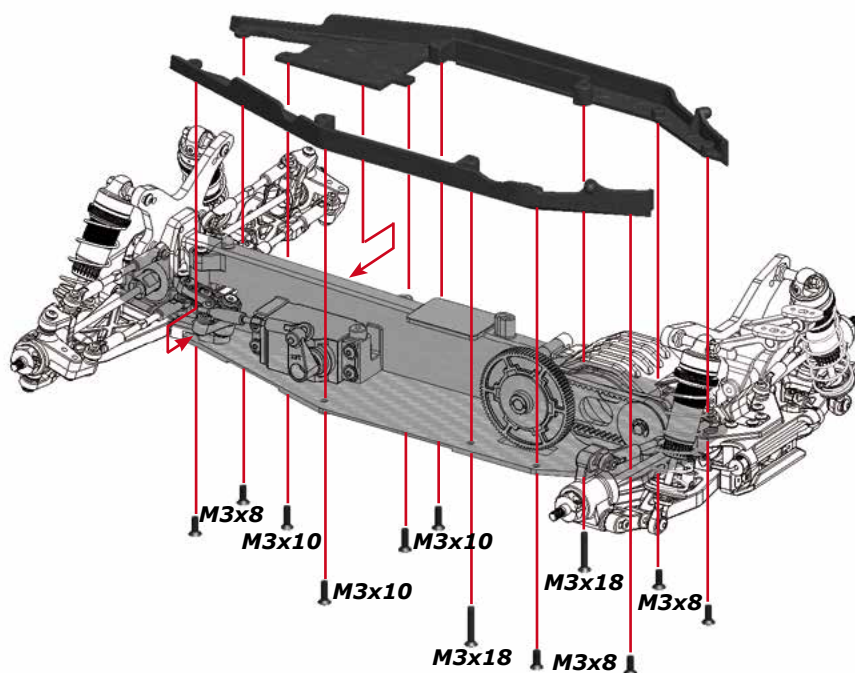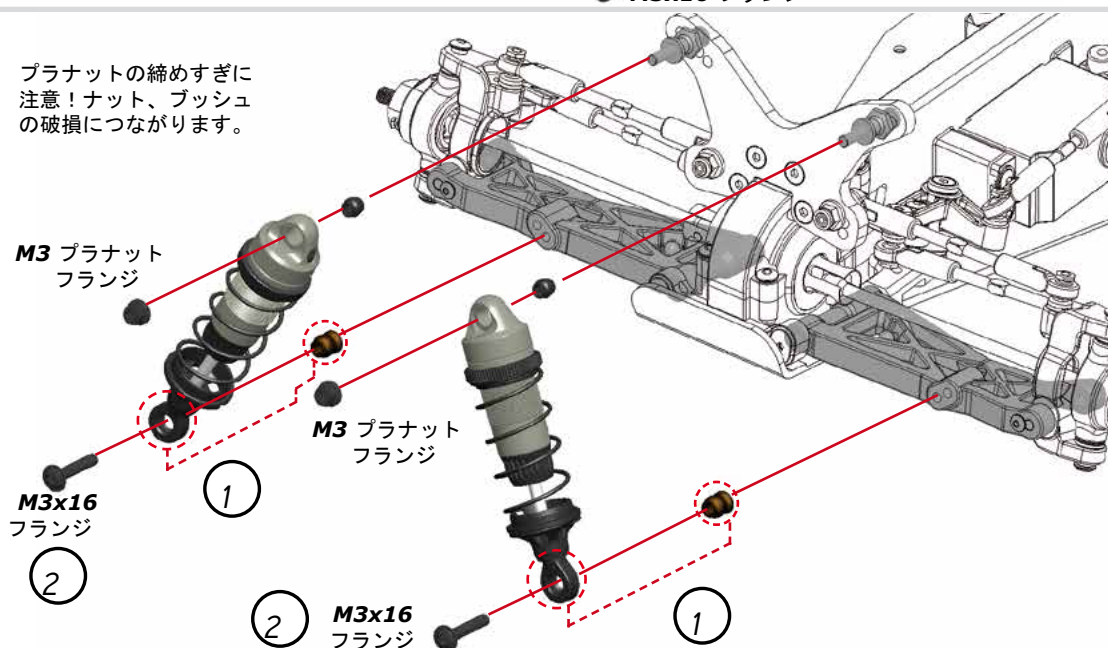


ESC、受信機の搭載

両面テープ等で固定します。
※両面テープは付属しません。

受信機、ESCは付属しません。


STEP

50

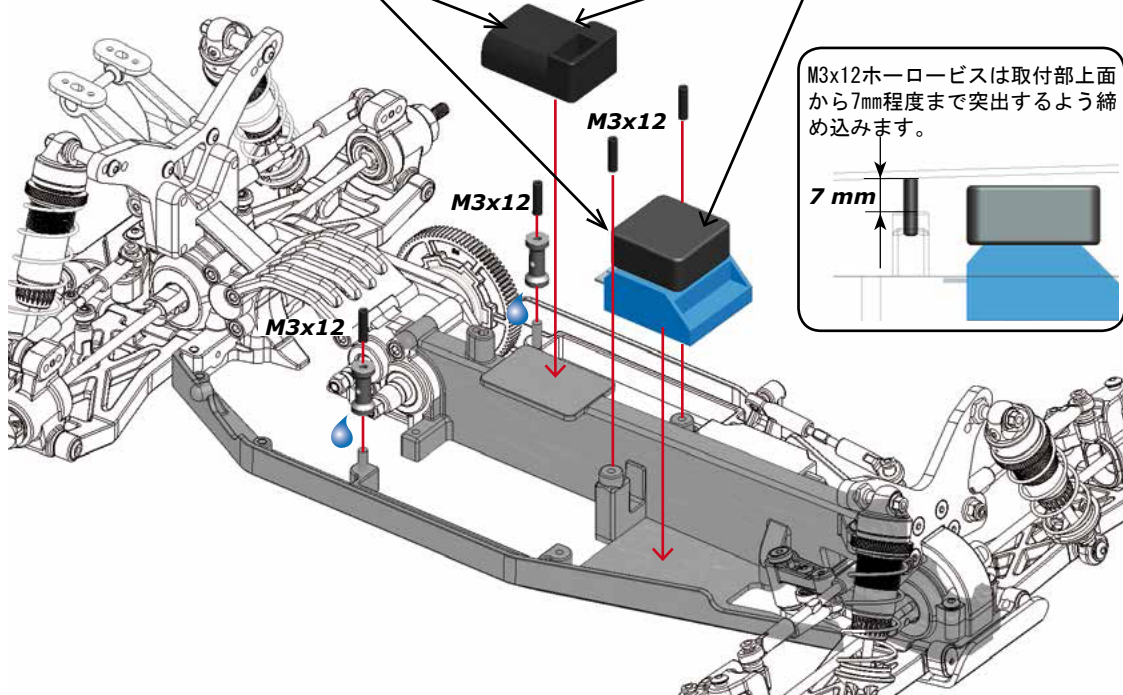


STEP


51

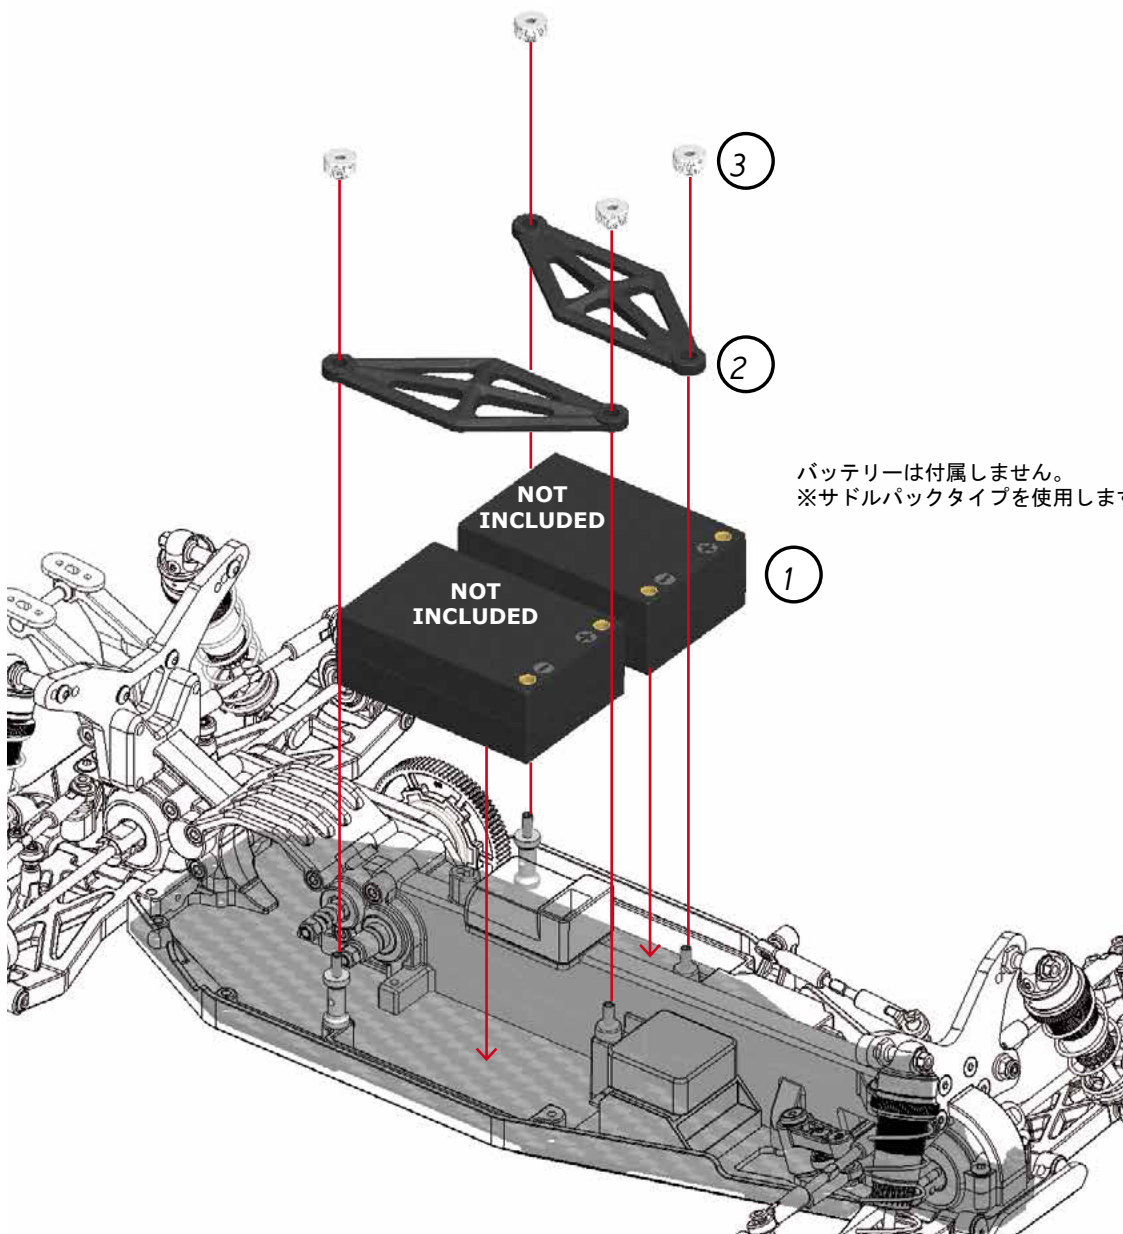

バッテリーは付属しません。
※サドルバックタイプを使用します。

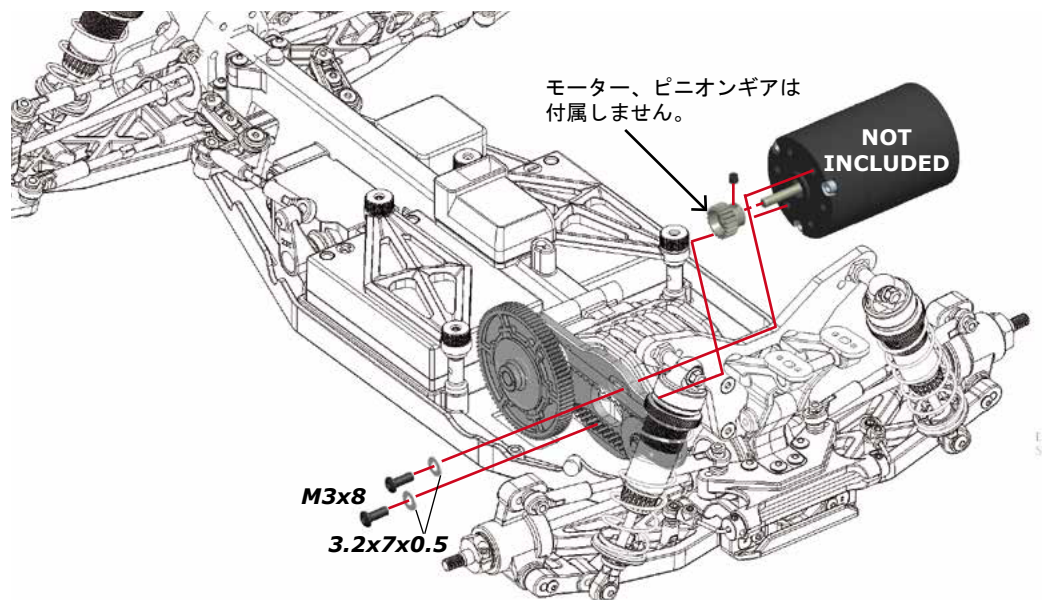

最終組立

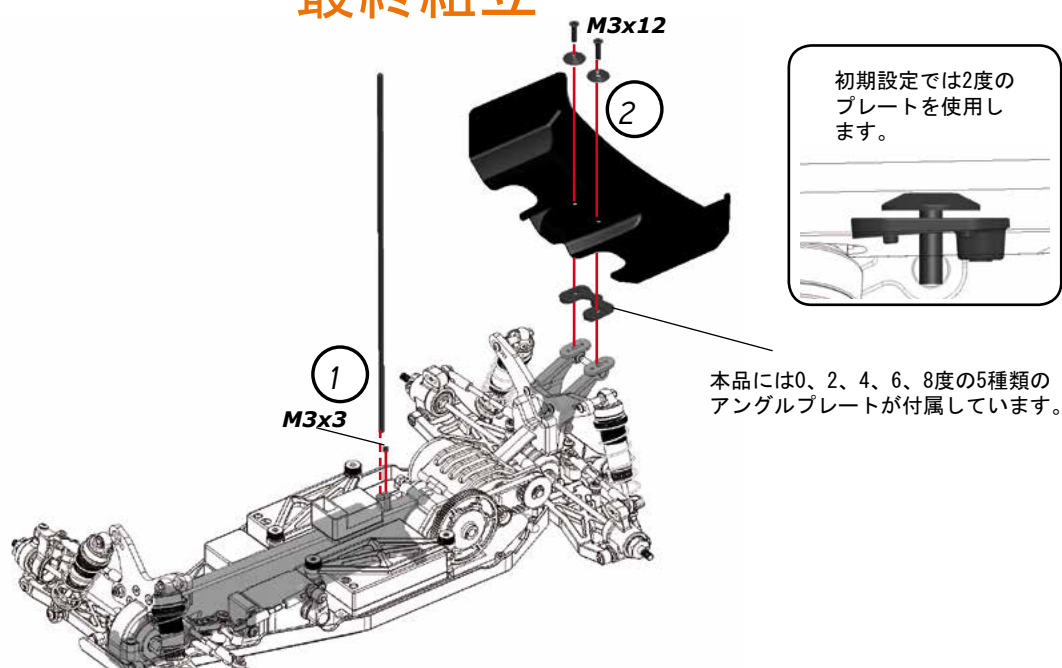


付属のマスキングシートにてウィンドーをマスキングして塗装します。

ボディをカットし、取付穴を開けます。

ボディ保護フィルムを剥がします。

本品にホイールは付属しますが、タイヤ、インナーは付属しません。タイヤはホイールにしっかりと瞬間接着剤で接着します。

ホイールにエア抜き穴がありませんので必要に応じて開けて下さい。

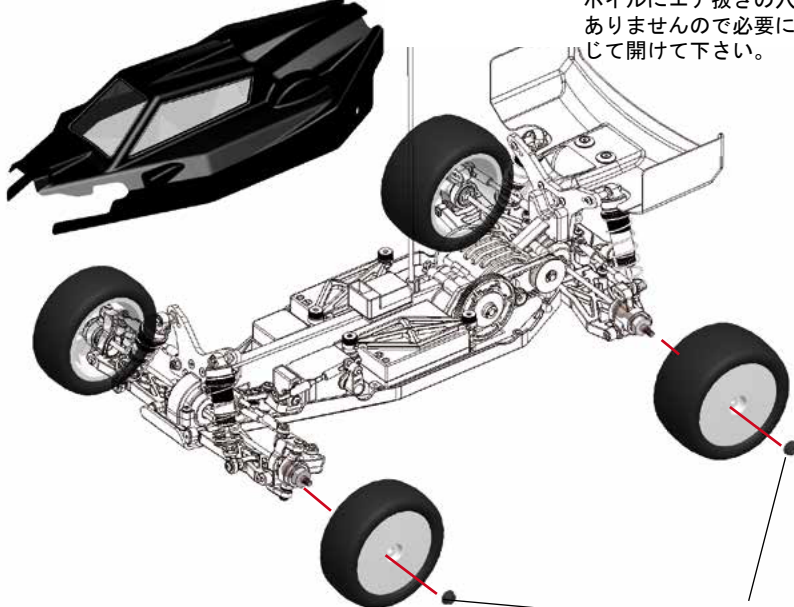

リファレンスガイド

分解図


Contents

FRONT & REAR GEAR-DIFF EXPLODED VIEW	25
SHOCKS EXPLODED VIEW	25
MID TRANSMISSION EXPLODED VIEW	26
TRANSMISSION EXPLODED VIEW	27
REAR ASSEMBLY EXPLODED VIEW	28
FRONT ASSEMBLY EXPLODED VIEW	29
FINAL ASSEMBLY I EXPLODED VIEW	30
FINAL ASSEMBLY II EXPLODED VIEW	31
OPTIONALS AND MERCHANDISING	32

FRONT & REAR GEAR-DIFF EXPLODED VIEW



SHOCKS EXPLODED VIEW

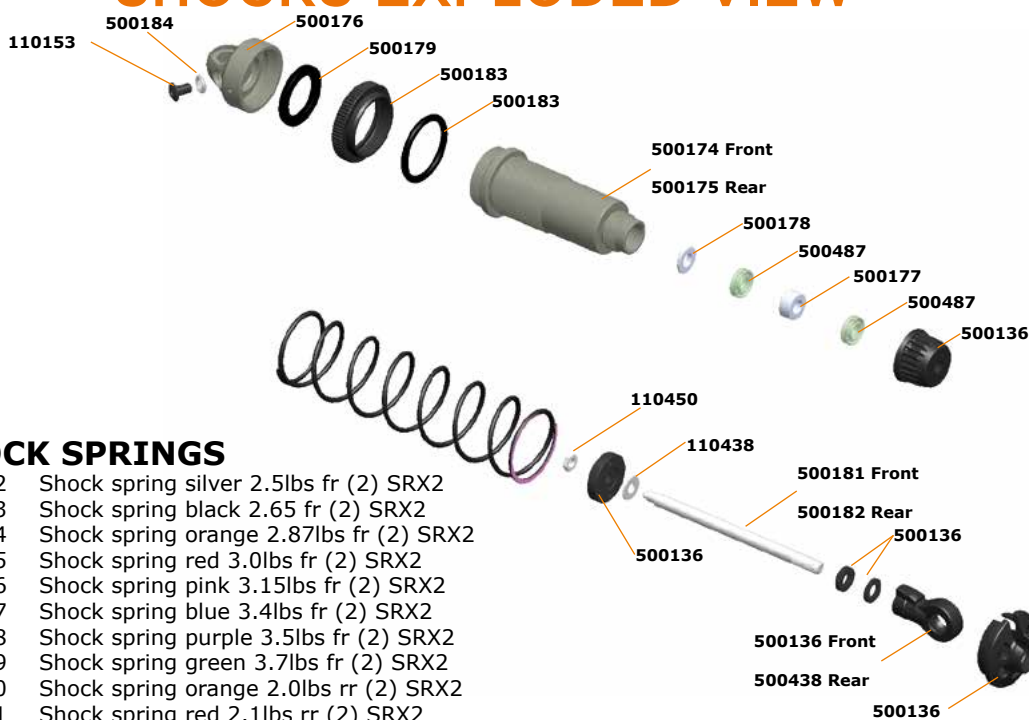

SHOCK SPRINGS


- 500222 Shock spring silver 2.5lbs fr (2) SRX2
- 500223 Shock spring black 2.65 fr (2) SRX2
- 500224 Shock spring orange 2.87lbs fr (2) SRX2
- 500225 Shock spring red 3.0lbs fr (2) SRX2
- 500226 Shock spring pink 3.15lbs fr (2) SRX2
- 500227 Shock spring blue 3.4lbs fr (2) SRX2
- 500228 Shock spring purple 3.5lbs fr (2) SRX2
- 500229 Shock spring green 3.7lbs fr (2) SRX2
- 500230 Shock spring orange 2.0lbs rr (2) SRX2
- 500231 Shock spring red 2.1lbs rr (2) SRX2
- 500232 Shock spring pink 2.2lbs rr (2) SRX3
- 500233 Shock spring blue 2.3lbs rr (2) SRX2
- 500234 Shock spring purple 2.4lbs rr (2) SRX2
- 500235 Shock spring green 2.5lbs rr (2) SRX2
- 500354 Shock spring orange 1,8lbs rr astro (2) SRX2
- 500355 Shock spring red 1,9lbs rr astro (2) SRX2
- 500356 Shock spring pink 2,0lbs rr astro (2) SRX2
- 500357 Shock spring blue 2,1lbs rr astro (2) SRX2
- 500358 Shock spring purple 2,2lbs rr astro (2) SRX2
- 500359 Shock spring green 2,3lbs rr astro (2) SRX2



MID TRANSMISSION EXPLODED VIEW


SPURGEAR

- 500213 Spur gear 70T SRX2
- 500214 Spur gear 72T SRX2
- 500215 Spur gear 76T SRX2
- 500216 Spur gear 78T SRX2
- 500217 Spur gear 80T SRX2
- 500218 Spur gear 82T SRX2
- 500219 Spur gear 84T SRX2
- 500220 Spur gear 86T SRX2
- 500221 Spur gear 88T SRX2

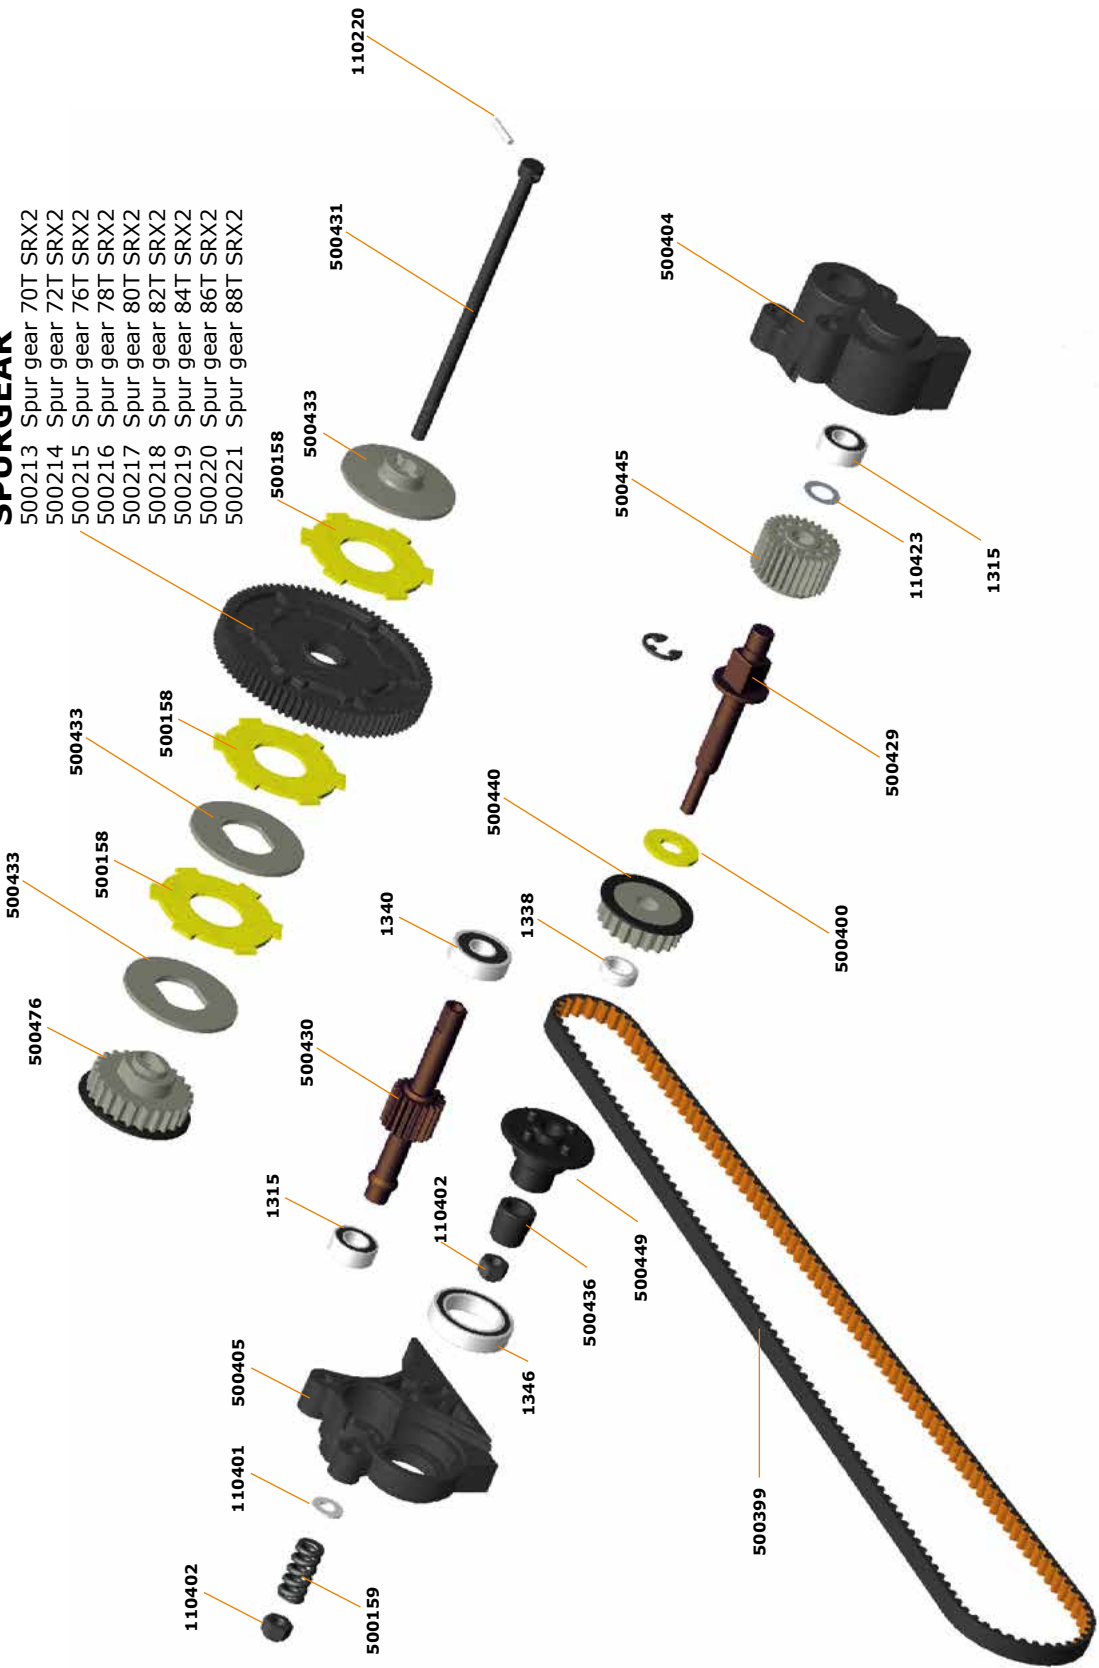




REAR ASSEMBLY EXPLODED VIEW

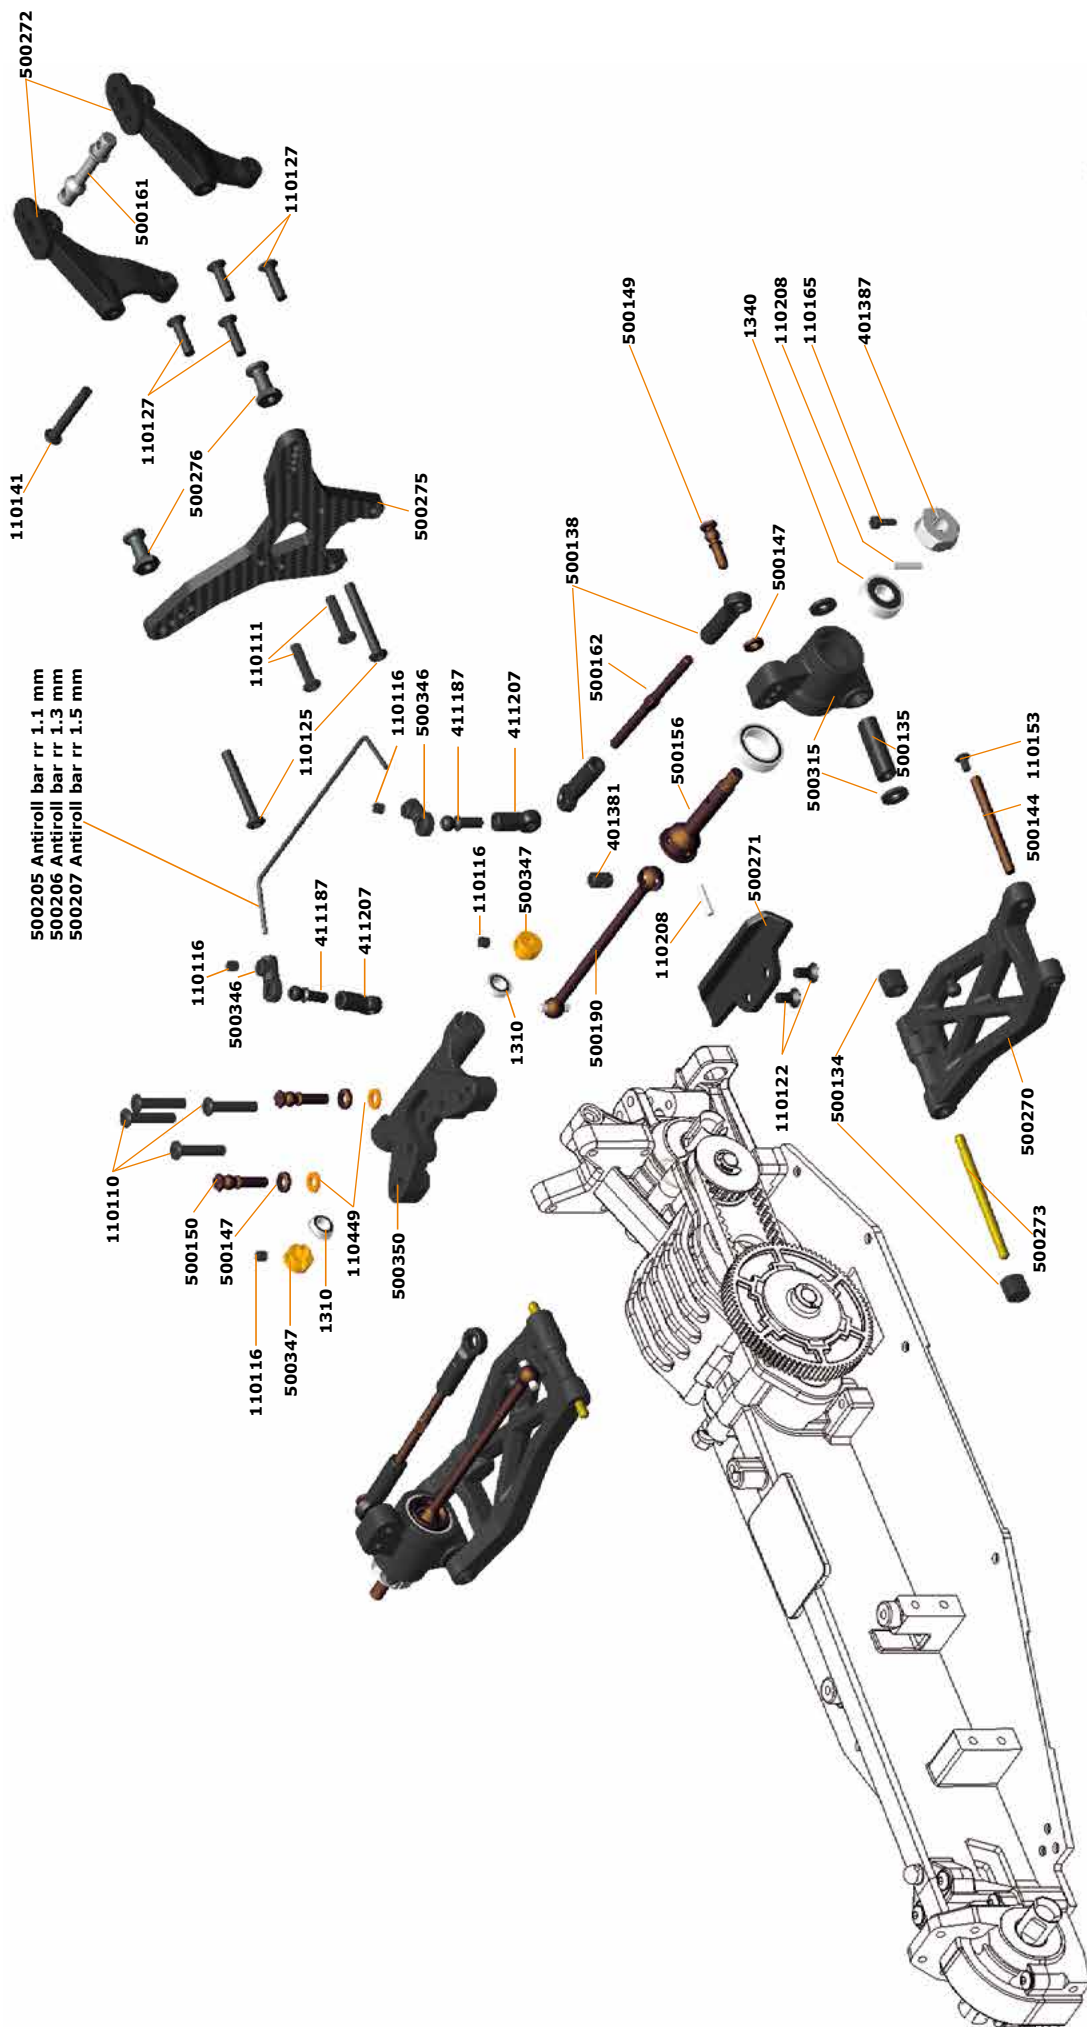




FINAL ASSEMBLY I EXPLODED VIEW

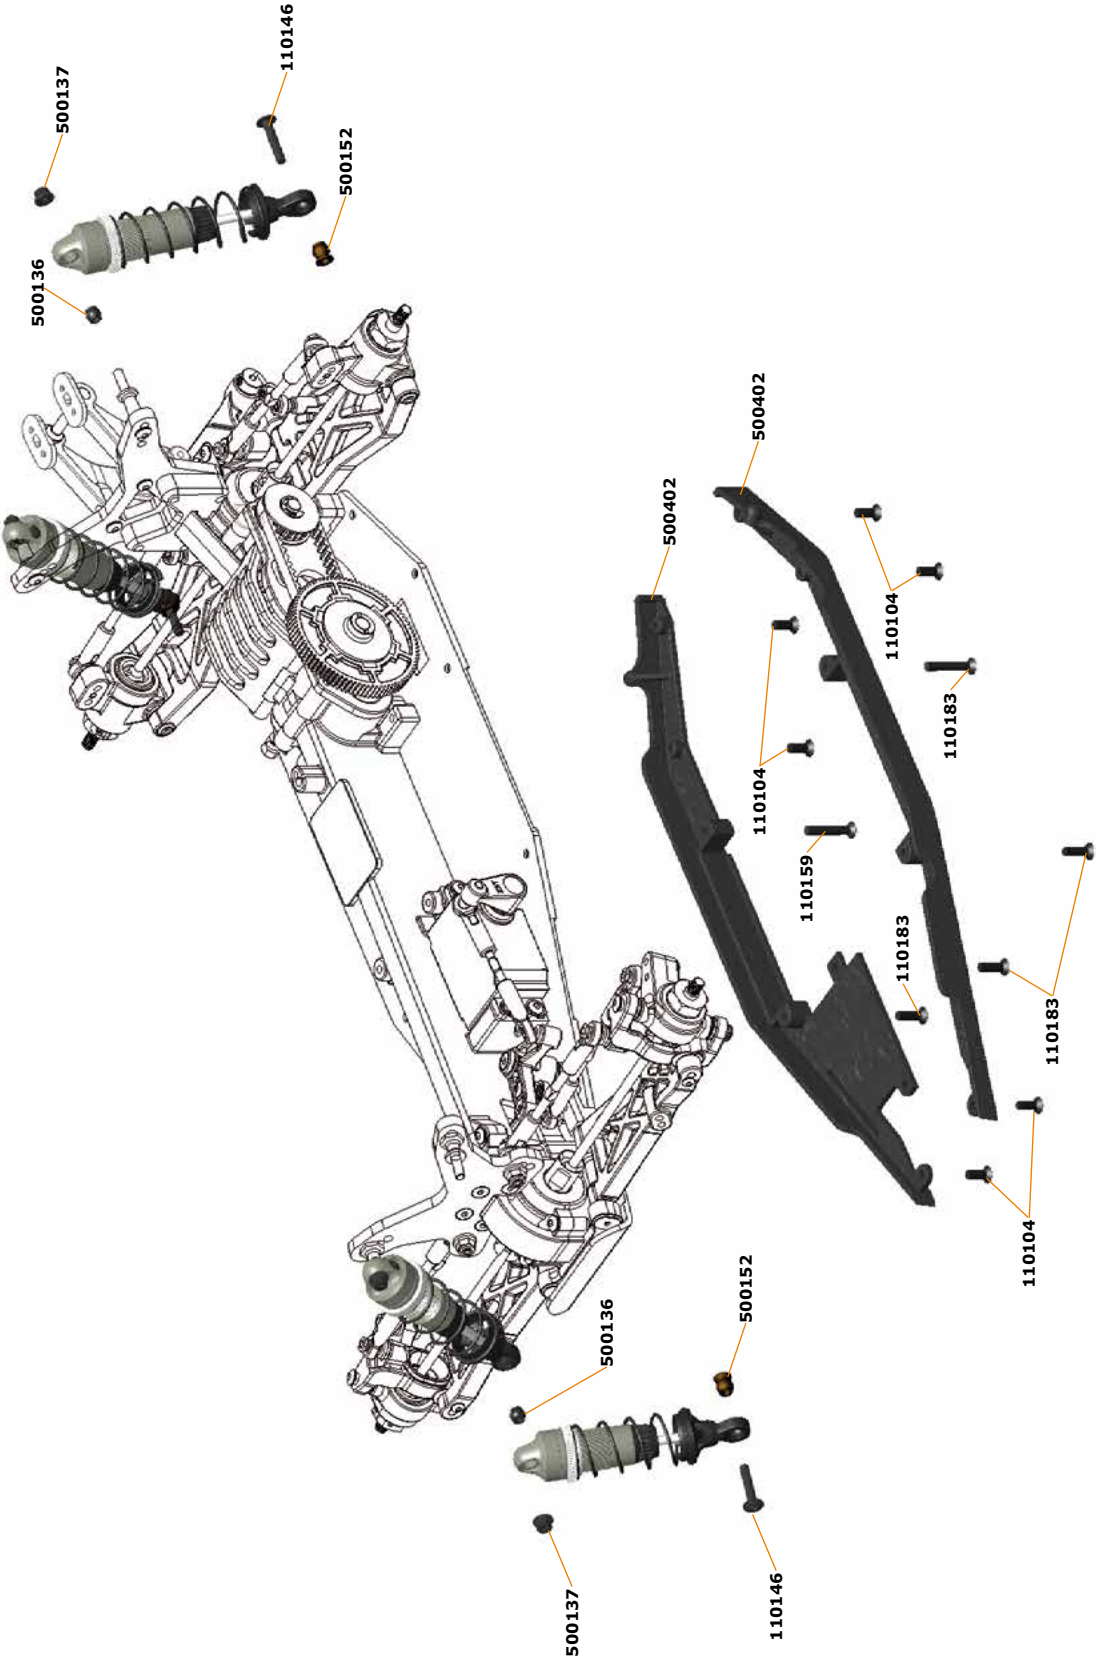

FINAL ASSEMBLY II EXPLODED VIEW

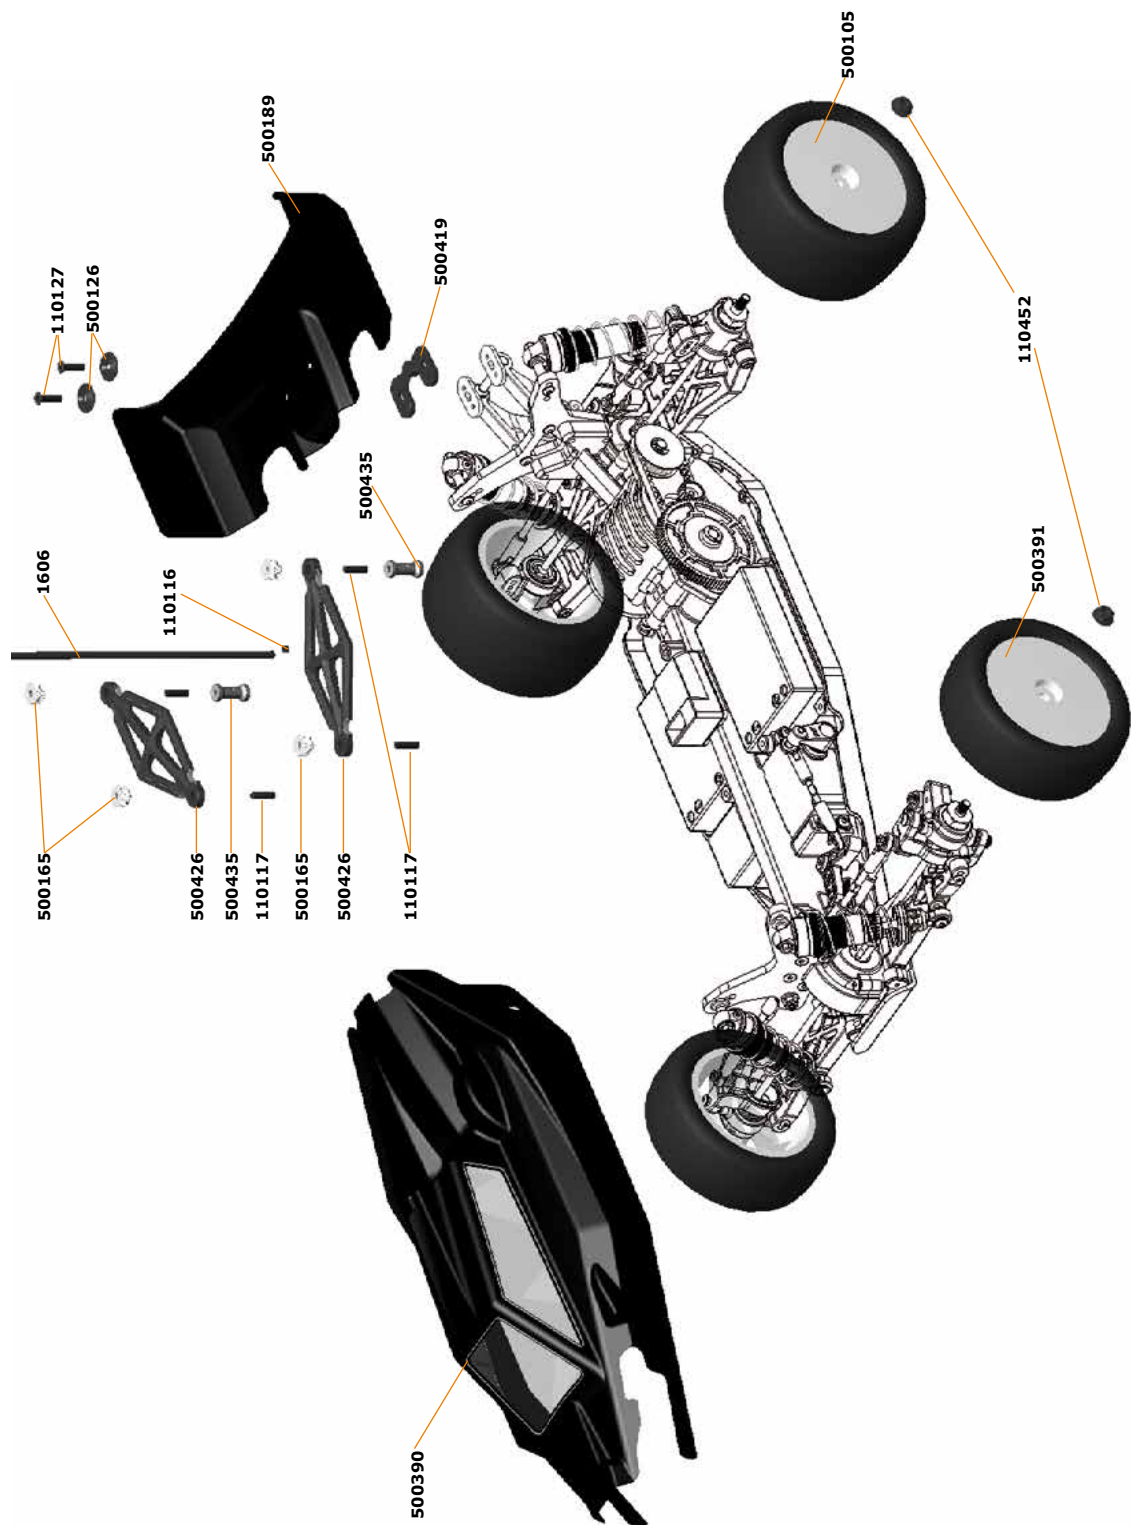

OPTIONALS AND MERCHANDISING

Part no Description

500010 Serpent Spyder Buggy SRX-4 4wd 1/10

DECALS

1886 Decal Serpent black/white 1/10 (2)

1888 Decal Serpent chrome 1/10 (2)

500389 Decal sheet SRX4 black/white (2)

RADIO INSTALLATION / BATTERY

1606 Antenna rod black (2)

500463 Battery plate carbon (2) SRX4

SERVO SAVER AND STEERING

500462 Bellcrank alu L+R SRX4

500464 Bellcrank post alu (2) SRX4

SHOCK ABSORBERS

500180 Shock membrane (4) SRX2

500199 Shock top bushing delrin (4) SRX2

500201 Shock shaft fr TiN coated (2) SRX2

500202 Shock shaft rr TiN coated (2) SRX2

500238 Shock piston conical 2 holes (4) SRX2

500239 Shock piston conical 3 holes (4) SRX2

500240 Shock piston conical 4 holes (4) SRX2

500450 Shock bottom cap alu (4) SRX

500488 Shock piston square machined 2-hole 1.3 (4)

500489 Shock piston square machined 3-hole 1.2 (4)

500490 Shock piston square machined 4-hole 1.1 (4)

SPRINGS

500222 Shock spring silver 2,5lbs fr (2) SRX2

500223 Shock spring black 2,65 fr (2) SRX2

500224 Shock spring orange 2,87lbs fr (2) SRX2

500225 Shock spring red 3,0lbs fr (2) SRX2

500226 Shock spring pink 3,15lbs fr (2) SRX2

500227 Shock spring blue 3,4lbs fr (2) SRX2

500228 Shock spring purple 3,5lbs fr (2) SRX2

500229 Shock spring green 3,7lbs fr (2) SRX2

500230 Shock spring orange 2,0lbs rr (2) SRX2

500231 Shock spring red 2,1lbs rr (2) SRX2

500232 Shock spring pink 2,2lbs rr (2) SRX3

500233 Shock spring blue 2,3lbs rr (2) SRX2

500234 Shock spring purple 2,4lbs rr (2) SRX2

500235 Shock spring green 2,5lbs rr (2) SRX2

500354 Shock spring orange 1,8lbs rr astro (2) SRX2

500355 Shock spring red 1,9lbs rr astro (2) SRX2

500356 Shock spring pink 2,0lbs rr astro (2) SRX2

500357 Shock spring blue 2,1lbs rr astro (2) SRX2

500358 Shock spring purple 2,2lbs rr astro (2) SRX2

500359 Shock spring green 2,3lbs rr astro (2) SRX2

FRONT SECTION

500261 Pivot pin rr inner TiN coated (2) SRX2 RM

500211 Wheelhexagon +0.75mm offset (2)

500392 1/10 buggy rim fr 4wd yellow (2)

500397 1/10 buggy rim fr 4wd 61mm white (2)

500398 1/10 buggy rim fr 4wd 61mm yellow (2)

500455 Antiroll bar fr 1.2 SRX4

500456 Antiroll bar fr 1.3 SRX4

500457 Antiroll bar fr 1.4 SRX4

500458 Antiroll bar mount fr SRX4

500470 Antirollbar adaptor / balljoint fr (2+2) SRX4

500473 Wheelhexagon fr EOS (2) SRX4

500474 Wheelaxle fr EOS (2) SRX4

MIDDLE SECTION

500461 Chassis alu SRX4

500463 Battery plate carbon (2) SRX4

REAR SECTION

500106 1/10 buggy rim rr yellow (2)

500205 Antiroll bar rr 1.1 SRX2

500206 Antiroll bar rr 1.3 SRX2

500207 Antiroll bar rr 1.5 SRX2

500251 Rear wing 6.0" SRX2

500252 Rear wing 7.0" SRX2

500255 Suspension insert rr 3deg alu (2) SRX2

500258 Antirollbar balljoints (2+2) SRX2

500262 Pivot pin fr inner / rr outer TiN coated (2) SRX2

500281 Antiroll bar set rr SRX2 MM

500286 Bumper rear brass SRX2 MM

500350 Antirollbar mount RR SRX2 MM

500375 Rear wing 7" (2) SRX

500393 1/10 buggy rim rr 61mm white (2)

500394 1/10 buggy rim rr 61mm yellow (2)

500475 Antiroll bar rr 1.7 SRX

TRANSMISION

411069 Differential balls steel 1/8" (12)

411107 Diff balls. 1/8 ceramic (12)

500167 Diff pully balldiff 51T (1) SRX2

500168 Diff ring balldiff (2) SRX2

500169 Balldiff outdrive male SRX2

500170 Balldiff outdrive female SRX2

500171 Balldiff spring (2) SRX2

500172 Balldiff bolt (2) SRX2

500173 Balldiff thrustbearing SRX2

500186 Balldiff set SRX2

500187 Balldiff T-nut (2) SRX2

500242 Slipper plates vented alu (3) SRX2

500254 Geardiff housing 51T SRX2

500256 Thrustbearing carbide balldiff SRX2

500259 Differential balls carbide 1/8" (12)

500376 Slide drive set SRX

500378 Slide drive driveshaft SRX (2)

500380 Balldiff outdrive slide drive male

500381 Balldiff outdrive slide drive female

500382 Diff sliders (2)

500388 Geardiff outdrive slide drive (2)

500432 Slipper spacer SRX4

500441 Slipper shaft pulley 20T SRX4

500442 Top shaft pulley 20T SRX4

500447 Slipper shaft pulley 24T SRX4

500452 Clicker spring soft SRX4

500453 Clicker spring medium SRX4

500454 Clicker spring hard SRX5

500459 Oneway pulley 34T fr SRX4

500460 Balldiff pulley 34T fr SRX4

500465 Overdrive 34T gear mid SRX4

500466 Overdrive Slippershaft 21T SRX4

500467 Full time 4wd 20T slipper shaft SRX4

500468 Front oneway axle SRX4

500469 Front oneway outdrives (2) SRX4

500470 Antirollbar adaptor / balljoint fr (2+2) SRX4

500471 Full time 4wd 20T slipper pulley SRX4

500472 Front oneway axle set SRX4

500477 Solid slipper plate inner SRX4

500478 Belt side 45S3M174 SRX4

500479 Gear mid 30T SRX4

500480 Clicker SRX4

500482 Slipper trust bearing SRX4

500483 Slipper set SRX4

600116 O-ring tank (4)

BODY AND WING

500251 Rear wing 6.0" SRX2

500252 Rear wing 7.0" SRX2

500375 Rear wing 7" (2) SRX

SPURGEAR

500213	Spur gear 70T SRX2
500214	Spur gear 72T SRX2
500215	Spur gear 76T SRX2
500216	Spur gear 78T SRX2
500217	Spur gear 80T SRX2
500218	Spur gear 82T SRX2
500219	Spur gear 84T SRX2
500220	Spur gear 86T SRX2
500221	Spur gear 88T SRX2

PINIONS

120156	Motor-pinion alu hard	48P / 18T
120157	Motor-pinion alu hard	48P / 19T
120158	Motor-pinion alu hard	48P / 20T
120159	Motor-pinion alu hard	48P / 21T
120160	Motor-pinion alu hard	48P / 22T
120161	Motor-pinion alu hard	48P / 23T
120162	Motor-pinion alu hard	48P / 24T
120163	Motor-pinion alu hard	48P / 25T
120164	Motor-pinion alu hard	48P / 26T
120165	Motor-pinion alu hard	48P / 27T
120166	Motor-pinion alu hard	48P / 28T
120167	Motor-pinion alu hard	48P / 29T
120168	Motor-pinion alu hard	48P / 30T

TOOLS

190500	Pit-caddy
190501	Tool-bag
190502	Pit-bag medium. 3 drawers
190504	Ballcup tool
190506	Toolset for onroad (17pcs) with tools bag
190507	Toolset for ep (16pcs) with tools bag
190508	Toolset for offroad (20pcs) with tools bag
190509	Allen wrench 1.5 x 120mm
190510	Allen wrench 2.0 x 120mm
190511	Allen wrench 2.5 x 120mm
190512	Allen wrench 3.0 x 120mm
190513	Ball driver hex wrench 2.0 x 120mm
190514	Ball driver hex wrench 2.5 x 120mm
190515	Ball driver hex wrench 3.0 x 120mm
190516	Tool tip allen wrench 1.5 x 120mm
190517	Tool tip allen wrench 2.0 x 120mm
190518	Tool tip allen wrench 2.5 x 120mm
190519	Tool tip allen wrench 3.0 x 120mm
190520	Tool tip ball driver hex wrench 2.0 x 120mm
190521	Tool tip ball driver hex wrench 2.5 x 120mm
190522	Tool tip ball driver hex wrench 3.0 x 120mm
190523	Turnbuckle wrench 3mm
190524	Turnbuckle wrench 4mm
190525	Turnbuckle wrench 5mm
190526	Flat head screwdriver 3.0 x 150mm
190527	Flat head screwdriver 4.0 x 150mm
190528	Phillips screwdriver 2.0 x 45mm
190529	Phillips screwdriver 3.5 x 120mm
190530	Phillips screwdriver 5.8 x 120mm
190539	Nut driver 4.5 x 100mm
190531	Nut driver 5.0 x 100mm
190532	Nut driver 5.5 x 100mm
190533	Nut driver 7.0 x 100mm
190534	Reamer with end cap for lexan body

MERCHANDISING

1896	Cap serpent black-orange
190172	Winter jacket Serpent black-orange hooded (M)
190173	Winter jacket Serpent black-orange hooded (L)
190174	Winter jacket Serpent black-orange hooded (XL)
190175	Winter jacket Serpent black-orange hooded (2XL)
190176	Winter jacket Serpent black-orange hooded (3XL)
190208	Winter jacket Serpent black-orange hooded (4XL)
190156	Polo shirt Serpent black (S)

190157	Polo shirt Serpent black (M)
190158	Polo shirt Serpent black (L)
190159	Polo shirt Serpent black (XL)
190160	Polo shirt Serpent black (XXL)
190161	Polo shirt Serpent black (XXXL)
190182	T-shirt Serpent Splash white (S)
190183	T-shirt Serpent Splash white (M)
190184	T-shirt Serpent Splash white (L)
190185	T-shirt Serpent Splash white (XL)
190186	T-shirt Serpent Splash white (XXL)
190187	T-shirt Serpent Splash white (XXXL)
190188	T-shirt Serpent Splash orange (S)
190189	T-shirt Serpent Splash orange (M)
190190	T-shirt Serpent Splash orange (L)
190191	T-shirt Serpent Splash orange (XL)
190192	T-shirt Serpent Splash orange (XXL)
190193	T-shirt Serpent Splash orange (XXXL)
190194	T-shirt Serpent Splash black (S)
190195	T-shirt Serpent Splash black (M)
190196	T-shirt Serpent Splash black (L)
190197	T-shirt Serpent Splash black (XL)
190198	T-shirt Serpent Splash black (XXL)
190199	T-shirt Serpent Splash black (XXXL)
190201	Hoody sweater Serpent black-zip (S)
190202	Hoody sweater Serpent black-zip (M)
190203	Hoody sweater Serpent black-zip (L)
190204	Hoody sweater Serpent black-zip (XL)
190205	Hoody sweater Serpent black-zip (2XL)
190206	Hoody sweater Serpent black-zip (3XL)
190207	Hoody sweater Serpent black-zip (4XL)

SPYDER SRX4



www.serpent.com - info@serpent.com



#80780 Manual / ref guide SRX4 V1